

Illustrated Parts List

**Model 6140
Grinder/Mixer**



Art's Way Manufacturing

611640

Issued March 2024



This symbol means ATTENTION! BECOME ALERT! YOUR SAFETY IS INVOLVED. The message that follows the symbol contains important information about your safety. Carefully read the message. Make sure you fully understand the causes of possible injury or death.

IF THIS MACHINE IS USED BY AN EMPLOYEE, IS LOANED, OR IS RENTED, MAKE SURE THAT THE OPERATOR UNDERSTANDS THE TWO INSTRUCTIONS BELOW.

BEFORE THE OPERATOR STARTS THE ENGINE:

GIVE INSTRUCTIONS TO THE OPERATOR ON SAFE AND CORRECT USE OF THE MACHINE.

MAKE SURE THE OPERATOR READS AND UNDERSTANDS THE OPERATOR'S MANUAL FOR THIS MACHINE.

** WARNING**

IMPROPER OPERATION OF THIS MACHINE CAN CAUSE INJURY OR DEATH.

BEFORE STARTING THE ENGINE, DO THE FOLLOWING:

1. READ THE OPERATOR'S MANUAL.
2. READ ALL SAFETY DECALS ON THE MACHINE.
3. CLEAR THE AREA OF OTHER PERSONS.
4. LEARN AND PRACTICE SAFE USE OF MACHINE CONTROLS IN A SAFE AND CLEAR AREA BEFORE YOU OPERATE THIS MACHINE ON A JOB SITE.

It is your responsibility to observe pertinent laws and regulations and to follow manufacturer's instructions on machine operation and maintenance.

See your Authorized Art's Way Manufacturing dealer or Art's Way Manufacturing for additional operator's manuals, illustrated parts catalogs, and service manuals.

TO THE OWNER

Congratulations on the purchase of your new Art's Way Grinder/Mixer. You have selected a top quality machine that is designed and built with pride to ensure you have many years of efficient and reliable service.

Many people have worked on the design, production, and delivery of this Grinder/Mixer. The information in this manual is based on the knowledge, study, and experience through years of specializing in the manufacturing of farm machinery. This manual is designed to provide you with important information regarding safety, maintenance, and machine operation so you can and will get the best possible performance from your Grinder/Mixer.

Even if you are an experienced operator of this or similar equipment, we ask that you read this manual before operating this Grinder/Mixer. The way you operate, adjust, and maintain this unit will have much to do with its successful performance. Any further questions you may have about this product of Art's Way equipment should be directed to your local Art's Way dealer or to Art's Way Manufacturing, Armstrong, Iowa, 50514, (712) 208-8467.

SPECIFICATIONS AND DESIGN ARE SUBJECT TO CHANGE WITHOUT NOTICE

Art's Way Manufacturing is continually making product improvements. In doing so, we reserve the right to make changes and/or add improvements to our products without obligation for the equipment previously sold.

Modifications to this Grinder/Mixer may affect the performance, function, and safety of its operation. Therefore, no modifications are to be made without the written permission of Art's Way Manufacturing. Any modification made without the written permission of Art's Way Manufacturing shall void the warranty of this product.

In the interest of continued safe operation of this Grinder/Mixer, pay particular attention to the safety alert symbol(s) throughout this manual.

Art's Way Manufacturing STATEMENT OF PRODUCT LIABILITY

Art's Way Manufacturing recognizes its responsibility to provide customers with a safe and efficient product. Art's Way Manufacturing, attempts to design and manufacture its products in accordance with all accepted engineering practices effective at the date of design. This statement should not be interpreted to mean that our products will protect against the user's own carelessness or failure to follow common safety practices nor will Art's Way Manufacturing, be liable for any such act. In addition, Art's Way Manufacturing, assumes no liability for any altered product or any modified product by users or anyone other than an authorized dealer.

IMPORTANT WARRANTY INFORMATION

The warranty for this Grinder/Mixer appears on page 6 of this manual. In order to establish proper warranty registration, the Warranty Registration must be completed and returned to the factory. Failure to comply with this requirement will result in invalidating the warranty!

LIMITATIONS OF THIS MANUAL

This manual contains operating instructions for your 6140 Grinder/Mixer only. Any mention of other machinery in this manual other than the 6140 Grinder/Mixer is for reference only. This manual does not replace nor is it to be used for any machinery that may be attached to or used in conjunction with the 6140 Grinder/Mixer.

PARTS & SERVICE

As the purchaser of your new grindermixer, it is very important to consider the following factors:


A. Original Quality

B. Availability of Service Parts

C. Availability of Adequate Service Facilities

Art's Way Manufacturing has an excellent dealership network ready to answer any questions you may have about your grindermixer. Parts for your machine may be ordered through our dealers. When placing a parts order, please have the **model** and **serial number** ready. This will allow the dealer to fill your order as quickly as possible.

For your convenience, we have provided this space for you to record your model number, serial number, and the date of purchase, as well as your dealer's name and address.

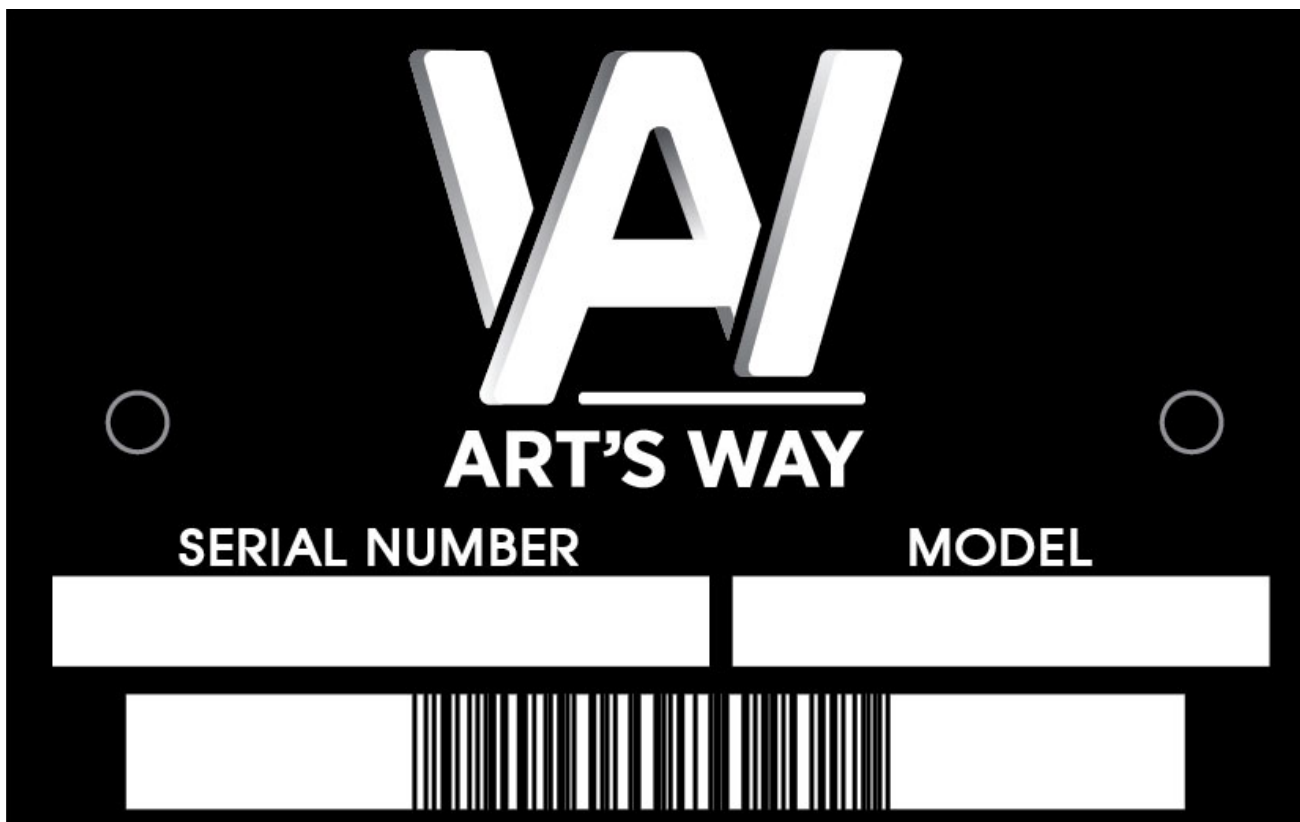

VAI

ART'S WAY

SERIAL NUMBER

MODEL

Barcode area

TABLE OF CONTENTS

TO THE OWNER	1
SPECIFICATIONS AND DESIGN ARE SUBJECT TO CHANGE WITHOUT NOTICE	1
Art's Way Manufacturing STATEMENT OF PRODUCT LIABILITY	1
IMPORTANT WARRANTY INFORMATION	1
LIMITATIONS OF THIS MANUAL	1
PARTS & SERVICE	2
TABLE OF CONTENTS	3-5
LIMITED WARRANTY	6
SAFETY FIRST	7
NOTICES OF DANGER, WARNING, AND CAUTION	7
Safety Instructions	8
GENERAL	8
BEFORE OPERATING	9
DURING OPERATION	9
MAINTENANCE SAFETY	9
HYDRAULIC SAFETY	10
TRANSPORTATION SAFETY	10
STORAGE SAFETY	10
TIRE SAFETY	11
ASSEMBLY SAFETY	11

TABLE OF CONTENTS	
NAME	PAGE
IMPLEMENT DRIVELINE ASSEMBLY, 540 RPM (STAR CENTER)	14
IMPLEMENT DRIVELINE ASSEMBLY, 540 RPM (SQUARE CENTER)	16
JACK ASSEMBLY	18
SPINDLE, HITCH, & HUB ASSEMBLY	20
TANK ASSEMBLY	22
MIXING AUGER ASSEMBLY	24
GEARBOX ASSEMBLY, MIXER (PRIOR TO 2017)	26
GEARBOX ASSEMBLY, MIXER (2017-CURRENT)	28
SUPPLEMENT HOPPER ASSEMBLY	30
HAMMERMILL ASSEMBLY, 20"	32
HAMMERMILL ROTOR ASSEMBLY, 20"	34
HAMMERMILL DOOR	35
JACKSHAFT ASSEMBLY, 540	36
JACKSHAFT ASSEMBLY, 1000	38
DRIVE & GEARBOX ASSEMBLY, LOWER	40
THROAT & AUGER ASSEMBLY, 20"	42
FRONT DOORS ASSEMBLY	44
ROLL FEEDER ASSEMBLY, 20" HYDRAULIC (WITHOUT AUGER FEEDER)	46
ROLL FEEDER, 20" HYDRAULIC (WITH AUGER FEEDER)	48
AUGER FEEDER ROLLERMILL ASSEMBLY	50
AUGER FEEDER ROLLERMILL ASSEMBLY (CONTINUED)	52
AUGER FEEDER SUPPORT ASSEMBLY	54
HYDRAULIC TANK ASSEMBLY	56
AUGER FEEDER & SWING HYDRAULIC MOTOR KITS	58
DISCHARGE HYDRAULIC MOTOR KIT - 576240	58
AUGER FEEDER & ROLL FEED FLOW CONTROL VALVE ASSEMBLY - 585130	59
HOPPER & DRIVE ASSEMBLY, MECHANICAL DISCHARGE	60
HOPPER & DRIVE ASSEMBLY, DISCHARGE, LOWER	62
HOPPER & DRIVE ASSEMBLY, DISCHARGE, UPPER	64
HOPPER & DRIVE ASSEMBLY, EXTENSION, 3FT (OPTIONAL)	66
HOPPER & DRIVE ASSEMBLY, EXTENSION, 6FT (OPTIONAL)	68
HOPPER & DRIVE ASSEMBLY, EXTENSION, FOLDABLE (OPTIONAL)	70
HOPPER & DRIVE ASSEMBLY, HOOD ASSEMBLY	72
AIR SYSTEM ASSEMBLY	74
SCALE ARM ASSEMBLY	76
CONTROL BOX & WIRE HARNESS ASSEMBLY	78
TRACTOR HYDRAULIC VALVES ASSEMBLY	80
HYDRAULIC MANIFOLD ASSEMBLY	82
SELF-CONTAINED HYDRAULIC SCHEMATIC	84
TRACTOR HYDRAULIC SCHEMATIC	86

FOR WARRANTY INFORMATION
REFER TO THE SEPARATE DOCUMENT
INCLUDED WITH THIS MANUAL OR GET
IT ONLINE FROM:

WWW.ARTSWAY.COM

SAFETY FIRST

SAFETY INSTRUCTIONS

"A careful operator is the best insurance against an accident." Quote from the National Safety Council.

Most accidents can be prevented if the operator:

1. Fully understands how the machine functions.
2. Can anticipate situations which may produce problems.
3. Can make necessary corrections before problems develop.

**THIS SYMBOL MEANS ATTENTION!
BECOME ALERT!
YOUR SAFETY IS INVOLVED!**



- Universal Safety Alert Symbol

The American Society of Agricultural Engineers has adopted the Universal Safety Alert Symbol as a way to identify areas of potential danger if the equipment is not operated correctly. Please be alert whenever you see this symbol in the manuals or on your grinder/mixer.

Art's Way Manufacturing strives to make our equipment as safe as possible. The Art's Way 6140 Grinder/Mixer conforms to applicable safety standards at the time of manufacturing. A safety conscious equipment operator makes an effective accident-prevention program complete.

Safety features and instructions for the grinder/mixer are detailed in the Safety Guidelines section of this Operator's Manual. It is the responsibility of the owner to ensure that all operators read and understand the manual before they are allowed to operate the grinder/mixer. (Occupational Safety and Health Administration (OSHA) regulations 1928.57).

NOTICES OF DANGER, WARNING, AND CAUTION

Signal Words: Note the use of signal words **DANGER**, **WARNING**, and **CAUTION** on the grinder/mixer and in this manual. The appropriate signal word for each has been selected using the following guidelines:

DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

SAFETY INSTRUCTIONS

Safety instructions (or equivalent) signs indicate specific safety-related instructions or procedures.

Note: Contains additional information important to a procedure and will be found within the regular text body of this manual.

GENERAL

SAFETY INSTRUCTIONS

Most work related accidents are caused by failure to observe basic safety rules or precautions. An accident can often be avoided by recognizing potentially hazardous situations before an accident occurs. As you operate and maintain the grinder/mixer you must be alert to potential hazards. You should also have the necessary training, skills, and tools to perform any assembly procedure.

Improper operation and/or maintenance of this unit could cause a dangerous situation that results in injury or death.

Do not use this unit until you read and understand the information contained in this manual. Do not use this equipment for anything other than its intended purpose.



Safety precautions and warnings are provided in this manual and on the unit. If these hazard warnings are not heeded, bodily injury or death could occur to you or to other persons.

Art's Way Manufacturing cannot anticipate every possible circumstance that might involve a potential hazard. The warnings in this manual and on the product are, therefore, not all-inclusive. If a method of operation not specifically recommended by us is used, you must satisfy yourself that it is safe for you and for others. You should also ensure that the unit will not be damaged or be made unsafe by the methods that you choose.

The information, specifications, and illustrations in this manual are based on the information that was available at the time this material was written and can change at any time.

Safety Alert Symbols



death.

This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or

This manual contains DANGERS, WARNINGS, CAUTIONS, NOTICES, SAFETY INSTRUCTIONS, and NOTES which must be followed to prevent the possibility of improper service, damage to the equipment, personal injury, or death. The following key words call the readers attention to potential hazards.

Hazards are identified by the "Safety Alert Symbol" and followed by a signal word such as "DANGER", "WARNING", or "CAUTION".

**SAFETY
INSTRUCTIONS**

Remember:

"The Best Operator is a Safe Operator"

CAUTION



Read and understand the operator's manual and all the safety decals before operating the grindermixer. Review all safety instructions with all operators annually.

BEFORE OPERATING

SAFETY
INSTRUCTIONS

Do not wear loose fitting clothing as it may catch in moving parts.



Make sure all guards and shields are installed, including the tractor power take-off (PTO) master shield, before starting or operating the grindermixer.



Be sure that the correct implement driveline parts are used and that they are properly secured.

Lower the lifter wheels when the grindermixer is not in use.

Install safety chain when attaching the grindermixer to the tractor.



Clear the area of bystanders, especially children, when making repairs, adjustments, or performing maintenance on the grindermixer.



Do not allow riders.

Put all tractor and machine controls in “neutral” and disengage the PTO before starting. Follow the starting instructions according to the OEM tractor manual.



Operate the grindermixer only while seated on the tractor seat.



Make sure the unit is adequately supported with safety blocks or safety stands when changing tires or performing maintenance.

DURING OPERATION

CAUTION



Entanglement Hazard
Keep hands, feet, hair, and clothing away from moving parts. Wait for all movement to stop before approaching equipment.

Before making adjustments:

1. Shut off the tractor,
2. Set parking brake,
3. Put machine in neutral, and
4. Remove key while making adjustments.



Keep all shields and guards in place and in good working condition.



Keep all bystanders, especially children, away from the grindermixer while in operation.



Do not allow riders while the grindermixer is in operation.



Do not attempt to unclog, clean, or adjust the grindermixer while it is running.



Stay away from overhead power lines. Electrocution can occur even without direct contact.



Keep all hydraulic lines, fittings, and couplers tight and free of leaks. (Refer to Safety Guidelines – Hydraulic Safety).



Use caution when ascending or descending on the grindermixer. Wet shoes or boots are slippery.

MAINTENANCE SAFETY

SAFETY
INSTRUCTIONS

Follow all operating, maintenance, and safety instructions found in this Manual.



Before servicing, adjusting, repairing, or unclogging the machine, always make sure the tractor engine is stopped, key in your pocket, the machine is lowered to the ground, all controls are placed in neutral, the parking brake is set, and all the moving parts have stopped.



Use sufficient tools, jacks, and hoists that have the capacity for the job.



Use support blocks or safety stands when changing tires or performing maintenance.



Follow good shop practices of keeping the service area clean and dry, and use adequate light for the job at hand.



Before applying pressure to the hydraulic system, make sure all lines, fittings, and couplers are tightly secured and in good condition.



Make sure all shields/guards are in place and properly secured when performing maintenance.

HYDRAULIC SAFETY

SAFETY INSTRUCTIONS

Follow all operating, maintenance, and safety instructions found in this Manual.

Make sure components in the hydraulic system are kept clean and in good working condition.



Relieve pressure from the hydraulic system before servicing or disconnecting from the tractor.



Keep all hydraulic lines, fittings, and couplers tightly secured and free of leaks.



Replace any worn, cut, abraded, flattened, or crimped hoses.



Do not make any temporary repairs to the hydraulic lines, fittings, or hoses using tape, clamps, or cement. The hydraulic system operates under extremely high pressure and temporary repairs may fail suddenly and create a hazardous/dangerous situation.



Wear proper hand and eye protection when searching for a high-pressure hydraulic leak. Use a piece of wood or cardboard as a backstop instead of hands to identify and isolate a leak. If injured by a concentrated high-pressure stream of hydraulic fluid, seek medical attention immediately. Serious infection or toxic reaction can develop if hydraulic fluid penetrates the surface of the skin.



Before applying pressure to the system, make sure all components are tight and that the hydraulic lines, hoses, and couplings are not damaged.

TRANSPORTATION SAFETY

SAFETY INSTRUCTIONS

Follow all operating and safety instructions found in this manual when transporting this equipment.

Make sure the grindermixer complies with all local regulations regarding transporting equipment on public roads and highways.



Make sure the Slow Moving Vehicle (SMV) emblem and all lights and reflectors required by local highway and transportation authorities are properly in place, clean, and clearly visible to traffic.



Do not allow riders on any machinery during transport.

Make sure the grindermixer is securely attached to the tractor and install a safety chain to the grindermixer.

Make sure the tractor brake pedals are latched together.

Do not exceed 20 mph (32 km/h) when transporting the grindermixer. Always reduce speed on rough roads and surfaces, or when going down inclines.

Use caution when turning and always use the turn signals on the tractor to indicate your turning intentions to the other traffic.

The weight of the trailed machine should NEVER exceed the weight of the towing vehicle.

Check all clearances carefully whenever the machine is towed.

Set all features to transport position before transporting the grindermixer on the roadway.



Stay away from overhead obstructions and power lines during transport. Electrocutation can occur even without direct contact.

STORAGE SAFETY

SAFETY INSTRUCTIONS

Follow all operating and safety instructions found in this manual when storing this equipment.



Store the grindermixer in an area away from human activity.



Do not permit children to play on or around the stored machine at any time.

Make sure that the grindermixer is stored in an area with a firm and level base to prevent the machine from tipping or sinking into the ground.



Block the wheels to prevent the machine from rolling.

TIRE SAFETY**SAFETY
INSTRUCTIONS**

Follow all operating and safety instructions found in this manual when working around tires.

Have only a qualified tire dealer or tire repair service perform tire repairs.

Do not attempt to install a tire on a wheel or rim unless you have the proper equipment and experience to do the job.

Do not substitute tires with a lesser road rating and/or capacity for the original equipment tires.

⚠ WARNING

Explosive Force Hazard
Tire replacement, repair, and/or maintenance should be done by a qualified tire dealer or qualified repair service.

Failure to follow proper procedures when installing a tire on a wheel or rim can produce an explosive force that will result in serious injury or death.

Do not attempt to install a tire without proper equipment and experience to perform the job.

ASSEMBLY SAFETY**SAFETY
INSTRUCTIONS**

Follow all assembly, operating, and safety instructions found in this manual when assembly this equipment.



Use adequate manpower to perform assembly procedures safely.

Assemble the grindermixer in an area with sufficient space to maneuver the largest components and allow easy access to all sides of the machine.



Use only forklifts, lift cranes, jacks, and tools with sufficient capacity for the loads.




Do not allow spectators, especially children, in the working area.


**THIS PAGE
LEFT
INTENTIONALLY
BLANK**

SECTION 1: GRINDER/MIXER

 
IMPLEMENT DRIVELINE ASSEMBLY, 540 RPM (STAR CENTER)

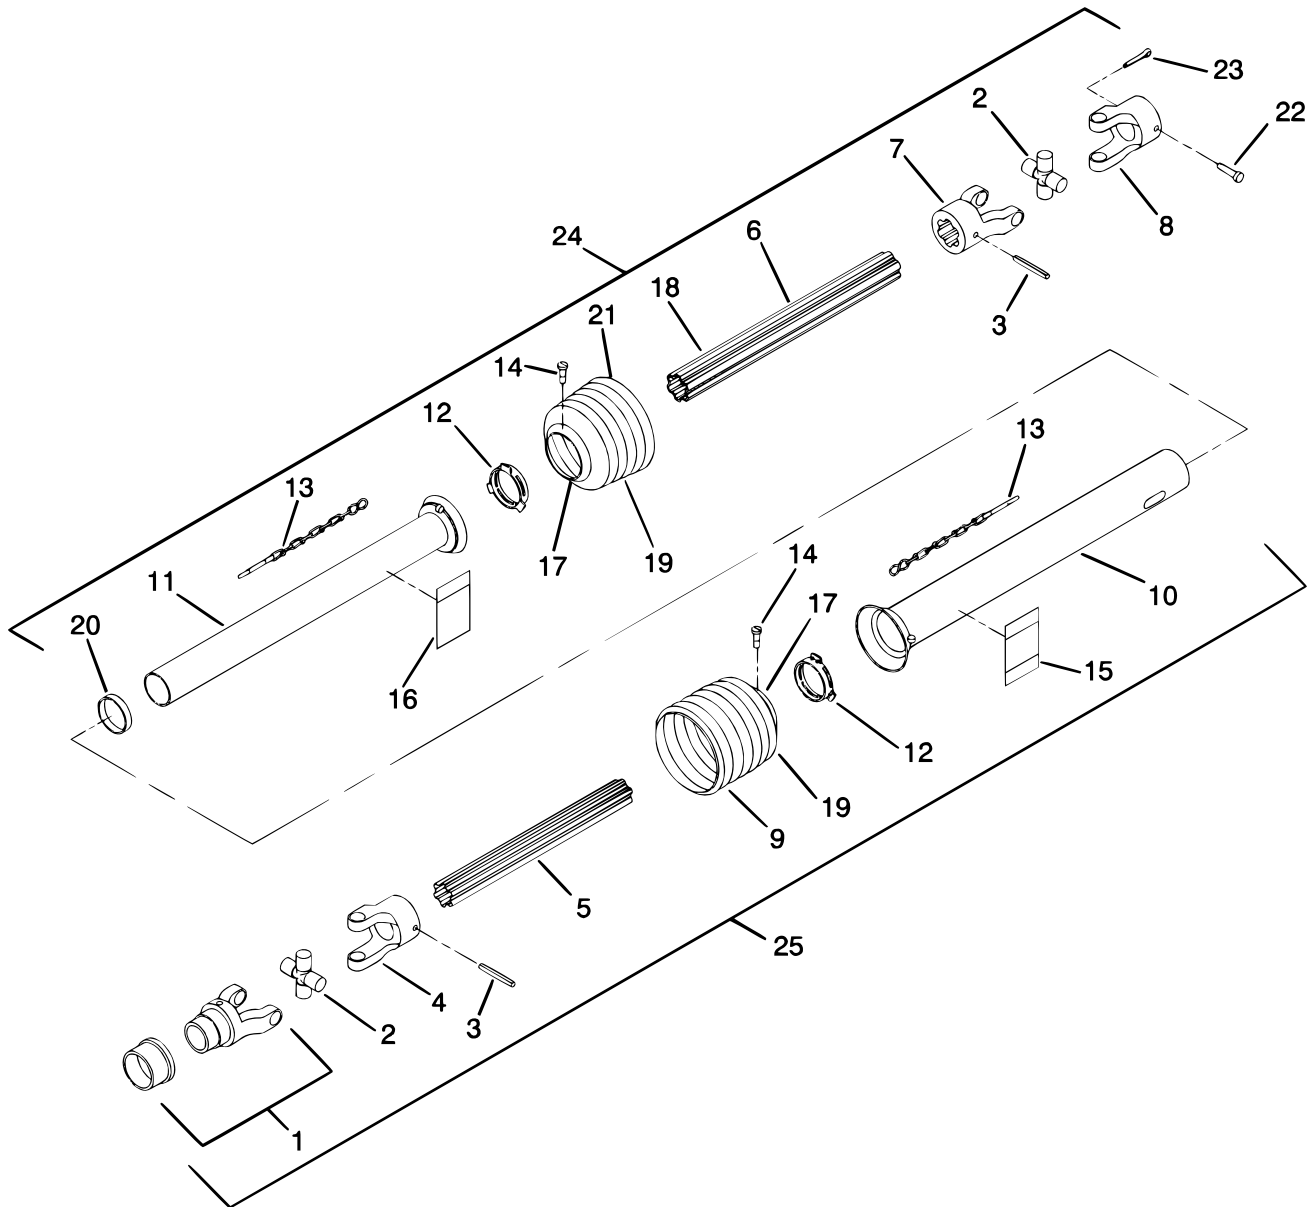

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	340130	YOKE, 1-3/8 – 6 SPL AS	1
2	182230	KIT, CROSS AND BEARING	2
3	196740	PIN, SPRING 10 X 90	2
4	196730	YOKE, INBOARD	1
5	355660	SHAFT, INNER PROFILE	1
6	355670	TUBE, OUTER PROFILE	1
7	196770	YOKE, INBOARD	1
8	349230	YOKE, 1-5/8 R8, 3/8 KEYWAY	1
9	340140	SHIELD, CONE 7 RIB	1
10	355680	TUBE, OUTER SHIELD	1
11	355690	TUBE, INNER SHIELD	1
12	182900	RING, SC 24 BEARING	2
13	182890	CHAIN, SAFETY	2
14	345980	SCREW, SHIELD (PART OF FIG ITEM #9)	2
15	340170	DECAL, DANGER ROTATING DRIVE LINE	1
16	340180	DECAL	1
17	349250	REINFORCED COLLAR	2
18	196890	ZERK, 3/16 DRIVE GREASE (PART OF FIG ITEM #6)	1
19	340120	KIT, SLIDE COLLAR	1
20	340190	SUPPORT BEARING	1
21	387770	SHIELD CONE 5 RIB	1
22	036480	PIN, CLEVIS	1
23	020700	PIN, COTTER	1
24	354650	PTO, IMPLEMENT HALF	1
25	354660	PTO, TRACTOR HALF	1

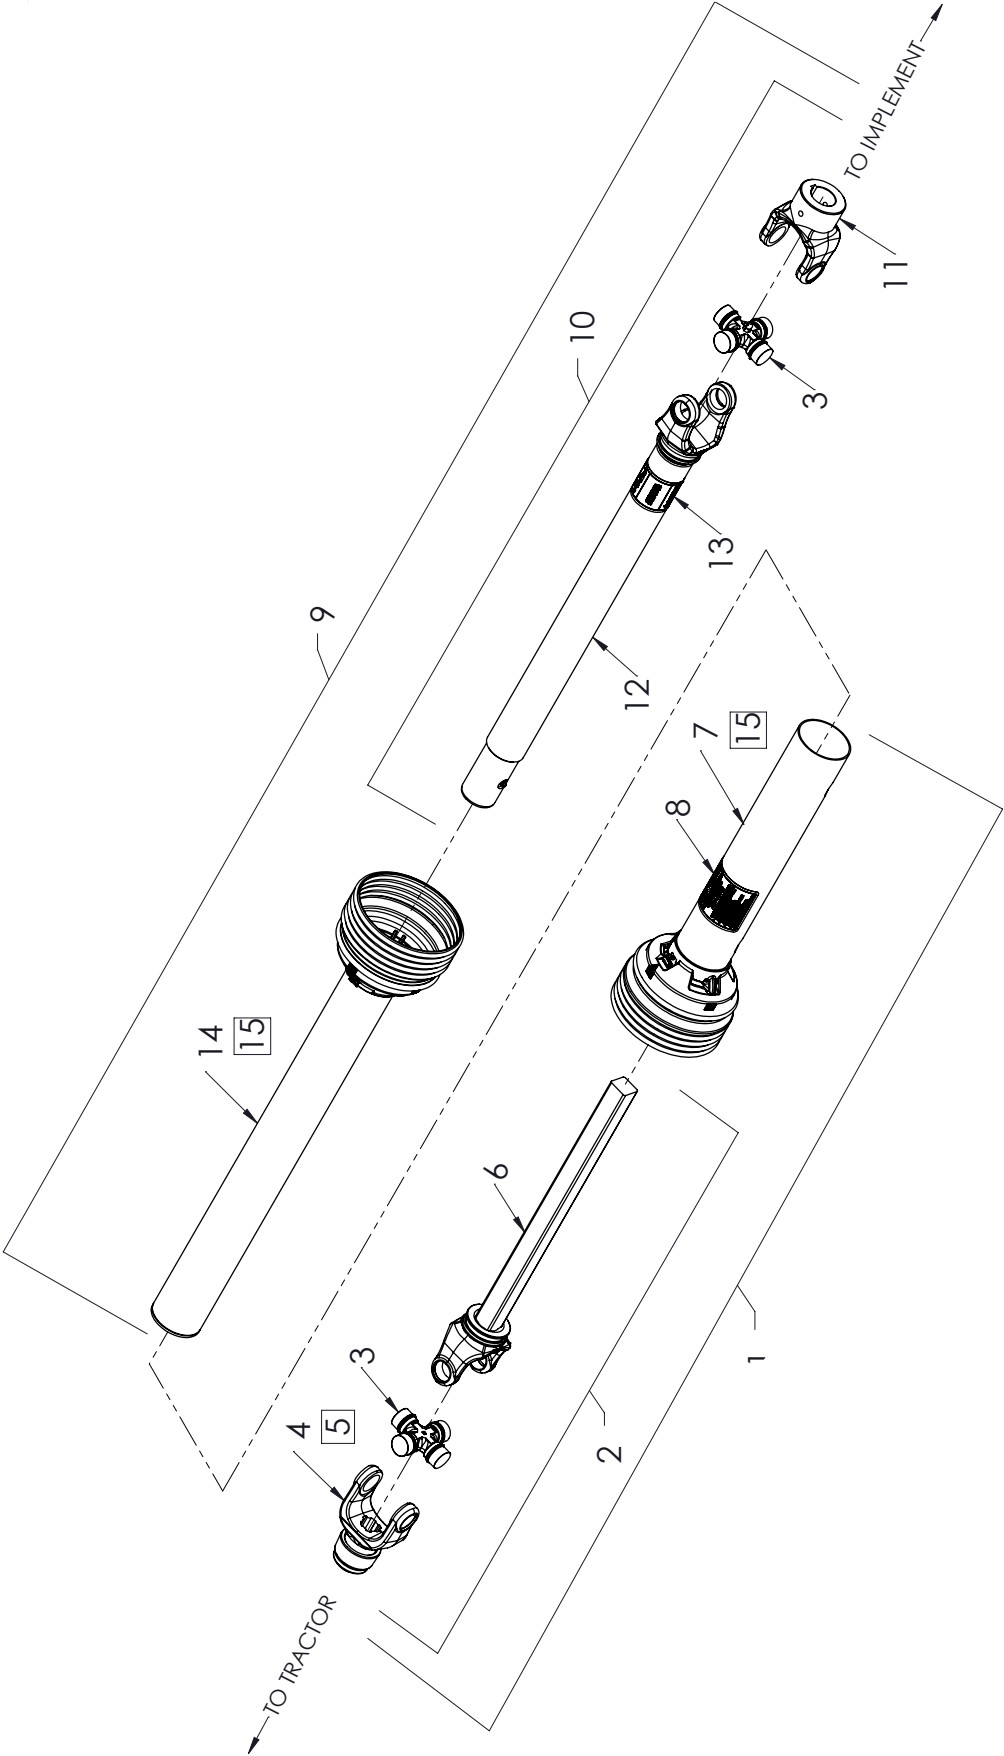 


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	613010	PTO HALF, TRACTOR GUARDED	1
2	613060	PTO HALF, JOINT AND SHAFT	1
3	613030	CROSS KIT, 44R (U-JOINT)	2
4	613040	YOKE, 44, SLIDE LOCK	1
5	613080	REPAIR KIT, SSL/AUTO-LOK	1
6	613090	YOKE & SHAFT, PTO 1.31SQ	1
7	613100	GUARD, OUTER PTO	1
8	613120	DECAL, SAFETY, DANGER	1
9	613020	PTO HALF, IMPLEMENT GUARDED	1
10	613070	PTO HALF, IMPLEMENT JOINT & TUBE	1
11	613050	YOKE, 44, IMPLEMENT	1
12	613150	PTO YOKE, TUBE & SS	1
13	613130	DECAL, SAFETY MISSING GUARD	1
14	613140	GUARD, INNER PTO	1
15	613110	REPAIR KIT	2

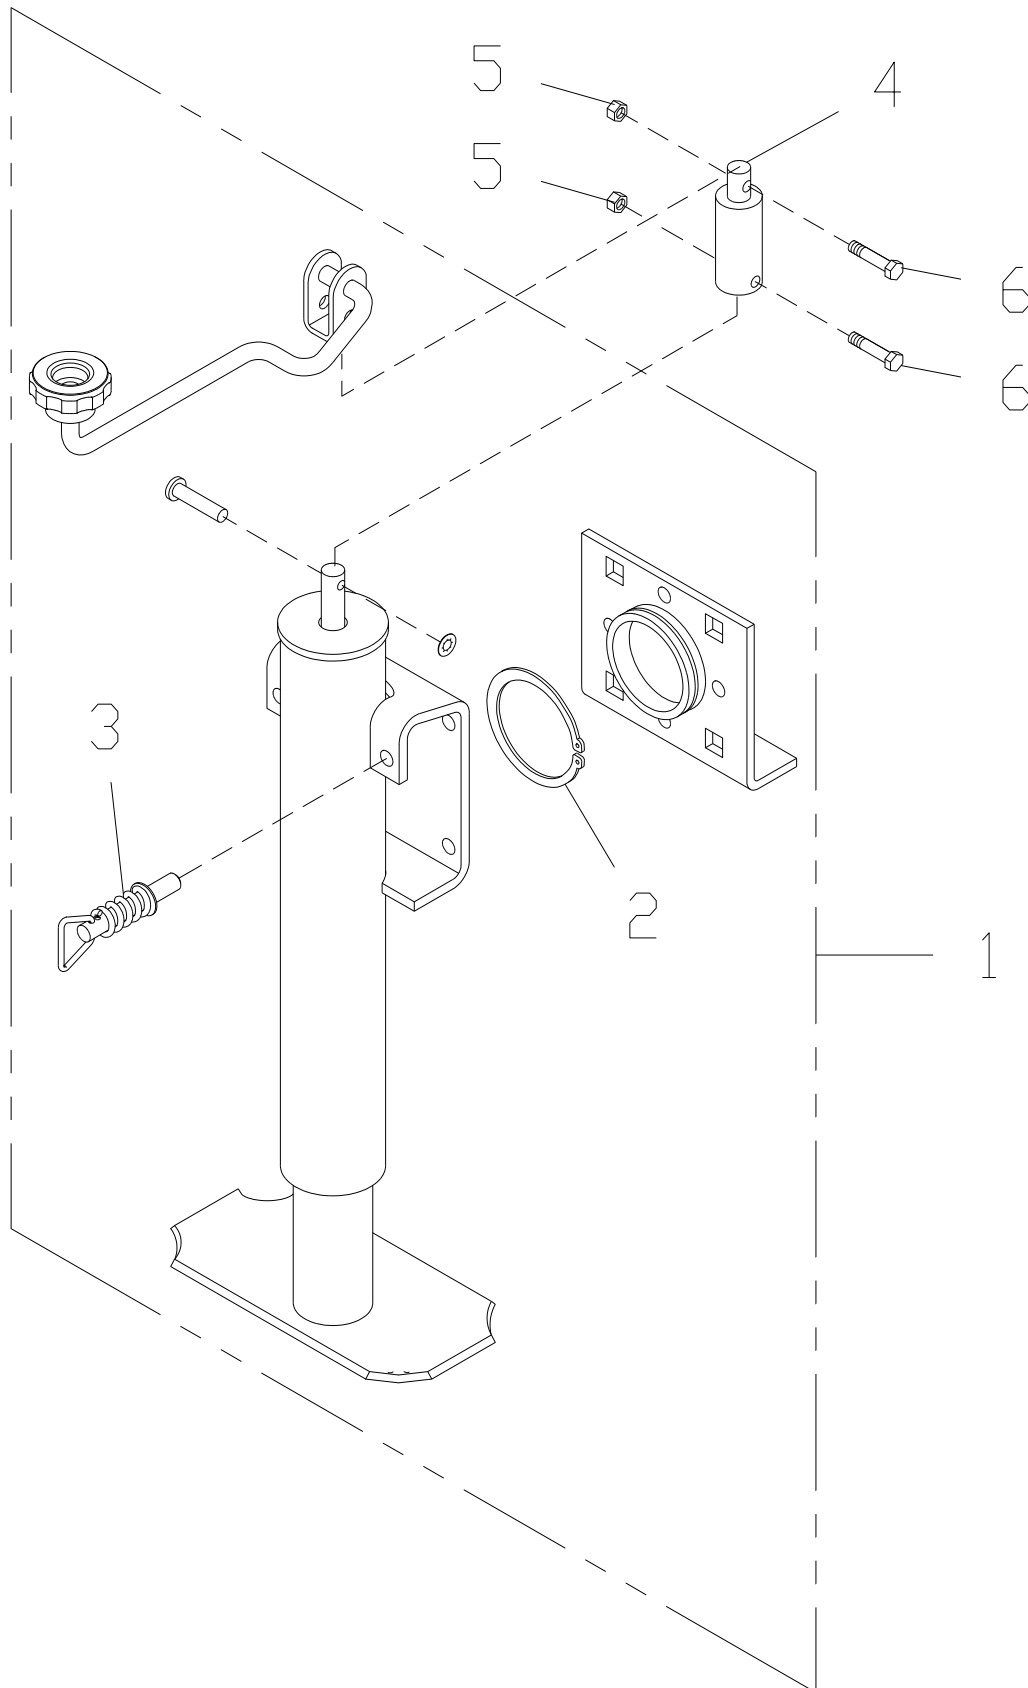 JACK ASSEMBLY


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	040440	JACK ASSY, COMPLETE	1
2	040290	RING, RETAINING, 5100-250	1
3	151650	PLUNGER ASSEMBLY	1
4	389180	SHAFT, CRANK	1
5	042370	NUT, LOCK 1/4-20 HEX	2
6	047000	BOLT, HHCS 1/4-20 X 1-1/2	2

 SPINDLE, HITCH, & HUB ASSEMBLY

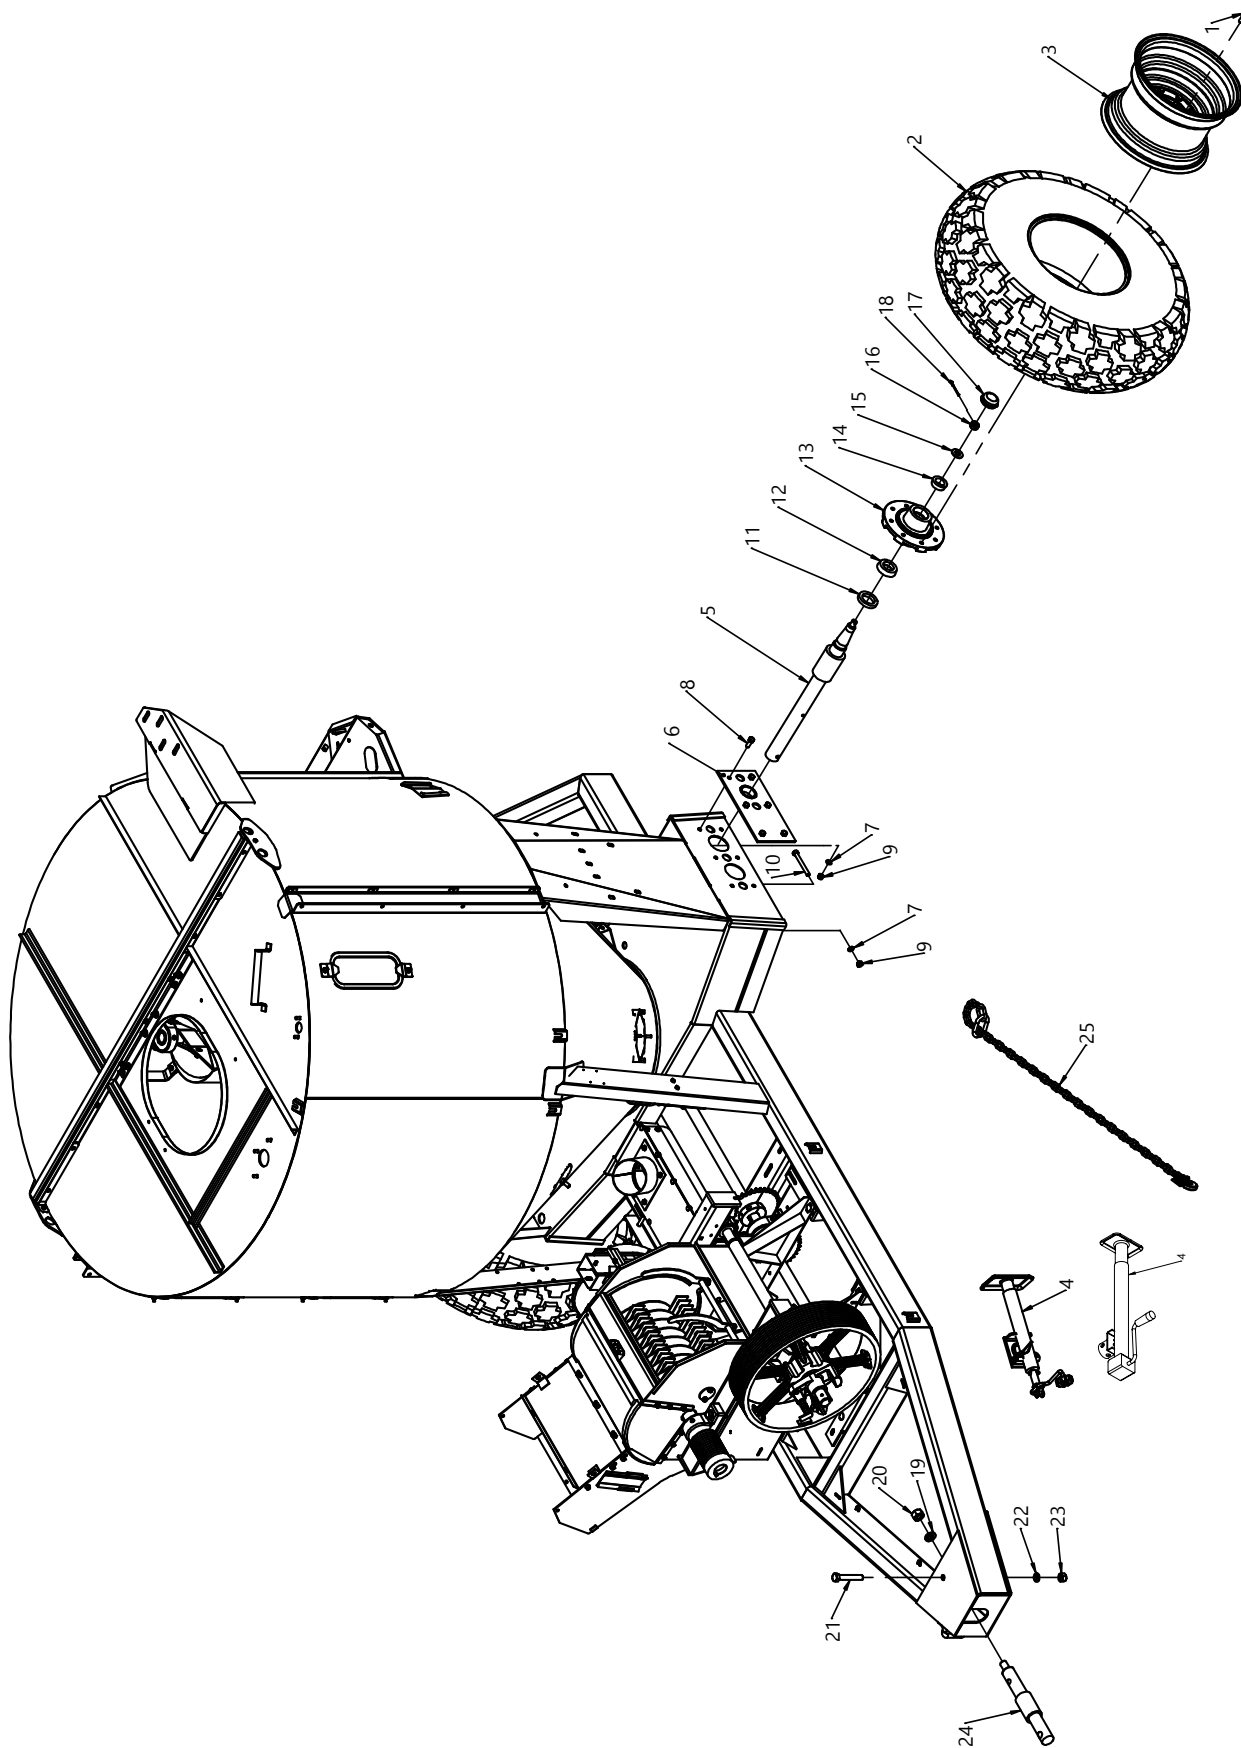


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	042440	BOLT, LUG 9/16-18 x1-1/8 GR6 ZP	16
2	050230	TIRE, TUBELESS	1
3	659002	RIM, 11x16.1 (SILVER)	1
4	040440	JACK ASSY, TOP CRANK (EARLY MODELS)	1
	626050	JACK ASSY, SIDEWINDER (LATE MODELS)	
5	610480	SPINDLE, LOAD CELL (DIGI-STAR)(UP TO 11/17)	2
	615640	SPINDLE, WEIGHBAR (AVERY WEIGHTRONIX)(CURRENT)	
6	363940	BRACKET, MOUNTING	2
7	005370	WASHER, LOCK 1/2	24
8	010730	BOLT, HHCS 1/2-13 X 1-1/4"	20
9	005360	NUT, HEX 1/2-13	28
10	030420	HBOLT 1/2-13 x 4-1/2" GR5 ZN	2
11	121130	SEAL,	2
12	042310	BEARING CONE	2
13	042330	HUB ASSY,	2
14	012630	BEARING CONE	2
15	020720	WASHER, FLAT	2
16	020710	HSNUT .750-16-GR5	2
17	035420	HUBCAP, 2 1/2"	2
18	026630	1/4 x 2 COTTER PIN	2
19	003350	WASHER, LOCK 1"	1
20	147310	NUT, HEX 1-14 Gr5 ZN	1
21	991050	HBOLT 0.7500-10x8.5x8.5-N	1
22	036800	WASHER, LOCK 3/4 SAE	1
23	036750	NUT, HEX 3/4-10	1
24	599960	HITCH, 1-7/8 DIA 2-1/8 (DIGI-STAR)(UP TO 11/17)	1
	219870	HITCH, 1-7/8 DIA 2-1/8 (AVERY WEIGHTRONIX)(CURRENT)	
25	1765302	CHAIN, SAFETY 5/16x5'	1

 TANK ASSEMBLY

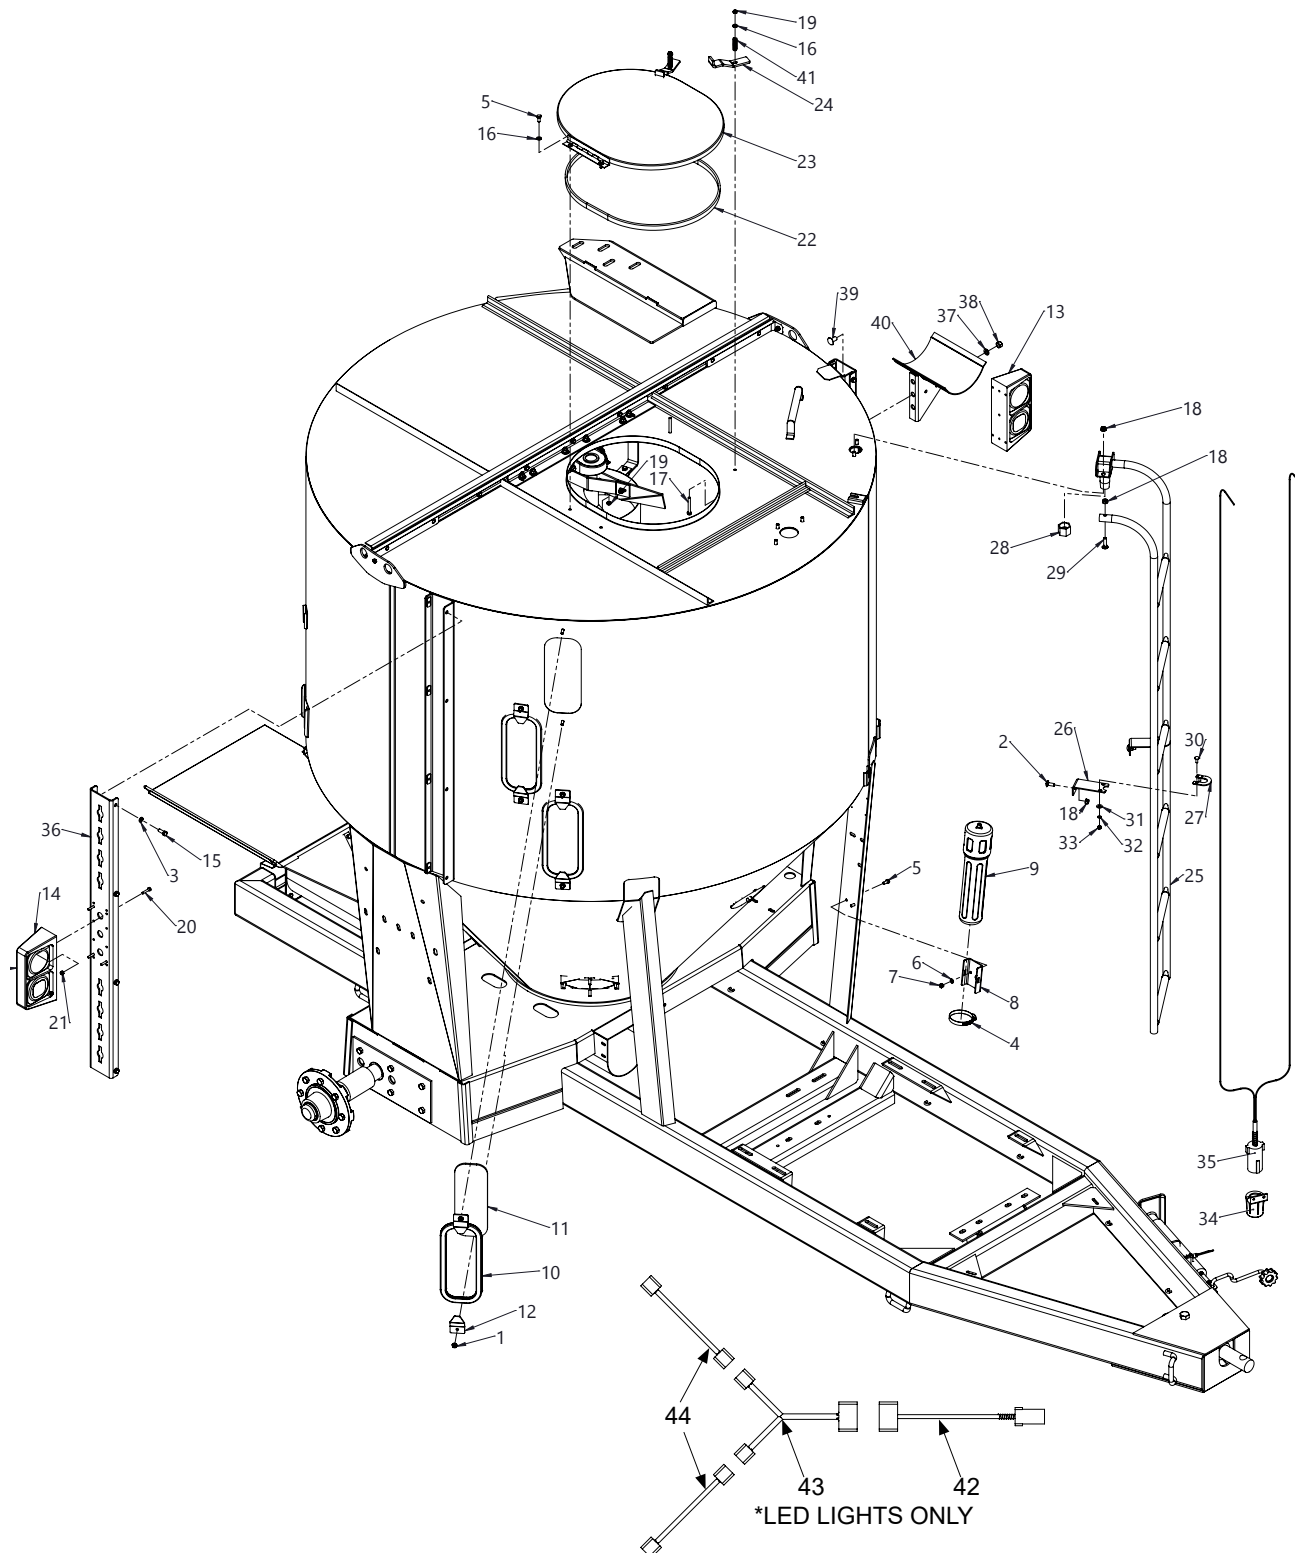


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	020190	Nut, Lock 5/16-18 Gr5 ZN Hex FLG	26
2	170530	BOLT, CRG 3/8-16 X 1"	9
3	021180	WASHER, LOCK 3/8	20
4	455160	CLAMP, HOSE	1
5	01241	BOLT, CRG 5/16" X 3/4" Z5	4
6	023620	WASHER, LOCK 5/16 ZN 5	2
7	023630	NUT, HEX 5/16-18 GR5 ZN	2
8	458080	BRACKET, TUBE	1
9	449190	TUBE, MANUAL HOLDER	1
10	012020	RUBBER, WINDOW	5
11	012050	GLASS, 4.5 X 12.0	5
12	575940	CLIP, MIX TANK	10
13	MP16.10742	LIGHT, DUAL LAMP, AMBER/RED - LH	1
	642580	LIGHT, DUAL LAMP, AMBER/RED (LED)	
14	MP16.10743	LIGHT, DUAL LAMP, AMBER/RED - RH	1
	642590	LIGHT, DUAL LAMP, AMBER/RED (LED)	
15	012260	BOLT, HHCS 3/8-16 X 1	16
16	022920	WASHER, FLAT 5/16 STD	5
17	009800	HBOLT 0.3125-18x2.5x0.875-N	2
18	020180	NUT, LOCK 3/8-16 Gr5 ZN HEX FLG	8
19	025670	NUT, LOCK 5/16-18 HEX FLG	6
20	V067301	BOLT, SHCS 1/4-20 x 1	8
21	037550	NUT, NYLOC 1/4-20	8
22	164020	SEAL, TANK LID	1
23	035661	LID & HINGE,	1
24	022930	BRACET, LID	2
25	590950	LADDER WLDT, 86"	1
26	590960	BRACKET, INNER	2
27	590970	BRACKET, OUTER	2
28	E276028	PIPE, CAP 1" STANDARD	1
29	J03H1558	BOLT, CRG 3/8-16 X 1-1/2	1
30	E096029	BOLT, CRG 1/4-20 x 3/4	4
31	023260	WASHER, FLAT 1/4 STD	4
32	029440	WASHER, LOCK 1/4 SAE	4
33	023270	NUT, LOCK 1/4-20	4
34	JPT1296	BRACKET, STORAGE HOLDER 7 POLE	1
35	586360	HARNESS, WISHBONE 288"	1
36	611540	CHANNEL, SIDE	2
37	005370	WASHER, LOCK 1/2	1
38	005360	NUT, HEX 1/2-13	1
39	005390	BOLT, CRG 1/2-13 x 1 SSN GR5 ZN	1
40	043480	SADDLE, WELDMENT	1
41	013080	SPRING, COMP.	2
42*	642620	HARNESS, MAIN (LED ONLY)	1
43*	642600	HARNESS, "Y" SPLITTER (LED ONLY)	1
44*	642610	HARNESS, EXTENSION (LED ONLY)	2

 MIXING AUGER ASSEMBLY

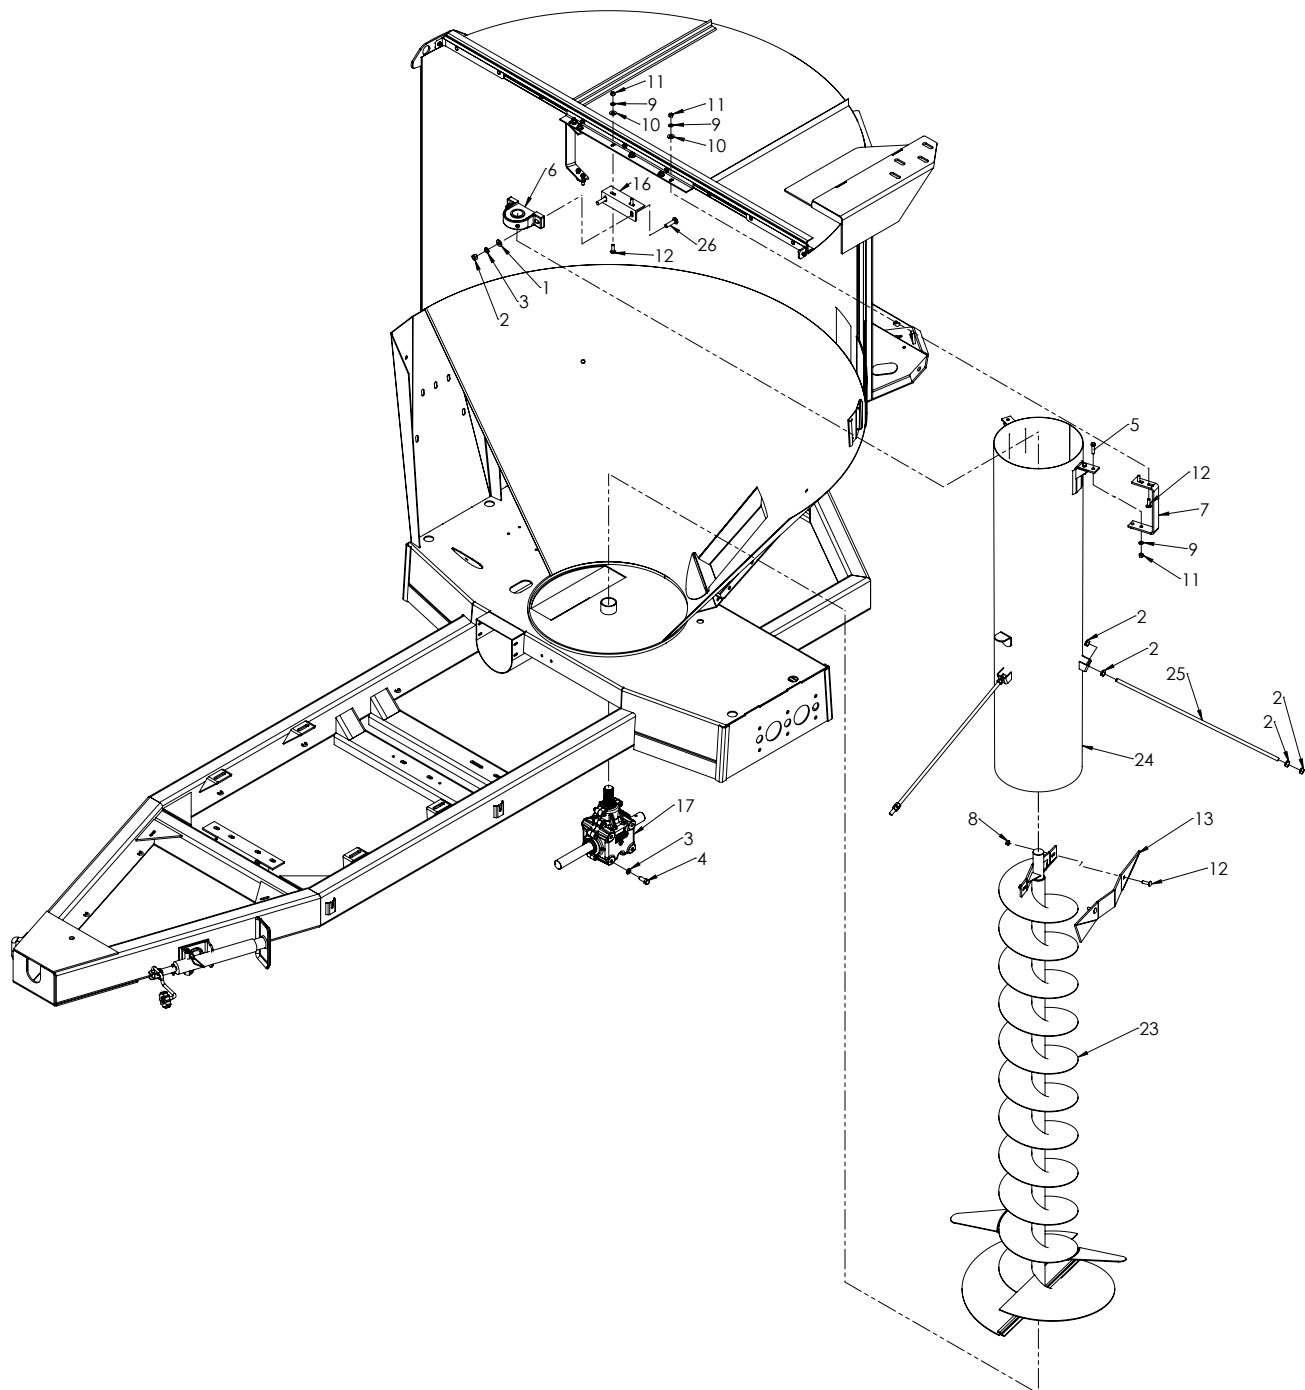


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 1/2 STD	2
2	005360	NUT, HEX 1/2-13	14
3	005370	WASHER, LOCK 1/2	10
4	010730	BOLT, HHCS 1/2-13 X 1-1/4"	8
5	011370	HBOLT 0.3750-16x1.5x1.5-N	4
6	013960	PB BEARING, 1-5/8 W/LC	1
7	018680	SUPPORT, MAIN	2
8	020180	NUT, LOCK 3/8-16 Gr5 ZN HEX FLG	2
9	021180	WASHER, LOCK 3/8	10
10	021190	WASHER, FLAT 3/8 STD	6
11	027260	NUT, HEX 3/8-16 GR5 ZN	10
12	035180	BOLT, CRG 3/8-16 X 1-1/4"	8
13	126660	PADDLE, MIXING	1
16	516090	HANGER, BEARING	1
17	577790	GEARBOX, SUPERIOR	1
23	610720	AUGER ASSY,	1
24	610740	TUBE WLDT, MIXING	1
25	610770	THREADED ROD,	3
26	991200	RHSNBOLT 0.5-13x2x2-N	2

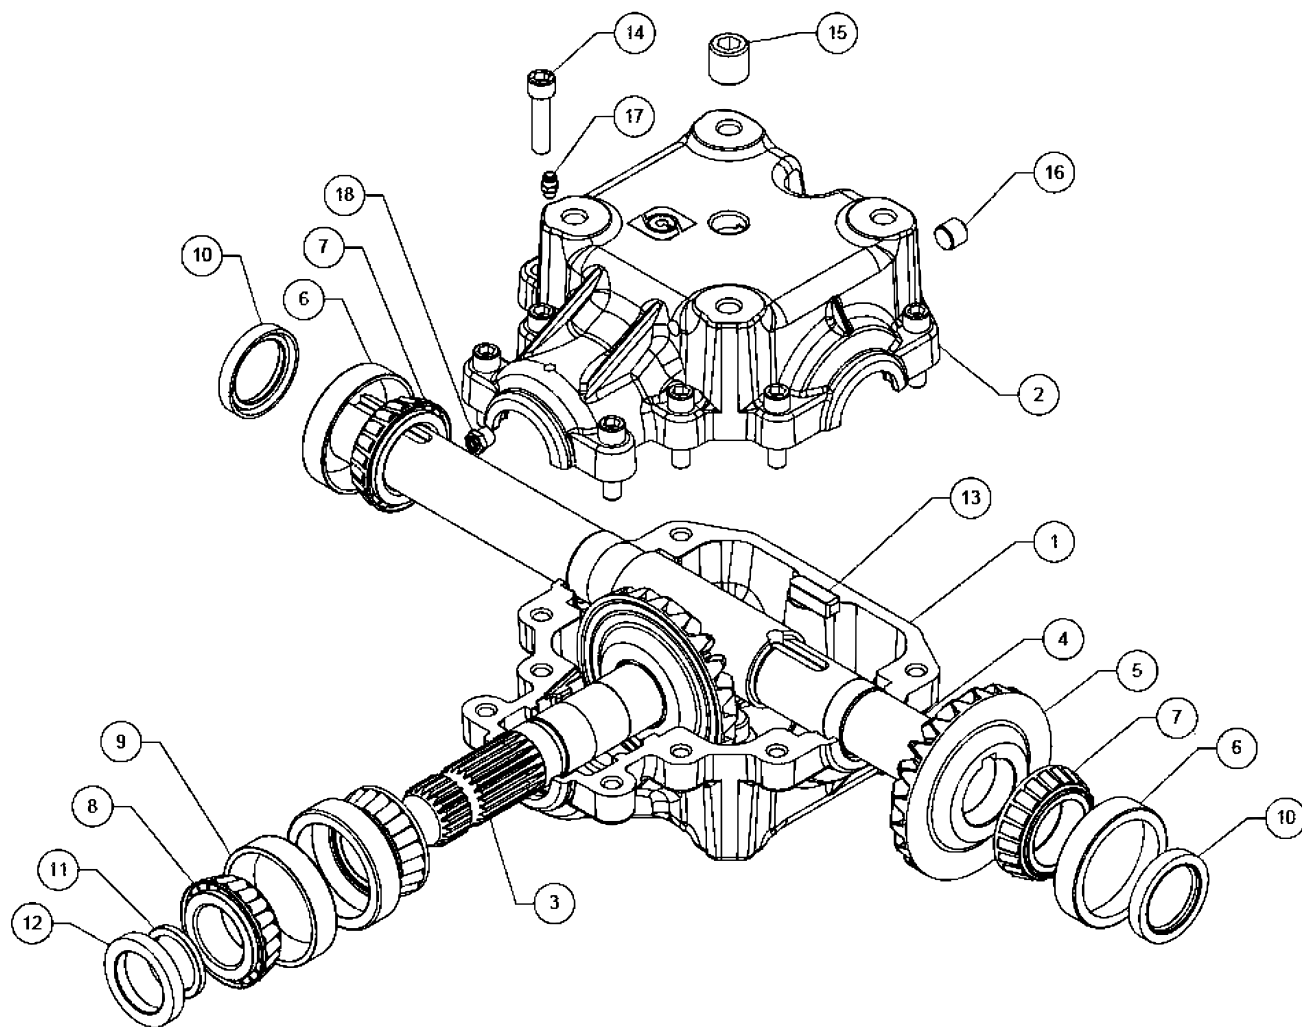 GEARBOX ASSEMBLY, MIXER (PRIOR TO 2017)

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	586180	GEARBOX, R500-003M-A0536 HOUSING 1/2	1
2	586190	GEARBOX, R500-004M-B0559 HOUSING 1/2	1
3	586200	GEARBOX, R500-8B00-K0280 SHAFT & GEAR	1
4	586210	GEARBOX, R500-1120-K0265 CROSS SHAFT	1
5	586220	GEAR, 1:1 1.50 KEY 51121	1
6	MP905502	BEARING CUP - 2.7170OD #13620	2
7	MP904026	BEARING CONE - 1.5000ID #13687	2
8	MP901102	BEARING CONE - 1.3750ID #14137A	2
9	MP901713	BEARING CUP - 2.7180OD #14276	2
10	586160	514846 SEAL, 1.500-2.00 .313	2
11	U50200005	RING, RETAINING	1
12	U51400006	SEAL, SHAFT TC - 1.375 X 2.00 X .313	1
13	586170	400201 KEY SQ, 3/8 X 1.20	1
14	-	SCREW - 3/8 X 1-1/2 SK THD	9
15	-	PLUG - PIPE 1/2-14 NPT SCHD	2
16	-	PLUG - DRAIN 1/4 NPT	1
17	I21987	ZERK, 1/4-28 TAPER DRIVE THREAD STRAIGHT	1
18	247820	PRESSURE RELIEF 2003PR	1
19	963130	OIL, 80/90 W GL-1 STRAIGHT GEAR OIL	1 GA.


GEARBOX ASSEMBLY, MIXER (2017-CURRENT)**NOTES:**

 1. GEAR RATIO IS 1:1
2. TORQUE 3/8-16 CAPSCREWS (ITEM 13) TO 35-40 FT LBS
3. STAMP PART NUMBER AND LOT NUMBER IN AREA SHOWN
4. PACK STUB SHAFT BEARINGS WITH NLGI GRADE 2 GREASE

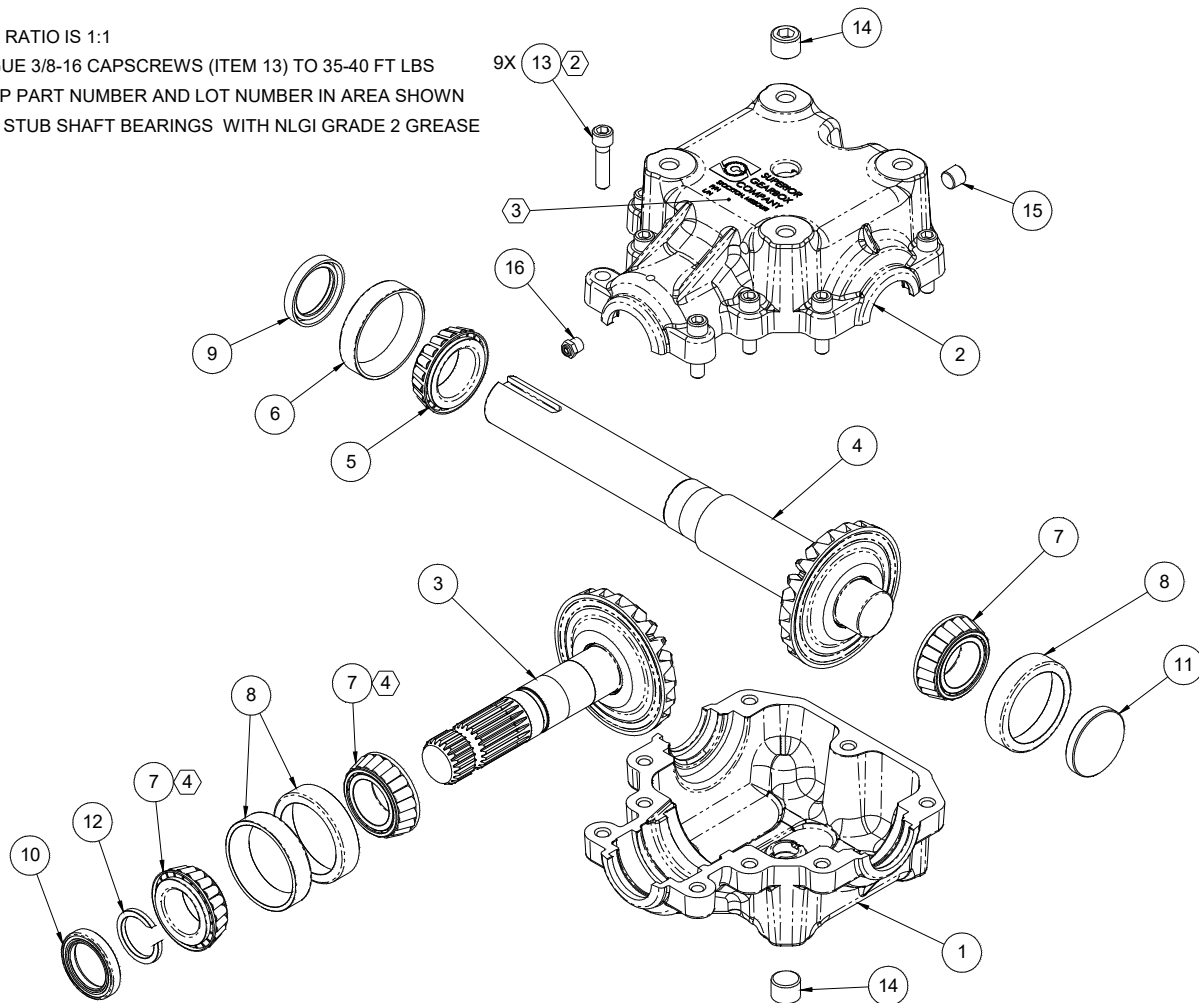


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	586180	GEARBOX, R500-003M-A0536 HOUSING HALF	1
2	586190	GEARBOX, R500-004M-B0559 HOUSING HALF	1
3	586200	GEARBOX, R500-8B00-K0280 SHAFT & GEAR	1
4	586215	GEARBOX, R500-8B00-U0058 SHAFT & GEAR	1
5	MP904026	BEARING CONE - 1.500I.D. #13687	2
6	MP905502	BEARING CUP - 2.717O.D. #13620	2
7	MP901102	BEARING CONE - 1.3750ID #14137A	2
8	MP901713	BEARING CUP - 2.7180OD #14276	2
9	586160	514846 SEAL, 1.500-2.00 .313	1
10	U51400006	513569 SEAL, SHAFT 1.375	1
11	586225	400301 SEAL, END CAP 2.00	1
12	U50200005	503413 RETAINING RING 1.375	1
13	MP906310	BOLT, SHCS 3/8	9
14	620590	PLUG, 1/2-14 NPT	2
15	MP901169	PLUG, 1/4-18 NPT	1
16	620620	PLUG, 1/8-27 NPT VENT	1
-	963130	OIL, 80/90W GL-1 GEAR	AR

 SUPPLEMENT HOPPER ASSEMBLY

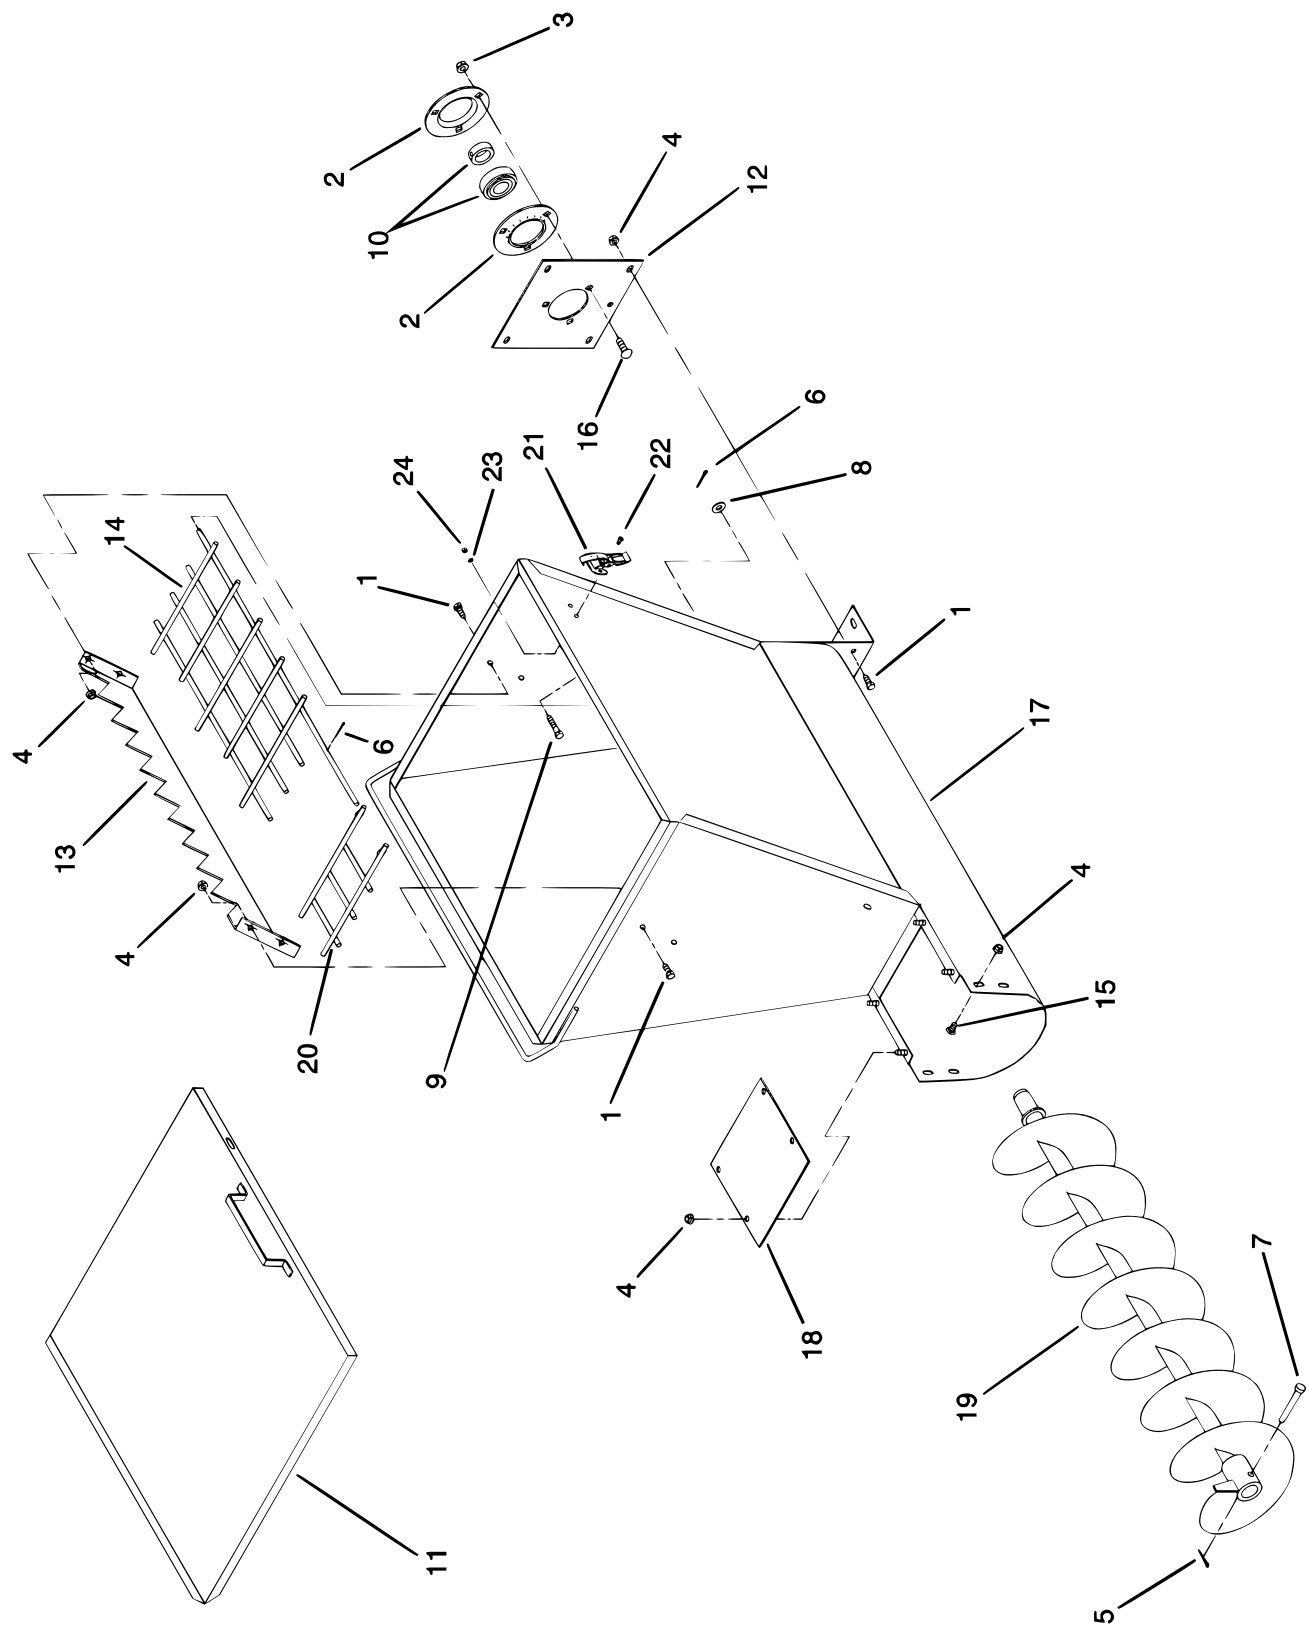


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	012140	BOLT, HHCS 5/16-18 X 3/4 GR5 ZN	6
2	019150	FLANGETTE, BRG 1.12 3 BOLT RD	2
3	020180	NUT, LOCK 3/8-16 HEX FLG GR5	3
4	020190	NUT, LOCK 5/16-18 HEX FLG G5	16
5	020700	PIN, COTTER 5/32 X 1.0 CHISEL	1
6	021210	PIN, COTTER 3/32 X 1.0 ZN	2
7	021430	PIN, CLEVIS 3/8 X 2.25 GR5 ZN	1
8	022920	WASHER, FLAT 0.375 X 0.875 X 0.083 ZN	1
9	005900	BOLT, HHCS 5/16-18 X 1 GR5 ZN	2
10	108850	BEARING, 1.12 SOD SPRING LOCK	1
11	126540	LID WLDT., SUPPLEMENT HOPPER	1
12	128040	PLATE, HOLE COVER	1
13	470950	CUTTER, SACK	1
14	560700	GRATE, SUPPLEMENT HOPPER	1
15	012410	BOLT, CRG 5/16-18 X 3/4	4
16	170530	BOLT, CRG 3/8-16 X 1.0 SSN GR5	3
17	470960	HOPPER WLDT., SUPPLEMENT	1
18	365140	COVER, SUPPLEMENT HOPPER	1
19	365150	AUGER WLDT., CONCENTRAT TANK	1
20	560710	GRATE, ANGLED HOPPER	1
21	I669184R1	CLAMP, SHIELD LATCH	1
22	I159920	SCREW, PHMS 10-24 X 1/2	2
23	120600	WASHER, LOCK #10	2
24	120590	NUT, HEX 10-24	2

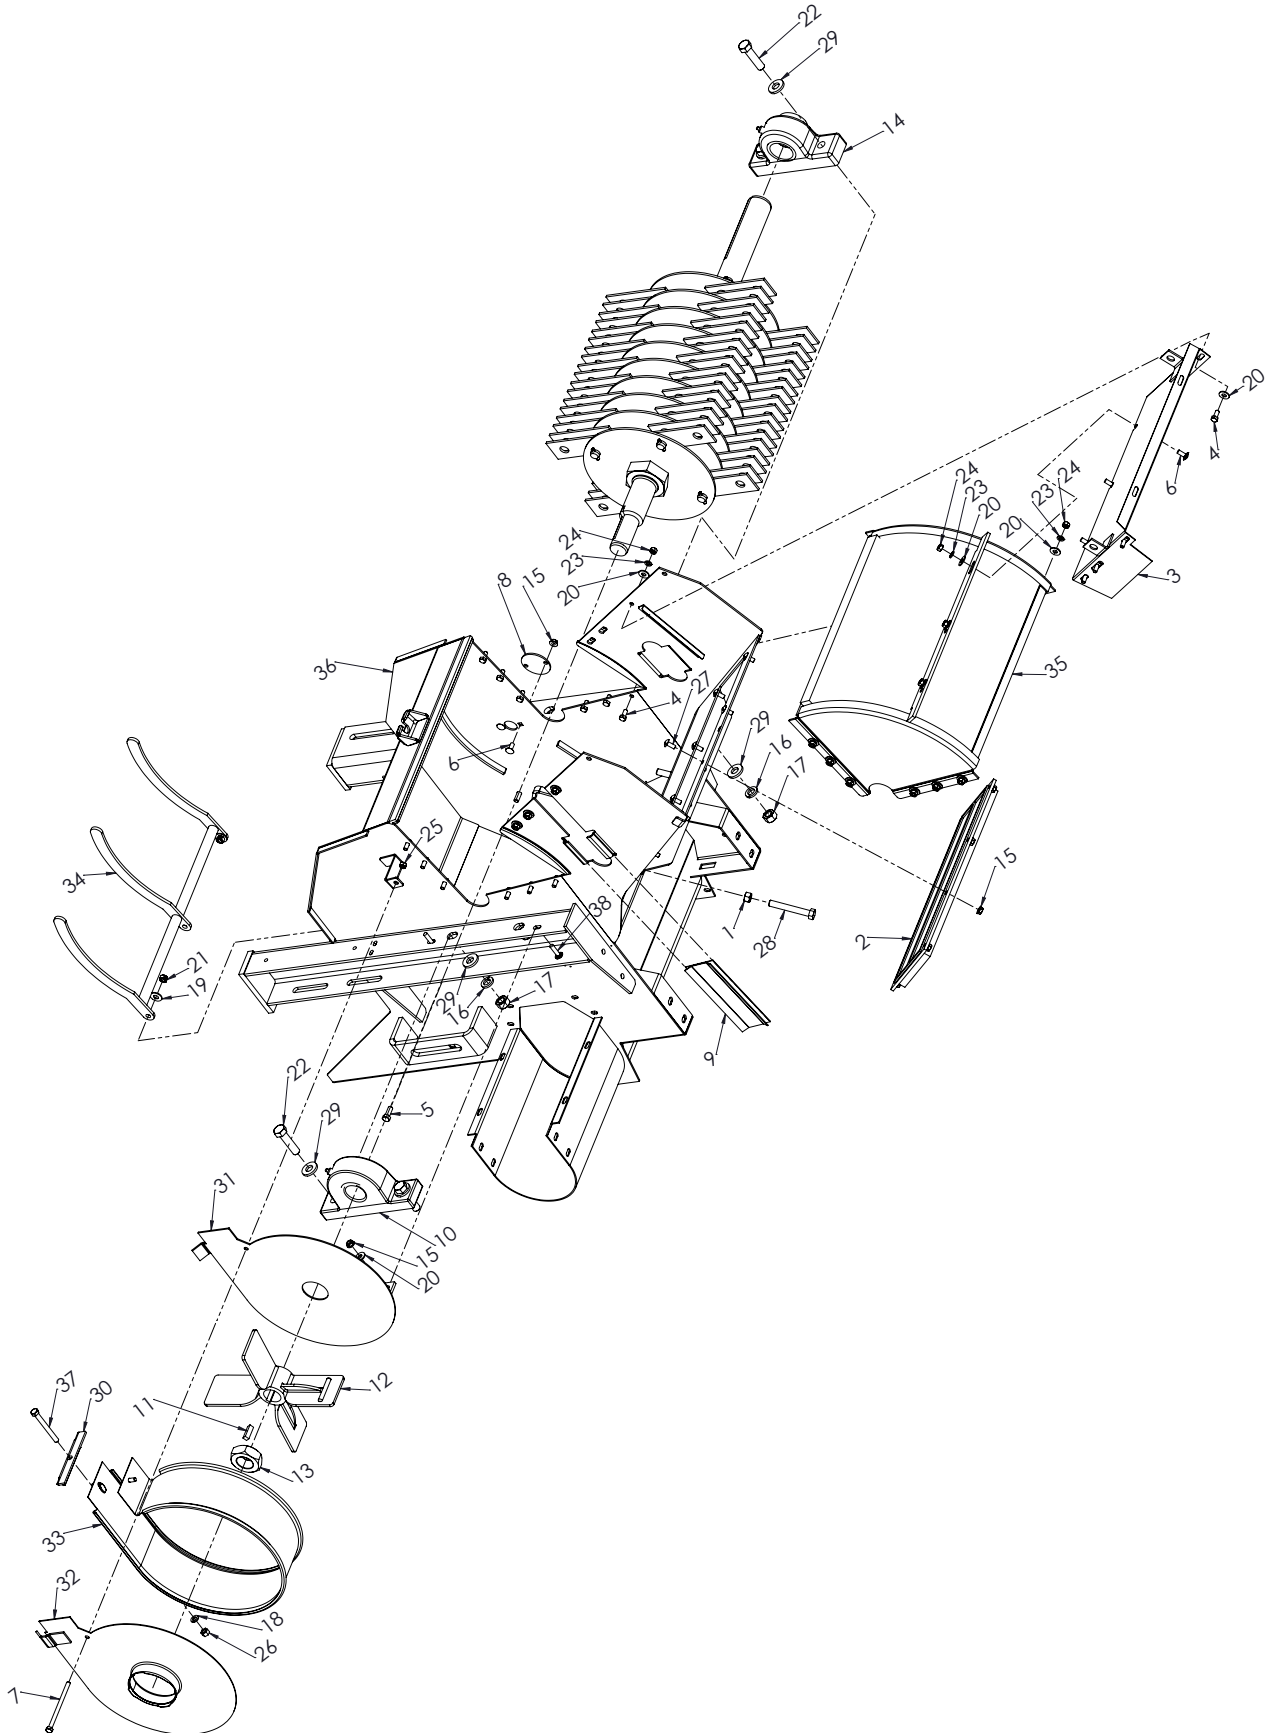 
HAMMERMILL ASSEMBLY, 20"

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005360	NUT, HEX 1/2-13	3
2	009740	MAGNET, #4	1
3	009820	COVER WLDT, THROAT	1
4	012140	BOLT, HHCS 5/16-18 X 3/4	18
5	012260	BOLT, HHCS 3/8-16 X 1	2
6	012410	BOLT, CRG 5/16-18x3/4	5
7	012820	HBOLT 0.3125-18x1x0.875-N	1
8	012920	PLATE, HAMMER	1
9	013360	SLIDE ASSY	2
10	013420	PB BEARING, 2.0 BORE	1
11	013510	KEY, SQ 3/8 x 1.25	1
12	013520	FAN, BLOWER	1
13	013530	NUT, JAM 1 1/2-12	1
14	013950	PB BEARING, 2.0 W/LC	1
15	020190	NUT, LOCK 5/16-18 FLG	12
16	020440	WASHER, LOCK 5/8	4
17	020450	NUT, HEX 5/8-11	4
18	021180	WASHER, LOCK 3/8	1
19	021190	WASHER, FLAT 3/8 STD	2
20	022920	WASHER, FLAT 5/16 STD	29
21	023060	NUT, LOCK 3/8-16 2 WAY	2
22	023110	BOLT, HHCS 5/8-11 x 2-1/2	4
23	023620	WASHER, LOCK 5/16	21
24	023630	NUT, HEX 5/16-18	21
25	025670	NUT, LOCK 5/16-18	1
26	027260	NUT, HEX 3/8-16 GR5	1
27	028230	SCREW, THMS 5/16-18	8
28	034650	BOLT, HHCS 1/2-13 x 3-1/2 Gr5 ZN	3
29	127920	FW .656 x 1.38 X .179	8
30	170970	CLAMP, PULL DOWN	1
31	170980	SIDE PLATE WLDT, FRONT	1
32	170990	SIDE PLATE WLDT, REAR	1
33	171000	WRAPPER WLDT,	1
34	362720	SUPPORT WLDT,	1
35	362760	HOOD WLDT, 20"	1
36	553800	HOUSING WLDT, 20"	1
37	990870	BOLT, HHCS 3/8-16 X 3 1/2"	1
38	1111267	RHSSNBOLT 0.3125-18x1x1-N	2

 
HAMMERMILL ROTOR ASSEMBLY, 20"

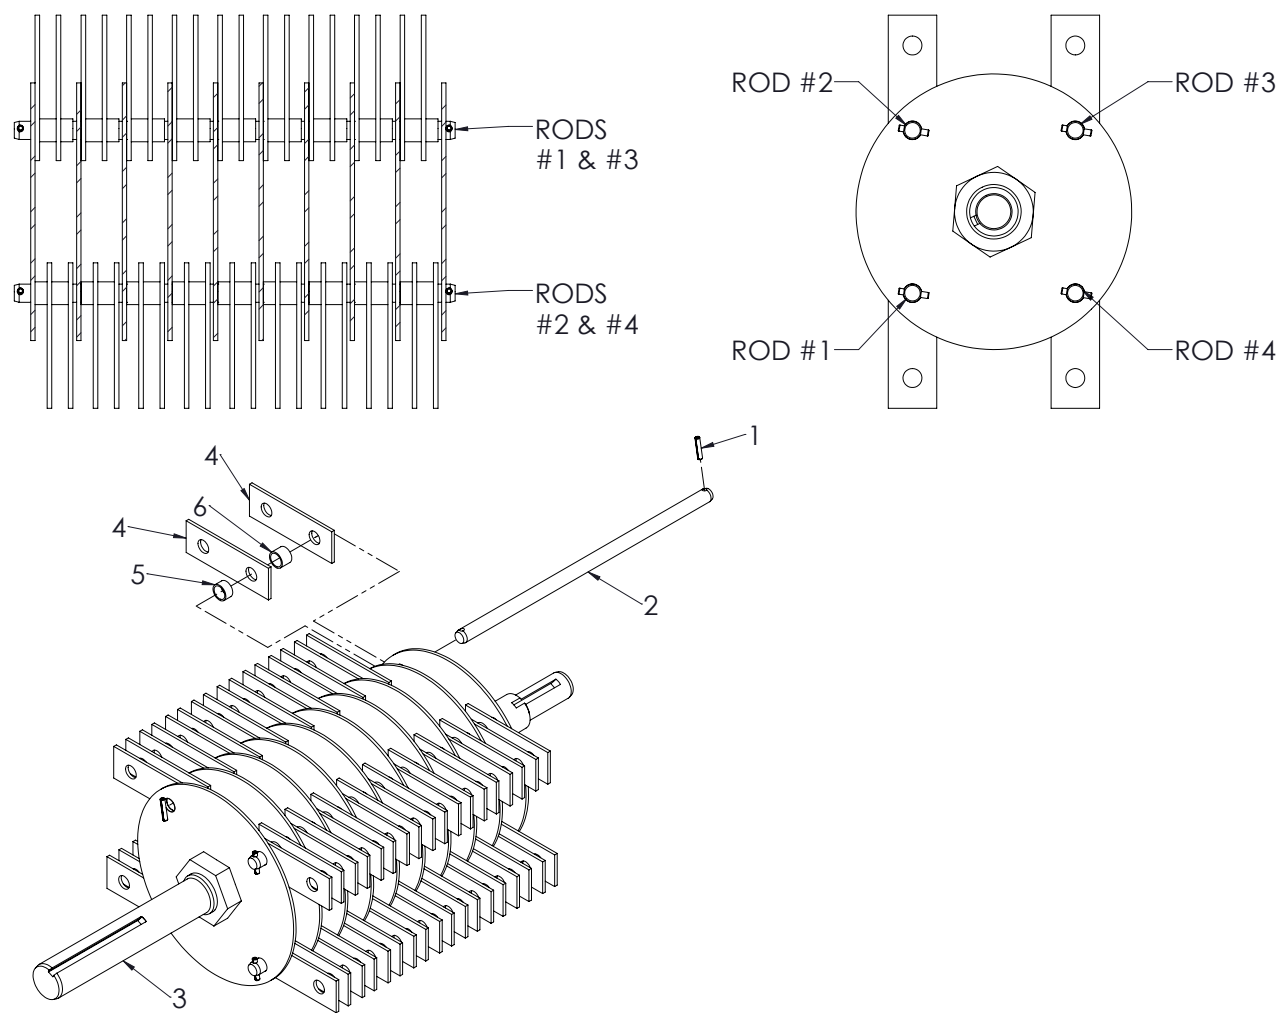


ITEM NO.	PART NUM-BER	DESCRIPTION	QTY.
1	012550	PIN, EXPANSION	8
2	013470	PIN, HAMMERMILL 3/4 X 23 1/2	4
3	020570	ROTOR ASSY, 20" (ROTOR ONLY)	1
	639020	ROTOR ASSY, 20" COMPLETE W/ HAMMERS	
4	581700	HAMMER KNIFE,	72
5	581710	SPACER, SPLIT .50	36
6	581720	SPACER, SPLIT .69	36

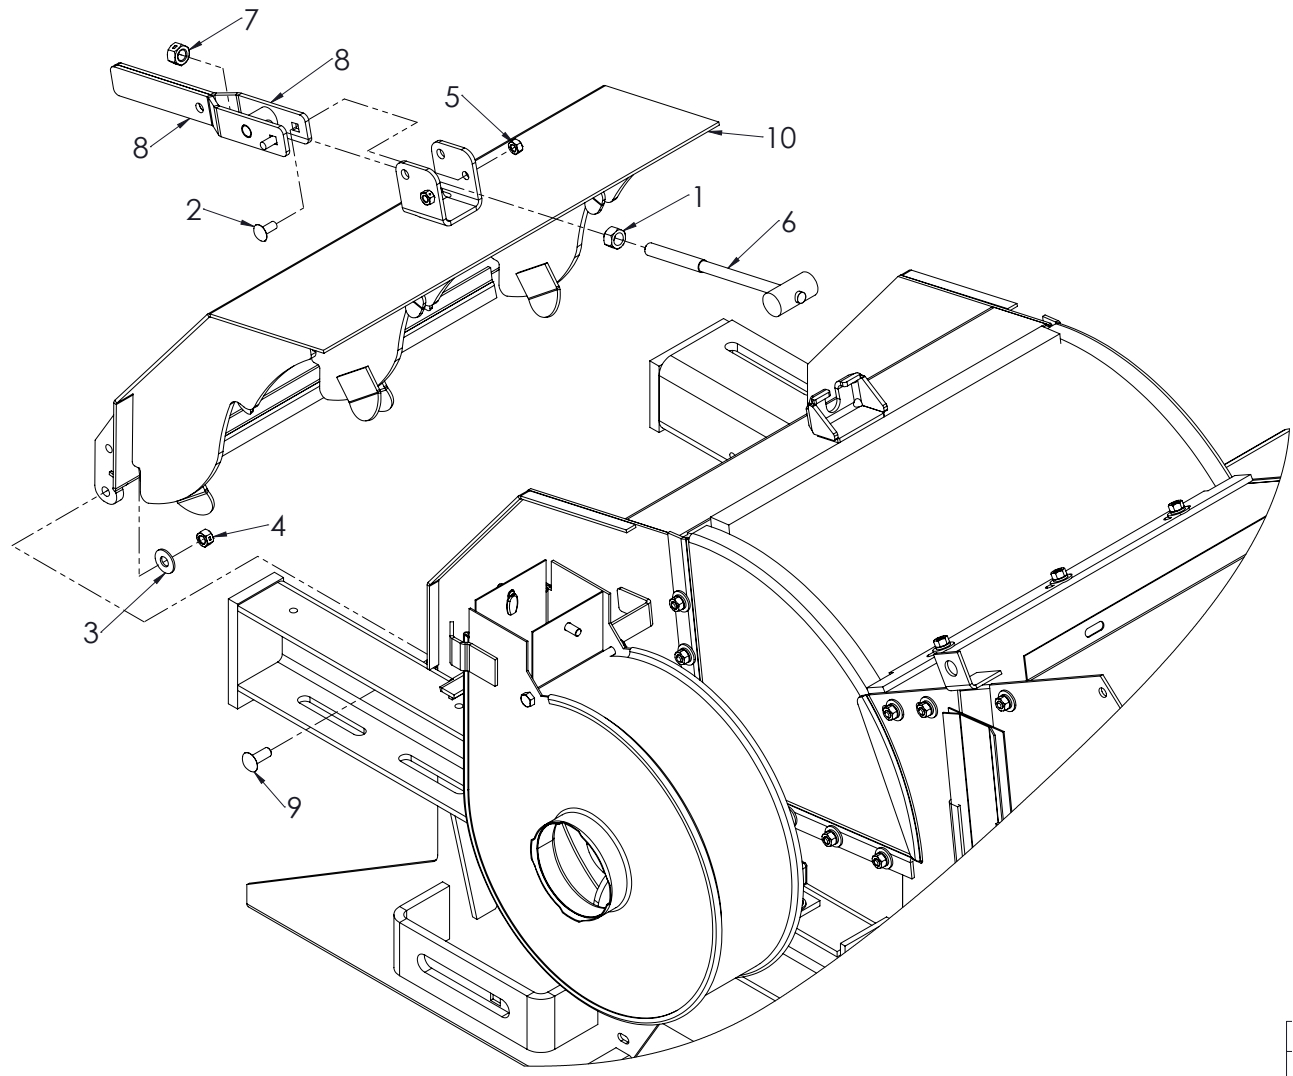 HAMMERMILL DOOR

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005360	NUT, HEX 1/2-13	1
2	012410	BOLT, CRG 5/16-18X3/4	2
3	021190	WASHER, FLAT 3/8 STD	2
4	023060	NUT, LOCK 3/8-16 2 WAY	2
5	025670	NUT, LOCK 5/16-18	2
6	127860	T-BAR HANDLE WLDT	1
7	127890	NUT, LOCK 1/2-13	1
8	151920	HANDLE, LOCKING WLDT	1
9	170530	BOLT, CRG 3/8-16 X 1"	1
10	362670	DOOR WLDT,	1

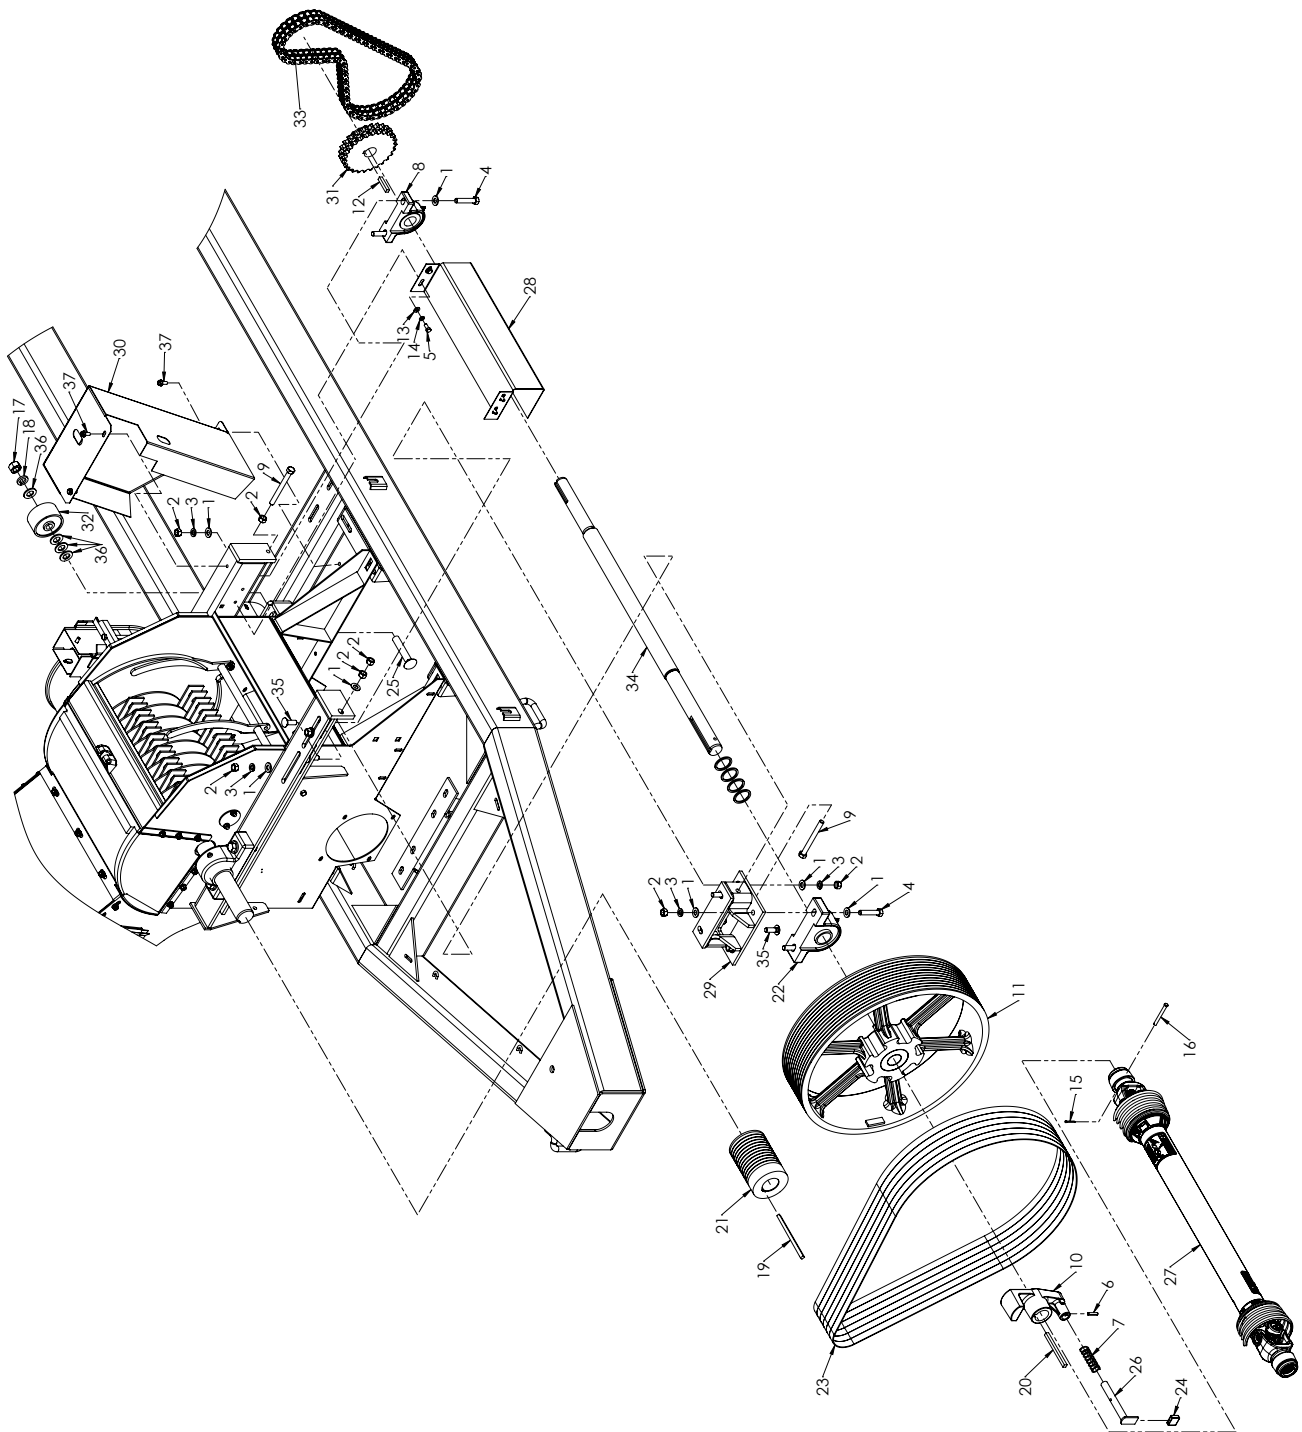 
JACKSHAFT ASSEMBLY, 540

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 1/2 STD	13
2	005360	NUT, HEX 1/2-13	11
3	005370	WASHER, LOCK 1/2	8
4	007080	HBOLT 0.5000-13x2.5x1.25-N	4
5	JN71292	BOLT, HXHD 5/16 X 1/2	4
6	012550	Pin, Expan 1/4 x 1-1/4 ZN (Tension Roll)	1
7	013580	Spring Compression,	1
8	614080	PB BEARING,	1
9	013800	BOLT, HHCS 1/2-13 x 5 Gr5 ZN	2
10	013860	CLUTCH, HAMMERMILL	1
11	016750	Pulley Wldt, 22.6 12 Groove w/Brgs	1
12	021530	KEY, SQUARE 3/8 X 2	1
13	-	-	-
14	-	-	-
15	034360	PIN, COTTER, 1/8 X 1.00	1
16	036480	5/16" x 3.00" CLEVIS PIN	1
17	036750	NUT, HEX 3/4-10	1
18	036800	WASHER, LOCK 3/4 SAE	1
19	110390	KEY, TAPERED	1
20	151280	KEY, SQUARE 3/8 x 5	1
21	165500	PULLEY, 12-GROOVE	1
22	165730	PB BEARING, 1-5/8 w/o LC	1
23	625930	Belt Set, 3V x 670.6 Double	1
24	205430	Grip, 1/8 x 1 x 1 Red Handle	1
25	218120	BOLT, CRG 3/4-10 x 4 Gr5 ZN	1
26	241570	PIN WLDT, LOCKING	1
27	354640	PTO ASSY, 540 RPM (YELLOW)(GKN)(TO 05/15)	1
	613000	PTO ASSY, 540 RPM (BLACK)(WEASLER)(AFTER 05/15)	
28	365810	SHIELD, JACKSHAFT	1
29	470410	SUPPORT, BEARING	1
30	528960	SHIELD WLDT,	1
31	529210	SPROCKET, D60B26	1
32	529230	IDLER, RUBBER	1
33	529240	CHAIN, COUPLER RC60-2 X 76P W/ CONN LINK	1
34	560070	JACKSHAFT, 20" HM	1
35	E096046	BOLT, CRG 1/2-13 X 1-1/2	4
36	I131017	WASHER, FLAT	4
37	JN10212	SCREW, FLG 5/16-18 x 3/4 Gr5 ZN Hex	3
38	126940	WASHER, FLAT	4

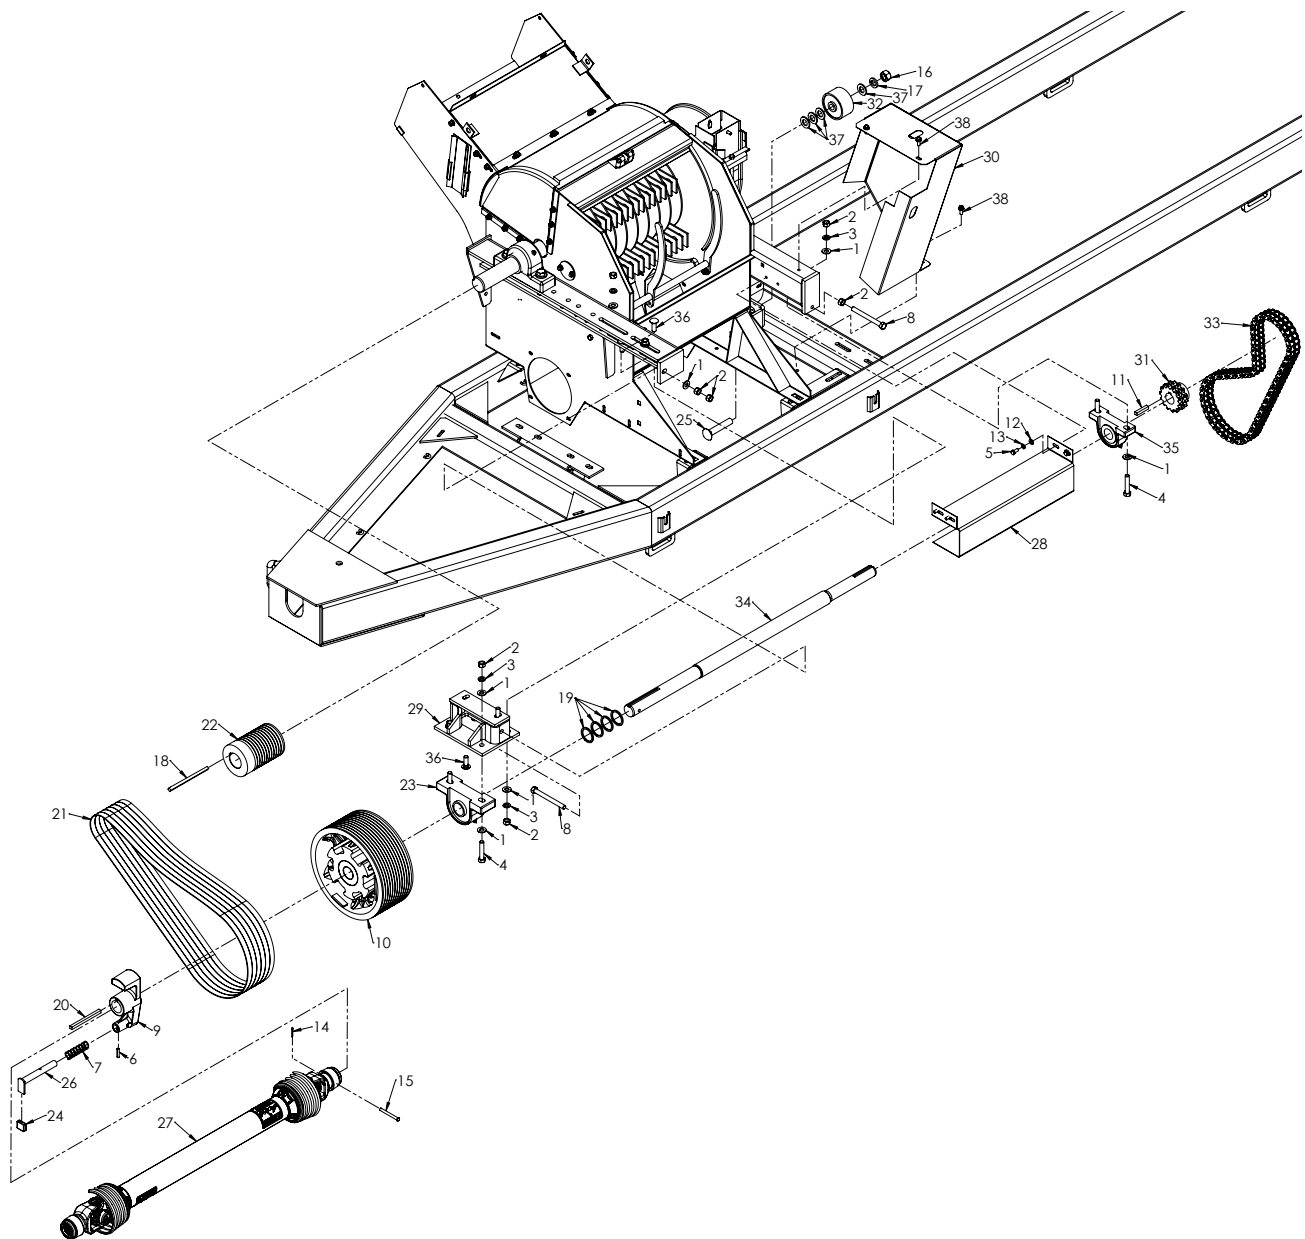 JACKSHAFT ASSEMBLY, 1000


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 1/2 STD	13
2	005360	NUT, HEX 1/2-13	11
3	005370	WASHER, LOCK 1/2	8
4	007080	BOLT, HHCS 1/2-13 X 2-1/2	4
5	JN71292	BOLT, HXHD 5/16 X 1/2	4
6	012550	PIN, EXPANSION	1
7	013580	SPRING, COMPRESSION	1
8	013800	BOLT, HHCS 1/2-13 X 5	2
9	013860	CLUTCH, HAMMERMILL	1
10	013870	PULLEY WLDT, 12.3"	1
11	021530	KEY, SQUARE 3/8 X 2	1
12	-	-	-
13	-	-	-
14	034360	PIN, COTTER, 1/8 X 1.00	1
15	036480	5/16" X 3.00" CLEVIS PIN	1
16	036750	NUT, HEX 3/4-10	1
17	036800	WASHER, LOCK 3/4 SAE	1
18	110390	KEY, TAPERED	1
19	126940	WASHER, FLAT	4
20	151280	KEY, SQUARE 3/8 X 5	1
21	159070	BELT SET, 3V X 670.6 DBL	1
22	165500	PULLEY, 12-GROOVE	1
23	165730	PB BEARING, 1-5/8 W/O LC	1
24	205430	GRIP, 1/8 X 1 X 1 RED	1
25	218120	BOLT, CRG 3/4-10 X 4 GR5 ZN	1
26	241570	PIN WLDT, LOCKING	1
27	354670	PTO ASSY, 1000 RPM	1
28	365810	SHIELD, JACKSHAFT	1
29	470410	SUPPORT, BEARING	1
30	528960	SHIELD WLDT,	1
31	529220	SPROCKET, D60B14	1
32	529230	IDLER, RUBBER	1
33	634500	CHAIN, ROLLER RC60-2 X 71P W/ CONN LINK	1
34	560070	JACKSHAFT, 20" HM	1
35	614080	BEARING, PB 1-7/16"	1
36	E096046	BOLT, CRG 1/2-13 X 1-1/2	4
37	I131017	WASHER, FLAT	4
38	JN10212	SCREW, FLG 5/16-18 X 3/4	3

 DRIVE & GEARBOX ASSEMBLY, LOWER

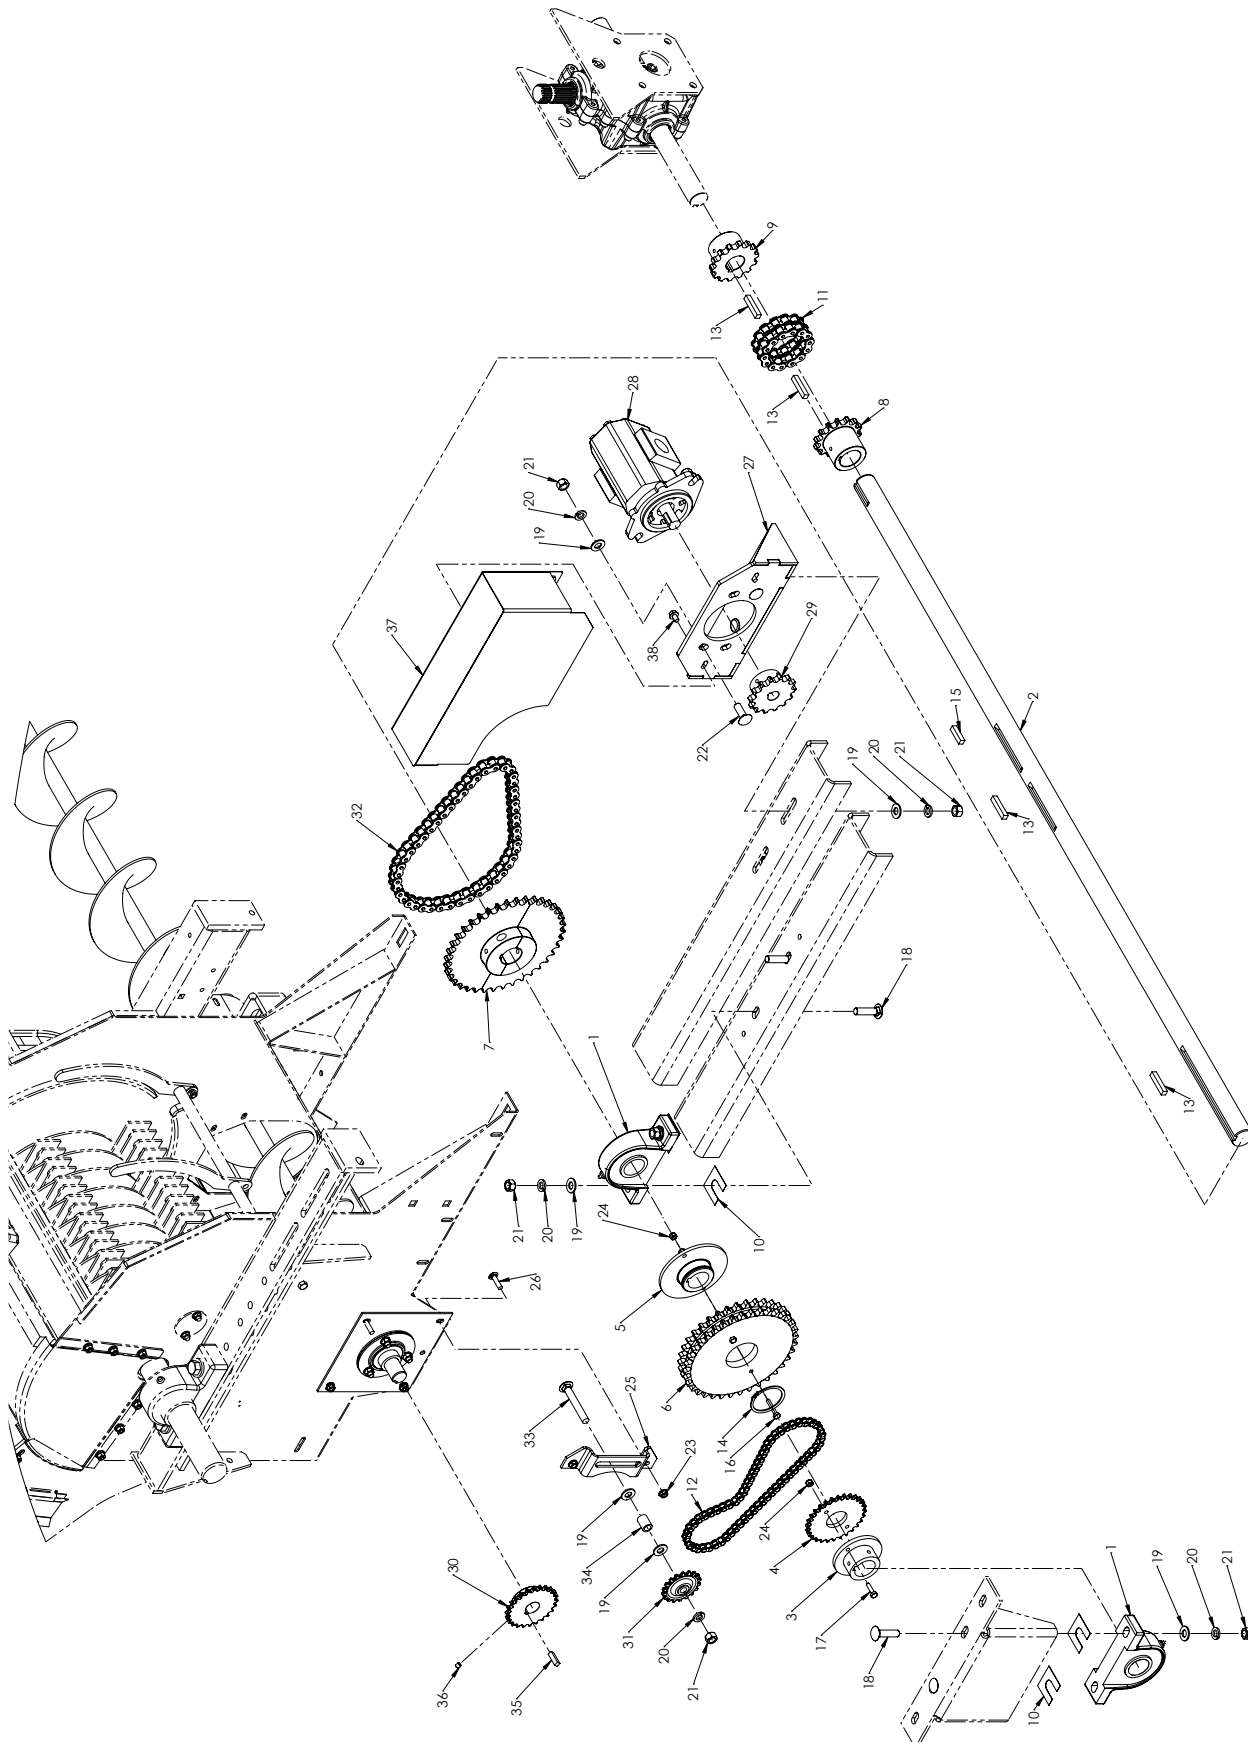


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	013960	PB BEARING, 1-5/8 W/LC	2
2	461870	SHAFT, MIXER DRIVE	1
3	461890	HUB WLDT, SHEAR	1
4	461880	SPROCKET, 40A28	1
5	469751	HUB, SHEAR	1
6	529200	SPROCKET, D60A36	1
7	590670	SPROCKET, SPLIT 60B38	1
8	461150	Sprocket, 60B14 Coupler	1
9	529110	Sprocket, 60B14 1.44 ID, .38KW & SS	1
10	I486454R1	SHIM, .030 BLADE	4
11	163770	CHAIN, COUPLER RC60-2	1
12	384570	CHAIN, ROLLER RC40	1
13	021530	KEY, SQUARE 3/8 X 2	5
14	040290	RING, RETAINING	1
15	006670	KEY, SQUARE 3/8 x 1-1/2	1
16	047000	BOLT, HHCS 1/4-20 X 1-1/2	2
17	042960	HBOLT 0.2500-20x1x1-N	2
18	991200	RHSNBOLT 0.5-13x2x2-N	4
19	005200	WASHER, FLAT 1/2 STD	34
20	005370	WASHER, LOCK 1/2	23
21	005360	NUT, HEX 1/2-13	26
22	E096046	BOLT, CRG 1/2-13 X 1-1/2	6
23	020190	Nut, Lock 5/16-18 Gr5 ZN Hex FLG	63
24	042370	NYLON INSERT LOCKNUT, 1/4-20 UNC	4
25	590980	BRACKET, IDLER MTG	1
26	035520	RHSSNBOLT 0.3125-18x1.25x1.25-N	2
27	610810	PUMP MOUNT,	1
28	274380	PUMP, HYD GEAR 3.9 CID	1
29	271180	SPROCKET, 60B14H	1
30	021860	SPROCKET, 40B24	1
31	020260	SPROCKET, 40A18 IDLER	1
32	611830	ROLLER,CHAIN RC60H	1
33	V061802	BOLT, CRG 1/2-13 X 3-1/2	1
34	604150	TUBING, SPACER	1
35	020760	Key, Square 5/16 x 1-1/8	1
36	010990	Screw, HSSS 5/16-18 x 5/16	12
37	611730	SHIELD WLDT, PUMP	1
38	JN71292	Screw, FLG 5/16-18 x 1/2 Gr5 ZN Hex	2

 THROAT & AUGER ASSEMBLY, 20"

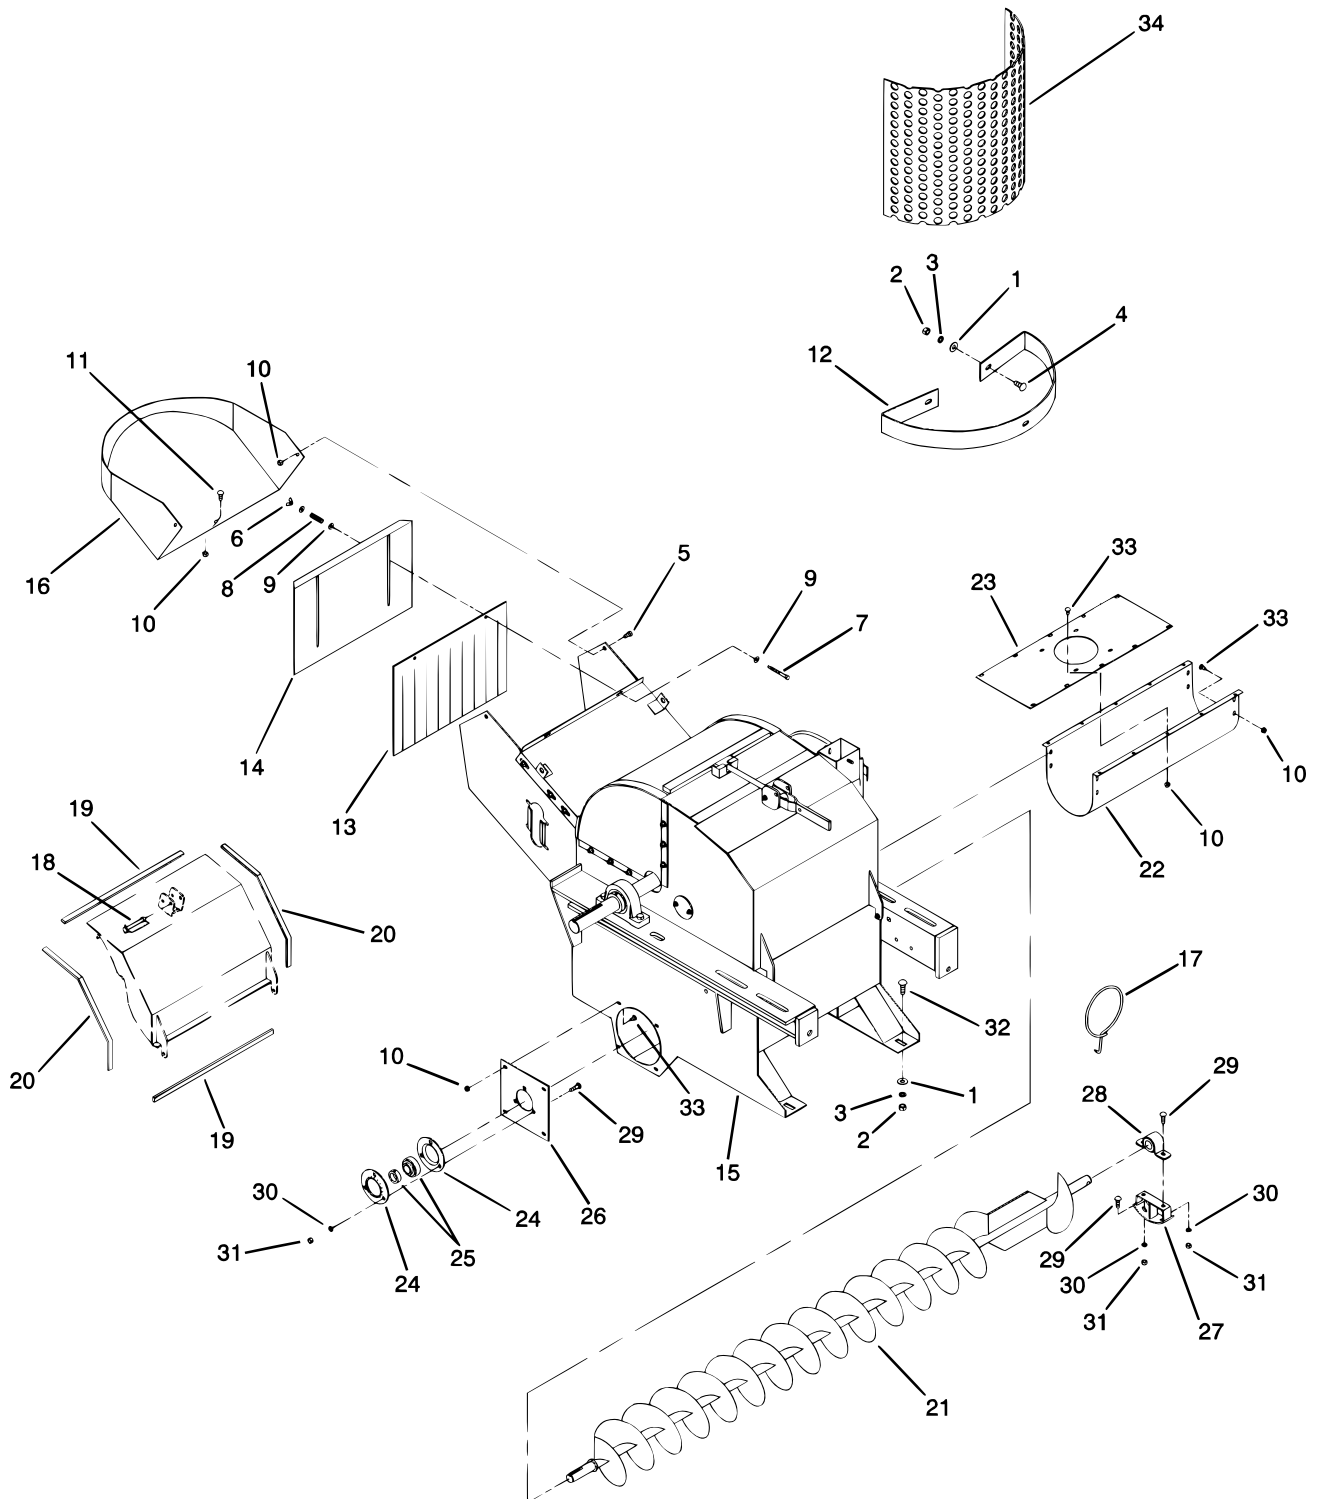


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 0.562 X 1.38 X 0.109 ZN	6
2	005360	NUT, HEX 1/2-13 GR5 ZN	6
3	005370	WASHER, LOCK 1/2 INCH ZN	6
4	005390	BOLT, CRG 1/2-13 X 1.0 SSN GR5	2
5	012140	BOLT, HHCS 5/16-18 X 3/4GR5 ZN	10
6	009790	NUT, WING 5/16-18 TYPE A ZN	2
7	160230	BOLT, HHCS 5/16-18 X 3	2
8	013080	SPRING, COMP. 12 GA. X 0.62 X 1.88	2
9	022920	WASHER, FLAT 0.38 X 0.88 X 0.083 ZN	6
10	020190	NUT, HEX FLG LK 5/16-18	31
11	012410	BOLT, CRG 5/16-18 X 3/4	19
12	037880	RACK	1
13	158970	FLAP, THROAT	1
14	158980	PLATE, LARGE FEED GRATE	1
15	597000	HAMMERMILL ASSY, 20 INCH ONE PIECE	1
16	366630	BASKET WLDT, 20 INCH	1
17	013120	HOOK, SCREEN	1
18	143710	PIN, SNAPPER 0.38 X 2.5 ZN	2
19	157670	SEALING STRIP, 500	2
20	213900	STRIP, SEALING 0.25 X 0.62 X 20.0	2
21	196140	AUGER WLDT, MILL TO MIXER	1
22	364250	TROUGH, LOWER PAN TO TANK	1
23	612160	CAP, TROUGH	1
24	019150	FLANGE, 1.12 BRG 3-BOLT ROUND	2
25	108850	BEARING, 1.12 SOD SPRING LOCK	1
26	128040	PLATE, HOLE COVER	1
27	165020	BRACKET WLDT, BEARING HOLDER	1
28	165030	BEARING, 1.12 SPLIT WOOD PB	1
29	170530	BOLT, CRG 3/8-16 X 1.0 SSN GR5	3
30	021180	WASHER, LOCK 3/8 INCH	7
31	020180	NUT, LOCK 3/8-16 FLG	5
32	030470	BOLT, CRG 1/2-13 X 1.25 SSN GR5	4
33	169340	BOLT, CRG 5/16-18 X 0.50 SSN GR2	26
34	004820	SCREEN, 20 INCH HAMMERMILL – 1/8 INCH	
	004830	SCREEN, 20 INCH HAMMERMILL – 5/32 INCH	
	004840	SCREEN, 20 INCH HAMMERMILL – 3/16 INCH	
	004850	SCREEN, 20 INCH HAMMERMILL – 1/4 INCH	
	004860	SCREEN, 20 INCH HAMMERMILL – 5/16 INCH	
	004870	SCREEN, 20 INCH HAMMERMILL – 3/8 INCH	
	004890	SCREEN, 20 INCH HAMMERMILL – 1/2 INCH	
	004900	SCREEN, 20 INCH HAMMERMILL – 5/8 INCH	
	004910	SCREEN, 20 INCH HAMMERMILL – 3/4 INCH	
	004930	SCREEN, 20 INCH HAMMERMILL – 1.0 INCH	
	004940	SCREEN, 20 INCH HAMMERMILL – 1-1/4 INCHES	
	004950	SCREEN, 20 INCH HAMMERMILL – 1-1/2 INCHES	
	004960	SCREEN, 20 INCH HAMMERMILL – 2.0 INCHES	

 FRONT DOORS ASSEMBLY

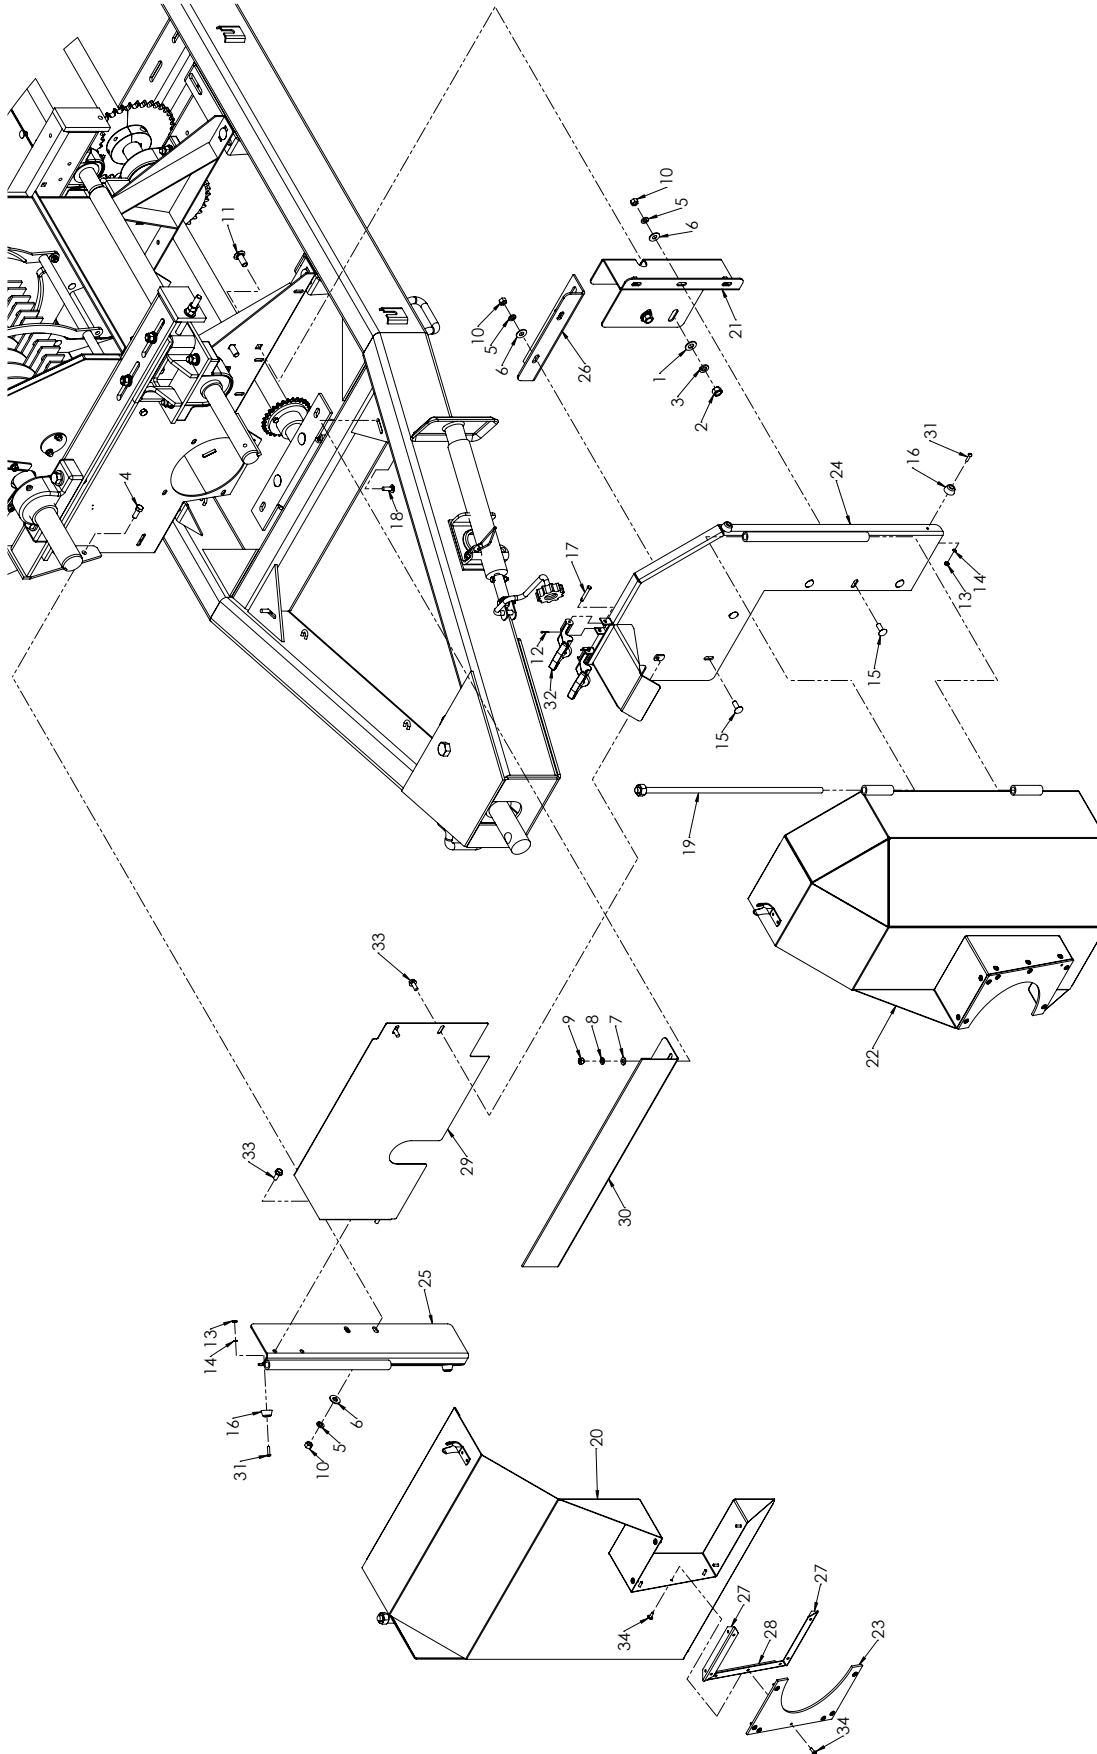

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 1/2 STD	2
2	005360	NUT, HEX 1/2-13	2
3	005370	WASHER, LOCK 1/2	2
4	012260	BOLT, HHCS 3/8-16 X 1	2
5	-	-	-
6	-	-	-
7	-	-	-
8	-	-	-
9	020190	NUT, LOCK 5/16-18 FLG	2
10	020180	NUT, LOCK 3/8-16 FLG	7
11	030470	BOLT, CRG 1/2-13 X 1-1/4"	2
12	116820	PIN, COTTER 1/16 X 3/4	2
13	120590	NUT, HEX 10-24 GR2 ZN	4
14	120600	WASHER, LOCK #10 X 21/64 X 3/6	4
15	170530	BOLT, CRG 3/8-16 X 1"	5
16	212510	BUMPER, RUBBER	4
17	215800	PIN, CLEVIS 1/4 X 1 5/8	2
18	012410	BOLT, CRG 5/16-18 X 3/4"	2
19	518711	PIN WLDT, DOOR WHITE(SHOWN) (TO 05/17)	2
	626650	PIN WLDT, DOOR WHITE (AFTER 05/17)	
20	581830	SHIELD WLDT, RH (SHOWN) (TO 01/20)	1
	617420	SHIELD WLDT, RH (AFTER 01/20)	
21	581870	PLATE, MTG, MAIN	1
22	581890	SHIELD WLDT, LH (SHOWN) (TO 01/20)	1
	617450	SHIELD WLDT, LH (AFTER 01/20)	
23	581930	GUARD, RUBBER PTO	2
24	581940	MOUNT WLDT, LH (SHOWN) (TO 01/20)	1
	625720	MOUNT WLDT, LH (AFTER 01/20)	
25	582020	MOUNT WLDT, RH	1
26	583540	ANGLE, SHIELD	1
27	584430	ANGLE, BACKING	4
28	584440	ANGLE, BACKING	2
29	610870	SHIELD, FILLER RH (SHOWN) (TO 01/20)	1
	619970	SHIELD, FILLER RH (AFTER 01/20)	
30	611530	SHIELD, FILLER	1
31	991120	SCREW, RHMS 10-24 X 3/4 GR2 SLOTTED ZN	4
32	E504003	LATCH, RUBBER	2
33	JN10212	SCREW, FLG 5/16-18 X 3/4 GR5 ZN HEX	4
34	MP904602	RIVET, POP .188	28

 ROLL FEEDER ASSEMBLY, 20" HYDRAULIC (WITHOUT AUGER FEEDER)

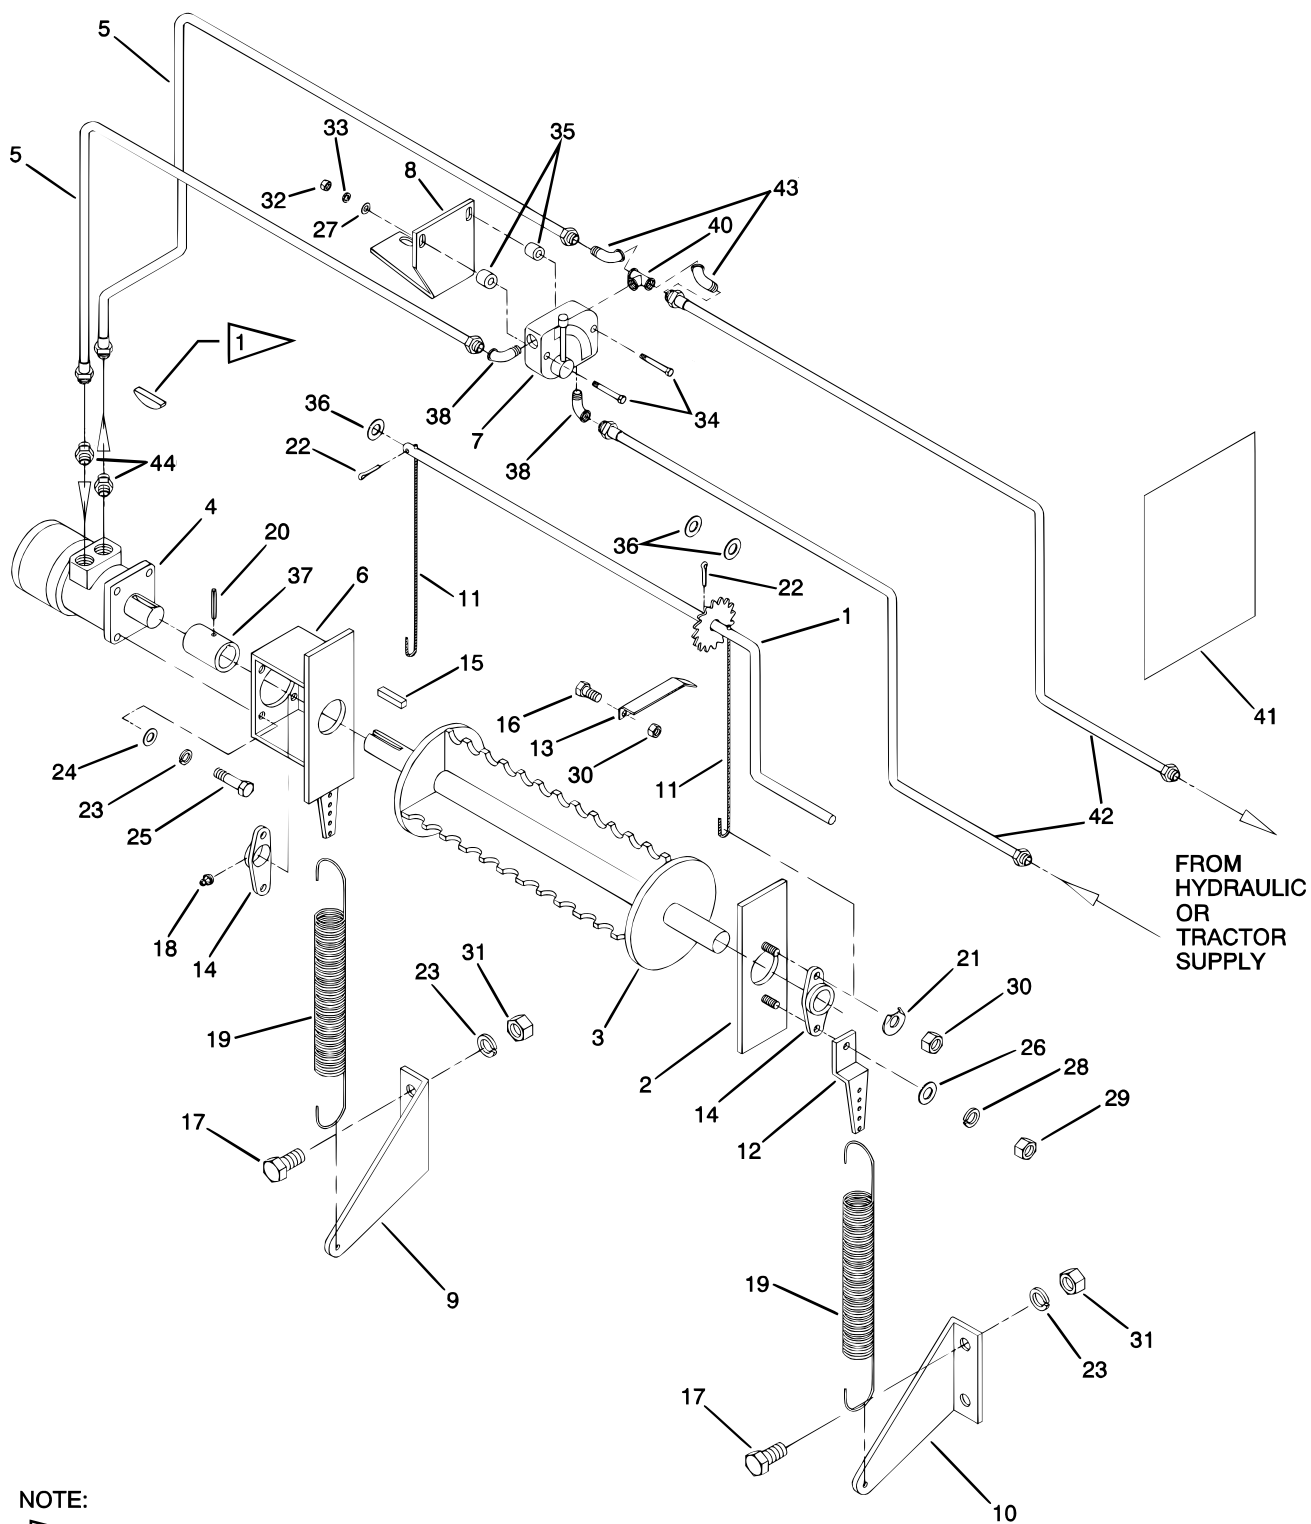


NOTE:

1 INCLUDED WITH MOTOR, P/N 006180.


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	007960	CRANK ASSY	1
2	013330	PLATE, SLIDING ROLL	1
3	013340	ROTOR WELD ASSY, R.F.	1
4	585100	MOTOR, HYD. 12 CU. IN.	1
5	585390	HOSE ASSY, HYD. 1/2 NPT	2
6	160130	MOTOR MOUNT WELD.	1
7	585130	VALVE ASSY, HYD. FLOW	1
8	213000	BRACKET, FLOW CONTROL	1
9	366920	BRACKET, LEFT LOWER	1
10	366930	BRACKET, RIGHT LOWER	1
11	007880	CABLE, ROLL FEED ADJUST.	2
12	007900	BRACKET, UPPER SPRING	1
13	007930	LOCK, ROLL FEED RATCHET	1
14	011200	BEARING, ROLL FEED	2
15	011530	KEY, PAR. 1/4 SQ. X 1-1/4	1
16	012140	BOLT, HHCS 5/16-18 X 3/4	1
17	012260	BOLT, HHCS 3/8-16 X 1	4
18	013170	ZERK, 1/8 NPT SH. GREASE	2
19	017200	SPRING, ROLL FEED	2
20	018920	PIN, ROLL 1/4 X 1-3/4	1
21	019050	WASHER, SPECIAL LOCK	2
22	020700	PIN, COTTER 5/32 X 1	2
23	021180	WASHER, LOCK 3/8 INCH	8
24	021190	WASHER, FLAT 3/8 STD.	8
25	022420	BOLT, HHCS 3/8-16 X 3/4	4
26	022920	WASHER, FLAT 5/16 STD.	4
27	023260	WASHER, FLAT 1/4 STD.	2
28	023620	WASHER, LOCK 5/16 INCH	4
29	023630	NUT, HEX 5/16-18	4
30	025670	NUT, HEX LOCK 5/16-18	3
31	027260	NUT, HEX 3/8-16	4
32	027660	NUT, HEX 1/4-20	2
33	029440	WASHER, LOCK 1/4 INCH	2
34	031560	BOLT, HHCS 1/4-20 X 2-1/2	2
35	033460	SPACER, 0.375 ID X 0.28 LG	2
36	035210	WASHER, FLAT 5/8 SAE	4
37	160140	COLLAR, SHAFT COUPLER	1
38	MP32.03799	ELBOW, HYD. STL. 1/2 INCH NPTF	2
39	166250	FITTING, HYD. NIPPLE	2
40	585150	ADAPTER, TEE	1
41	367230	INSTRUCTIONS, HYD. R.F.	1
42	591960	HOSE ASSY, 1/2 X 120 NPT	2
43	551560	ELBOW	2
44	MP32.02101	FITTING	2

 ROLL FEEDER, 20" HYDRAULIC (WITH AUGER FEEDER)

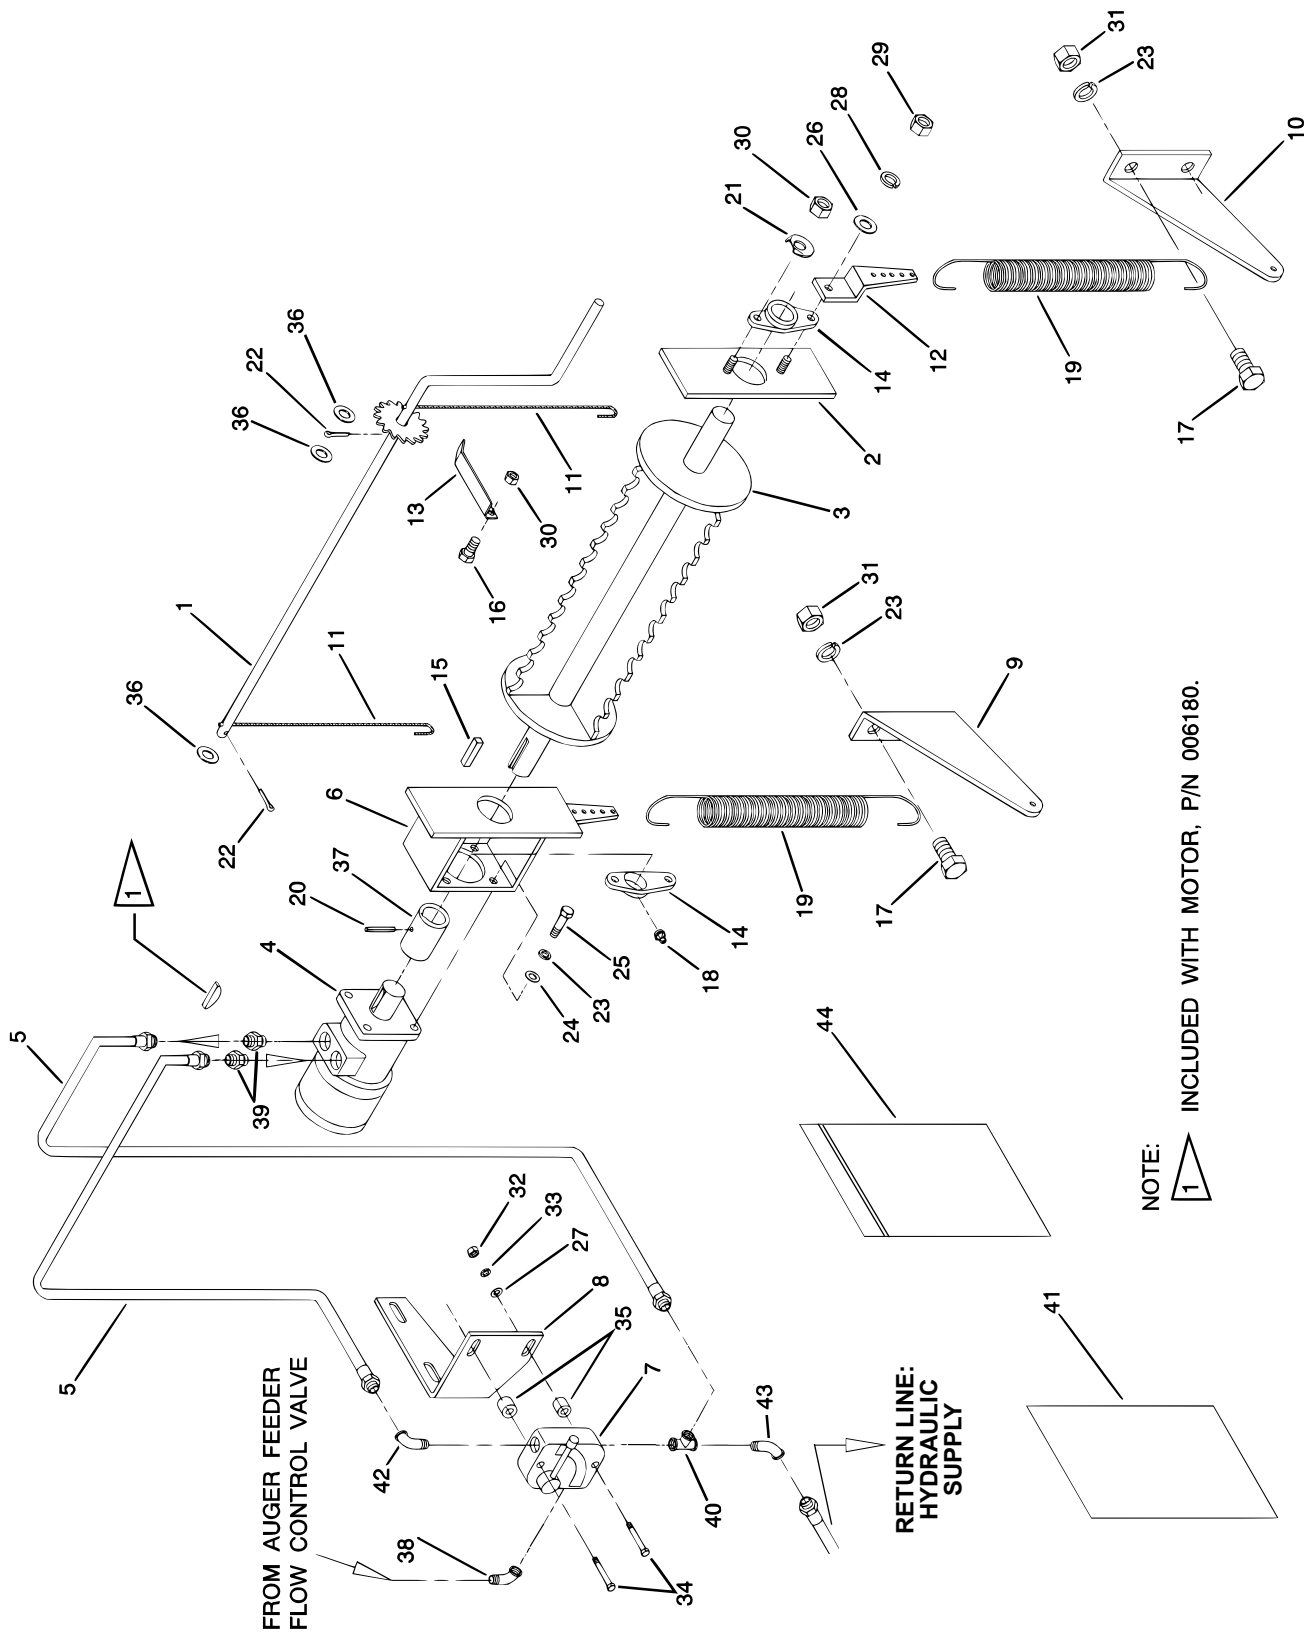


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	007960	CRANK ASSY	1
2	013330	PLATE, SLIDING ROLL	1
3	013340	ROTOR WELD ASSY. R.F.	1
4	585120	MOTOR, HYD. 12 CU. IN.	1
5	580960	HOSE ASSY, HYD. 1/2 NPT	2
6	160130	MOTOR MOUNT WELD	1
7	585130	VALVE ASSY, HYD. FLOW	1
8	212660	BRACKET, FLOW CONTROL	1
9	366920	BRACKET, LEFT LOWER	1
10	366930	BRACKET, RIGHT LOWER	1
11	007880	CABLE, ROLL FEED ADJUST.	2
12	007900	BRACKET, UPPER SPRING	1
13	007930	LOCK, ROLL FEED RATCHET	1
14	011200	BEARING, ROLL FEED	2
15	011530	KEY, PAR. 1/4 SQ. X 1-1/4	1
16	012140	BOLT, HHCS 5/16-18 X 3/4	1
17	012260	BOLT, HHCS 3/8-16 X 1	4
18	013170	ZERK, 1/8 NPT SH. GREASE	2
19	017200	SPRING, ROLL FEED	2
20	018920	PIN, ROLL 1/4 X 1-3/4	1
21	019050	WASHER, SPECIAL LOCK	2
22	020700	PIN, COTTER 5/32 X 1	2
23	021180	WASHER, LOCK 3/8 INCH	8
24	021190	WASHER, FLAT 3/8 STD.	8
25	022420	BOLT, HHCS 3/8-16 X 3/4	4
26	022920	WASHER, FLAT 5/16 STD.	4
27	023260	WASHER, FLAT 1/4 STD.	2
28	023620	WASHER, LOCK 5/16 INCH	4
29	023630	NUT, HEX 5/16-18	4
30	025670	NUT, HEX LOCK 5/16-18	3
31	027260	NUT, HEX 3/8-16	4
32	027660	NUT, HEX 1/4-20	2
33	029440	WASHER, LOCK 1/4 INCH	2
34	031560	BOLT, HHCS 1/4-20 X 2-1/2	2
35	033460	SPACER, 0.375 ID X 0.28 LG	2
36	035210	WASHER, FLAT 5/8 SAE	4
37	160140	COLLAR, SHAFT COUPLER	1
38	590400	ELBOW, HYD. STL. 1/2 INCH NPTF	1
39	MP32.02101	FITTING, HYD. NIPPLE	2
40	590650	ADAPTER, TEE	1
41	367230	INSTRUCTIONS, HYD. R.F.	1
42	MP32.03794	ELBOW	1
43	551560	ELBOW	1
44	204430	PLASTIC BAG	1

 AUGER FEEDER ROLLERMILL ASSEMBLY

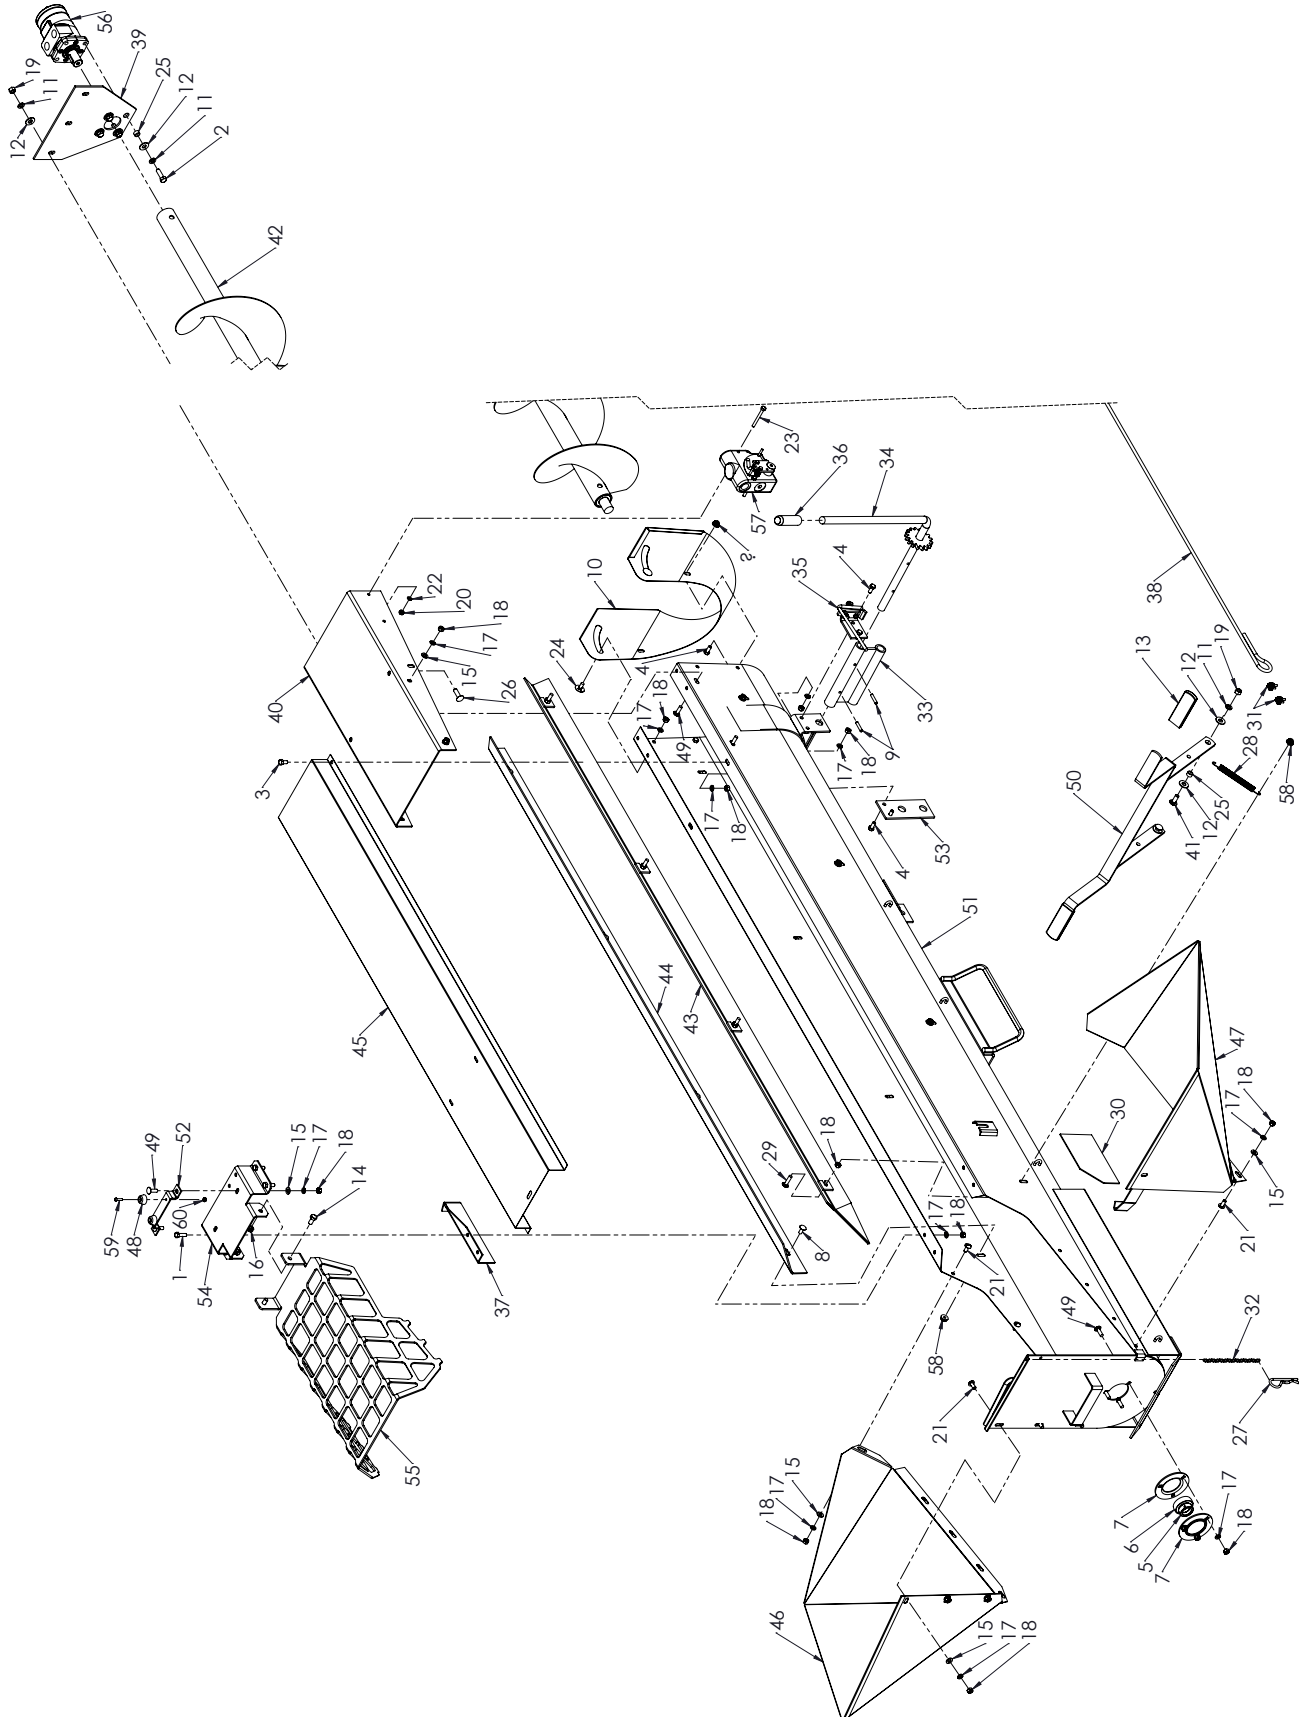


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005900	BOLT, HHCS 5/16-18 x1.00 GR5 ZN	4
2	006690	BOLT, HHCS 3/8-16x1-1/4 GR5 ZN	4
3	006880	BOLT, HHCS 5/16-18x5/8 GR5 ZN	2
4	012140	BOLT, HEX, 5/16" X 3/4" Z5	6
5	012300	COLLAR, LOCK 1.0	1
6	012310	BEARING ADAP.,	1
7	012330	FLG., 7/8-1.0 BRG, 3R BOLT	2
8	012410	BOLT, CRG 5/16-18x3/4 SSN ZN	4
9	012550	PIN, EXPAN 1/4 x 1-1/4 ZN (Tension Roll)	2
10	015060	DOWNSPOUT, AUGER	1
11	021180	WASHER, LOCK 3/8	9
12	021190	WASHER, FLAT 3/8 STD	11
13	021560	GRIP CLUTCH HANDLE	2
14	022420	BOLT, HHCS 3/8-16 X 3/4"	2
15	022920	WASHER, FLAT 5/16 STD	18
16	023060	NUT, LOCK 3/8-16 2 WAY	2
17	023620	WASHER, LOCK 5/16 ZN 5	33
18	023630	NUT, HEX 5/16-18 GR5 ZN	37
19	027260	NUT, HEX 3/8-16 GR5 ZN	5
20	027660	NUT, HEX 1/4-20 GR5 ZN	2
21	028230	SCREW, THMS 5/16-18	12
22	029440	WASHER, LOCK 1/4 SAE	2
23	031560	BOLT, HHCS 1/4-20 X 2-1/2	2
24	033320	BOLT, STEP 5/16-18 x 3/4	2
25	033460	SPACER, .38 IDx.56 ODx.312	6
26	035180	BOLT, CRG 3/8-16 X 1-1/4"	3
27	035830	PIN, COTTER 3/16 x 1-1/2 ZN	1
28	100750	SPRING, EXTENSION	1

 AUGER FEEDER ROLLERMILL ASSEMBLY (CONTINUED)

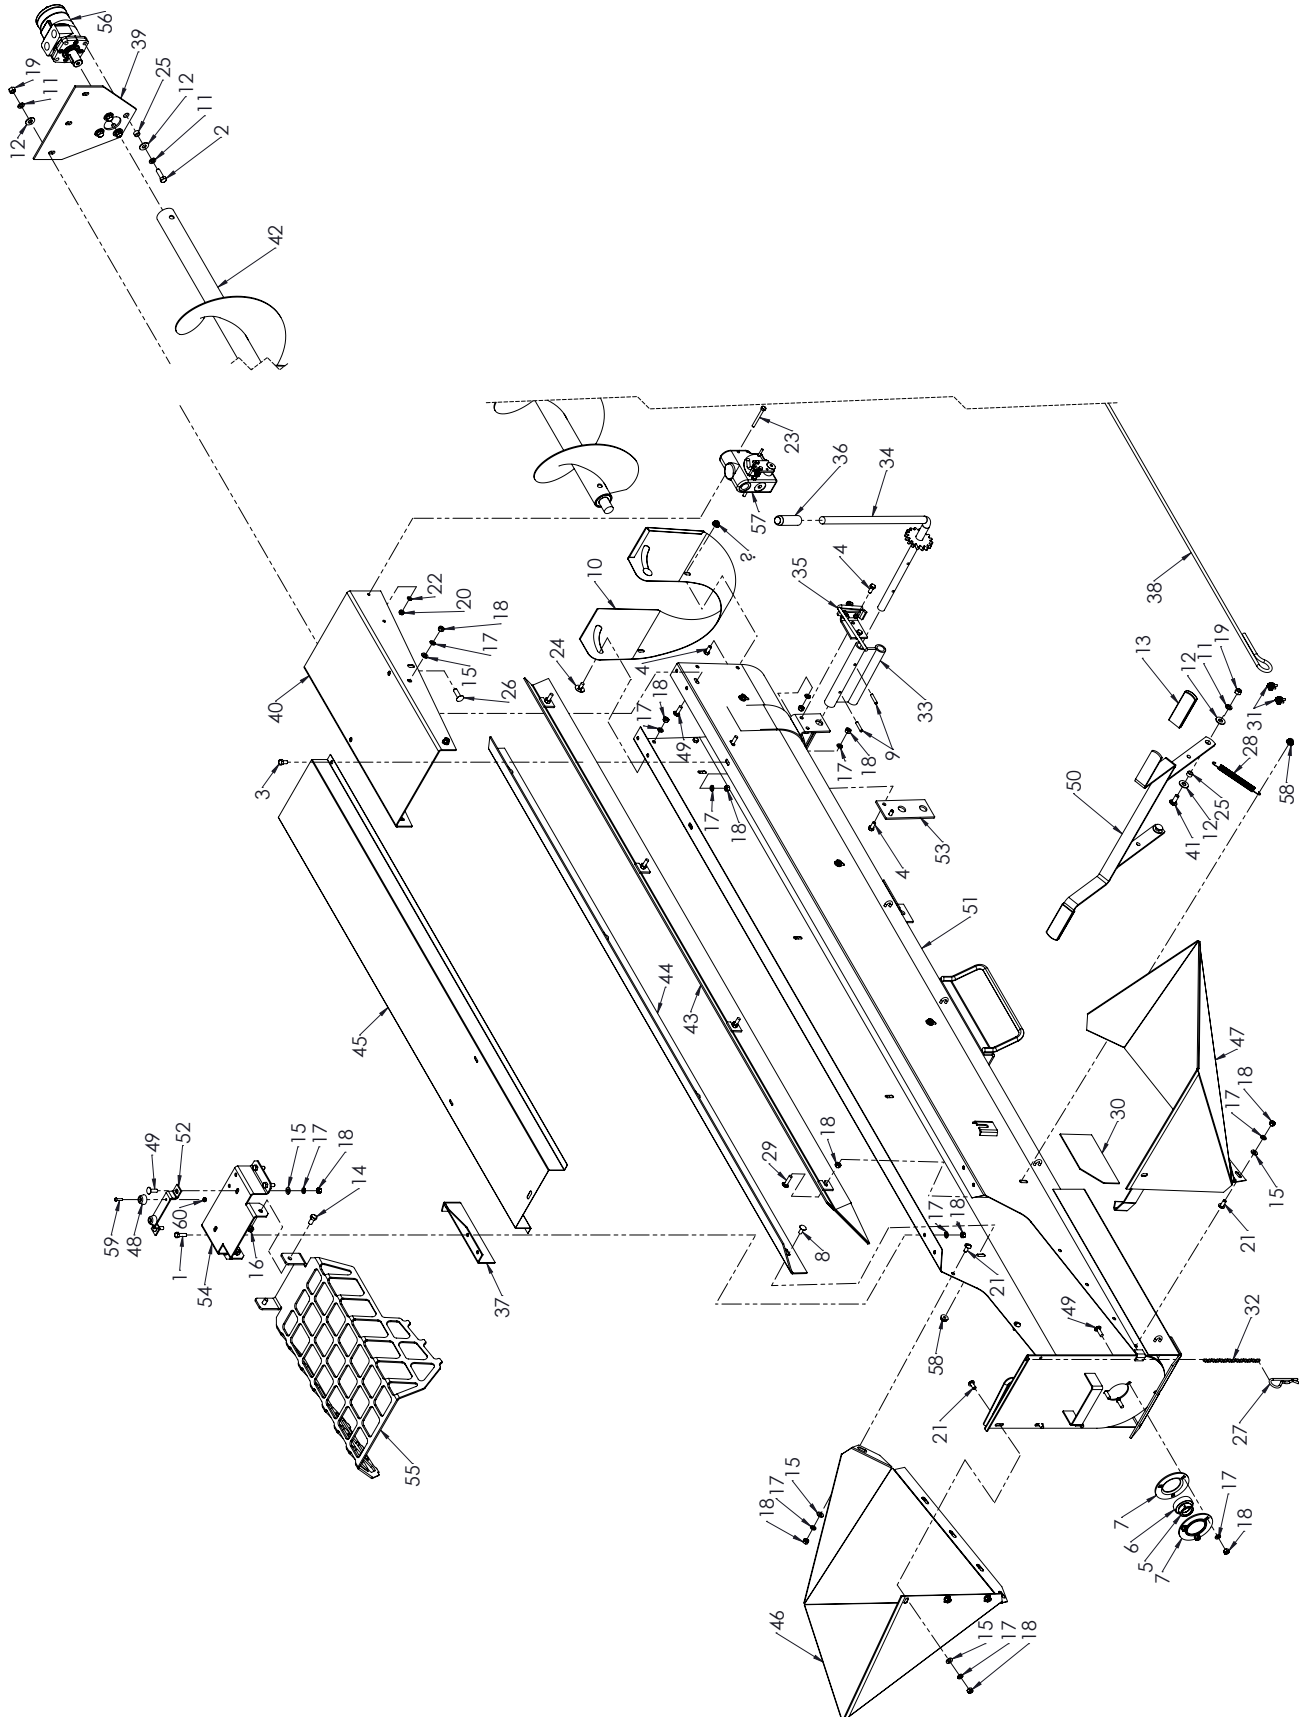


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
29	1111267	RHSSNBOLT 0.3125-18x1x1-N	4
30	123900	SEAL, DRAG	1
31	129260	CLIP, 1/8" WIRE	2
32	143700	CHAIN, #16 SINGLE	1
33	150810	BRACKET WLDT,	1
34	150820	LEVER & RATCHET	1
35	150840	STOP & HOLDER ASSY	1
36	150940	GRIP, HANDLE	1
37	152310	BRACKET, LEVER STOP,	1
38	159830	CABLE, 1/8" X 80"L	1
39	164620	PLATE, HYD MOTOR	1
40	164630	PLATE, TOP HYD	1
41	170530	BOLT, CRG 3/8-16 X 1"	2
42	206760	AUGER WLDT,	1
43	206770	ANGLE WLDT, RH	1
44	206780	ANGLE, LEFT SIDE Drag	1
45	206790	COVER WLDT, UPPER	1
46	210810	HOPPER WLDT,	1
47	210830	HOPPER WLDT, FOLDING	1
48	212510	BUMPER, RUBBER	2
49	254060	BOLT, CRG 5/16-18 X 1"	9
50	528510	HANDLE WLDT,	1
51	528540	HOUSING WLDT, AUGER	1
52	529650	STRAP, RUBBER	1
53	529660	PLATE, TRANSPORT LOCKING	1
54	560660	BRACKET, AUGER	1
55	560670	GRATE, AUGER FEEDER	1
56	585120	MOTOR, HYD 12 CU.IN.	1
57	585130	VALVE ASSY, HYD	1
58	600110	NUT, HFH NYLOC 5/16-18	10
59	991120	SCREW, RHMS 10-24 X 3/4 GR2 SLOTTED	2
60	MP907302	NUT, LOCK 10-24 GR5 ZN NYLON	2

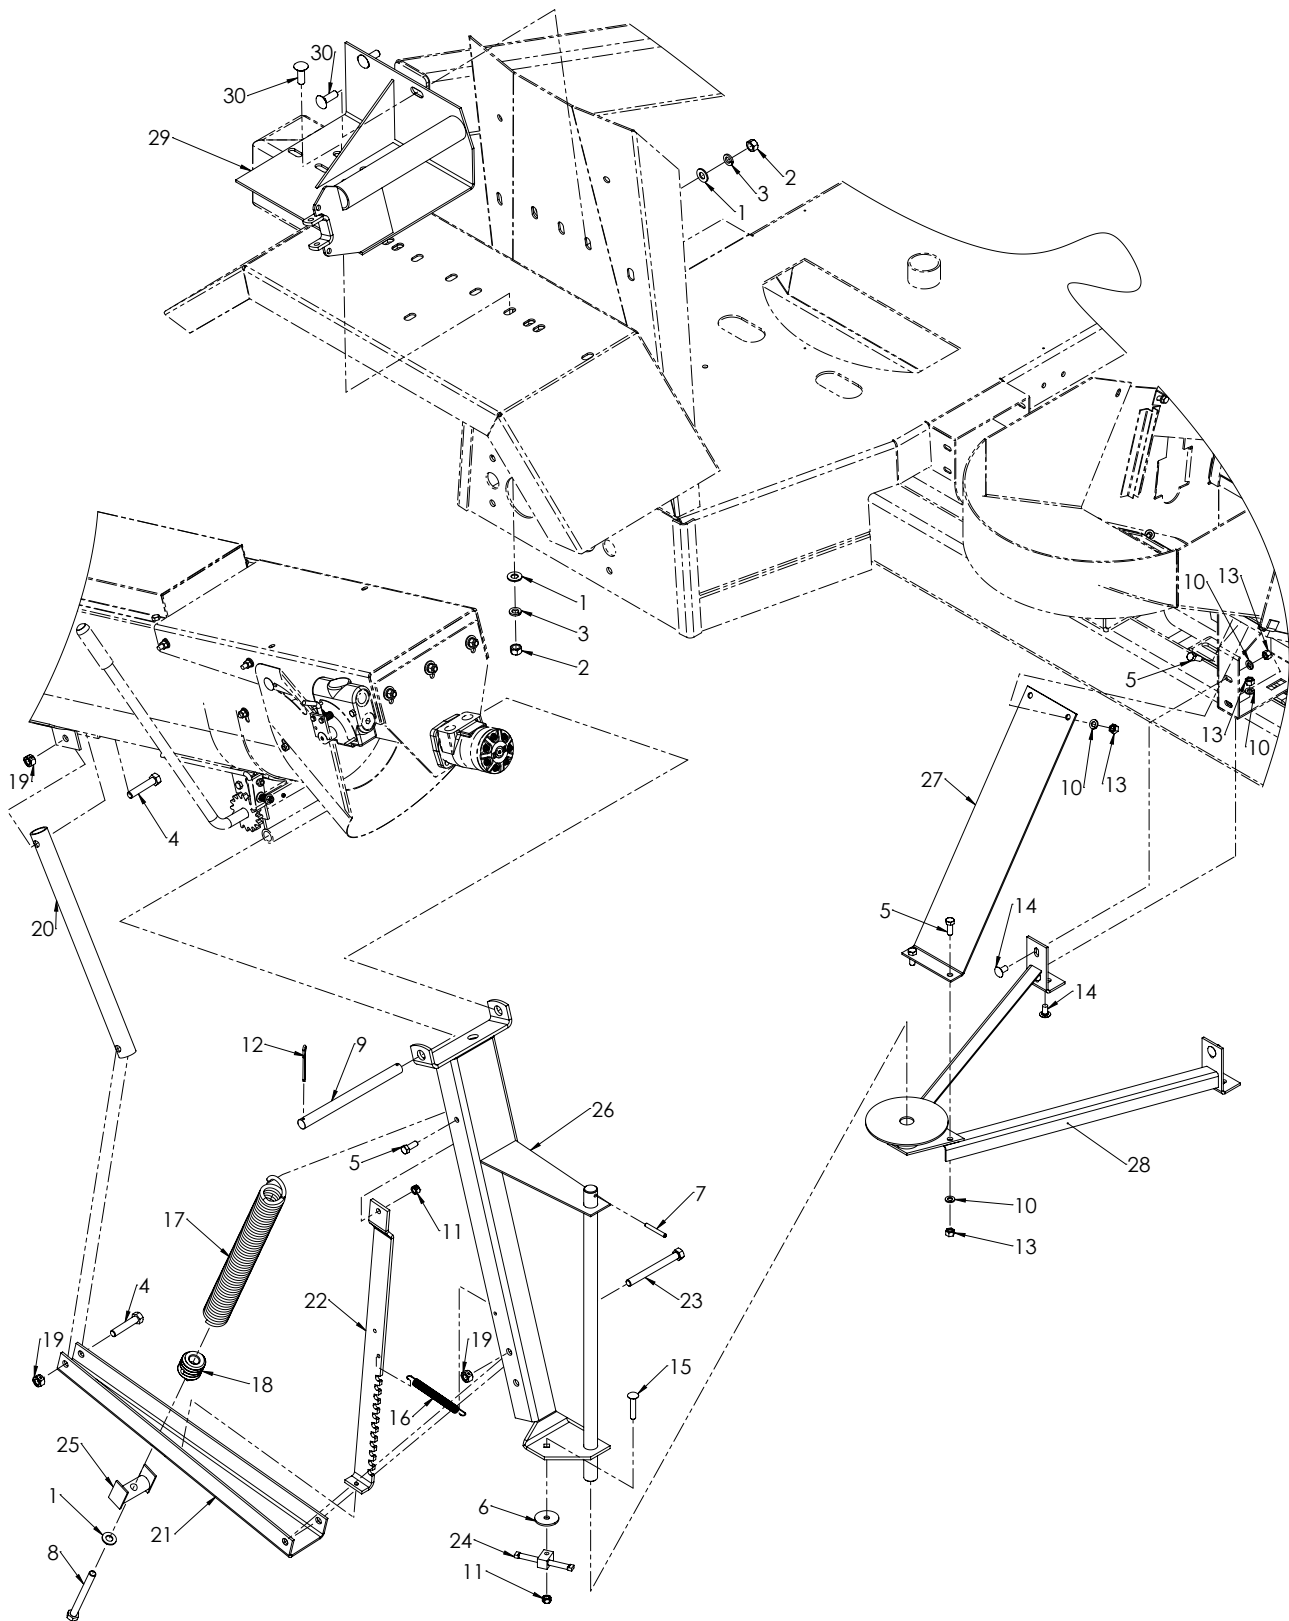 AUGER FEEDER SUPPORT ASSEMBLY


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 1/2 STD	5
2	005360	NUT, HEX 1/2-13	4
3	005370	WASHER, LOCK 1/2	4
4	007080	HBOLT 0.5000-13x2.5x1.25-N	2
5	012260	BOLT, HHCS 3/8-16 X 1	5
6	012270	WASHER, FLAT	1
7	013600	PIN, ROLL .25 x 2	1
8	013800	BOLT, HHCS 1/2-13 x 5 Gr5 ZN	1
9	015120	PIN, DRAG	1
10	021180	WASHER, LOCK 3/8	10
11	023060	NUT, LOCK 3/8-16 2 WAY	2
12	026630	1/4 x 2 COTTER PIN	2
13	027260	NUT, HEX 3/8-16 GR5 ZN	10
14	032840	BOLT, CRG 3/8-16 x 3/4 SSN Gr5 ZN	6
15	041450	BOLT, CRG 3/8-16 x 2.00 SSN Gr5 ZN	1
16	100750	SPRING, EXTENSION	1
17	113470	SPRING, EXTENSION	1
18	113490	NUT, SPRING	1
19	127890	NUT, HEX LOCK 1/2-13 TOP LOCK	3
20	131960	VERTICAL LINK SPRING	1
21	152870	CHANNEL, LOWER	1
22	152880	BAR, RATCHET	1
23	160350	HBOLT 1/2-13 x 5.00" GR5 ZN	1
24	160560	HANDLE ASSY,	1
25	161540	PIN WLDT, PIVOT	1
26	206730	ADJ. ARM WLDT	1
27	377840	STRAP, REINF. MILL	1
28	560230	SUPPORT WLDT,	1
29	560260	MOUNT WLDT, 5105	1
30	E096046	BOLT, CRG 1/2-13 X 1-1/2	4

 HYDRAULIC TANK ASSEMBLY

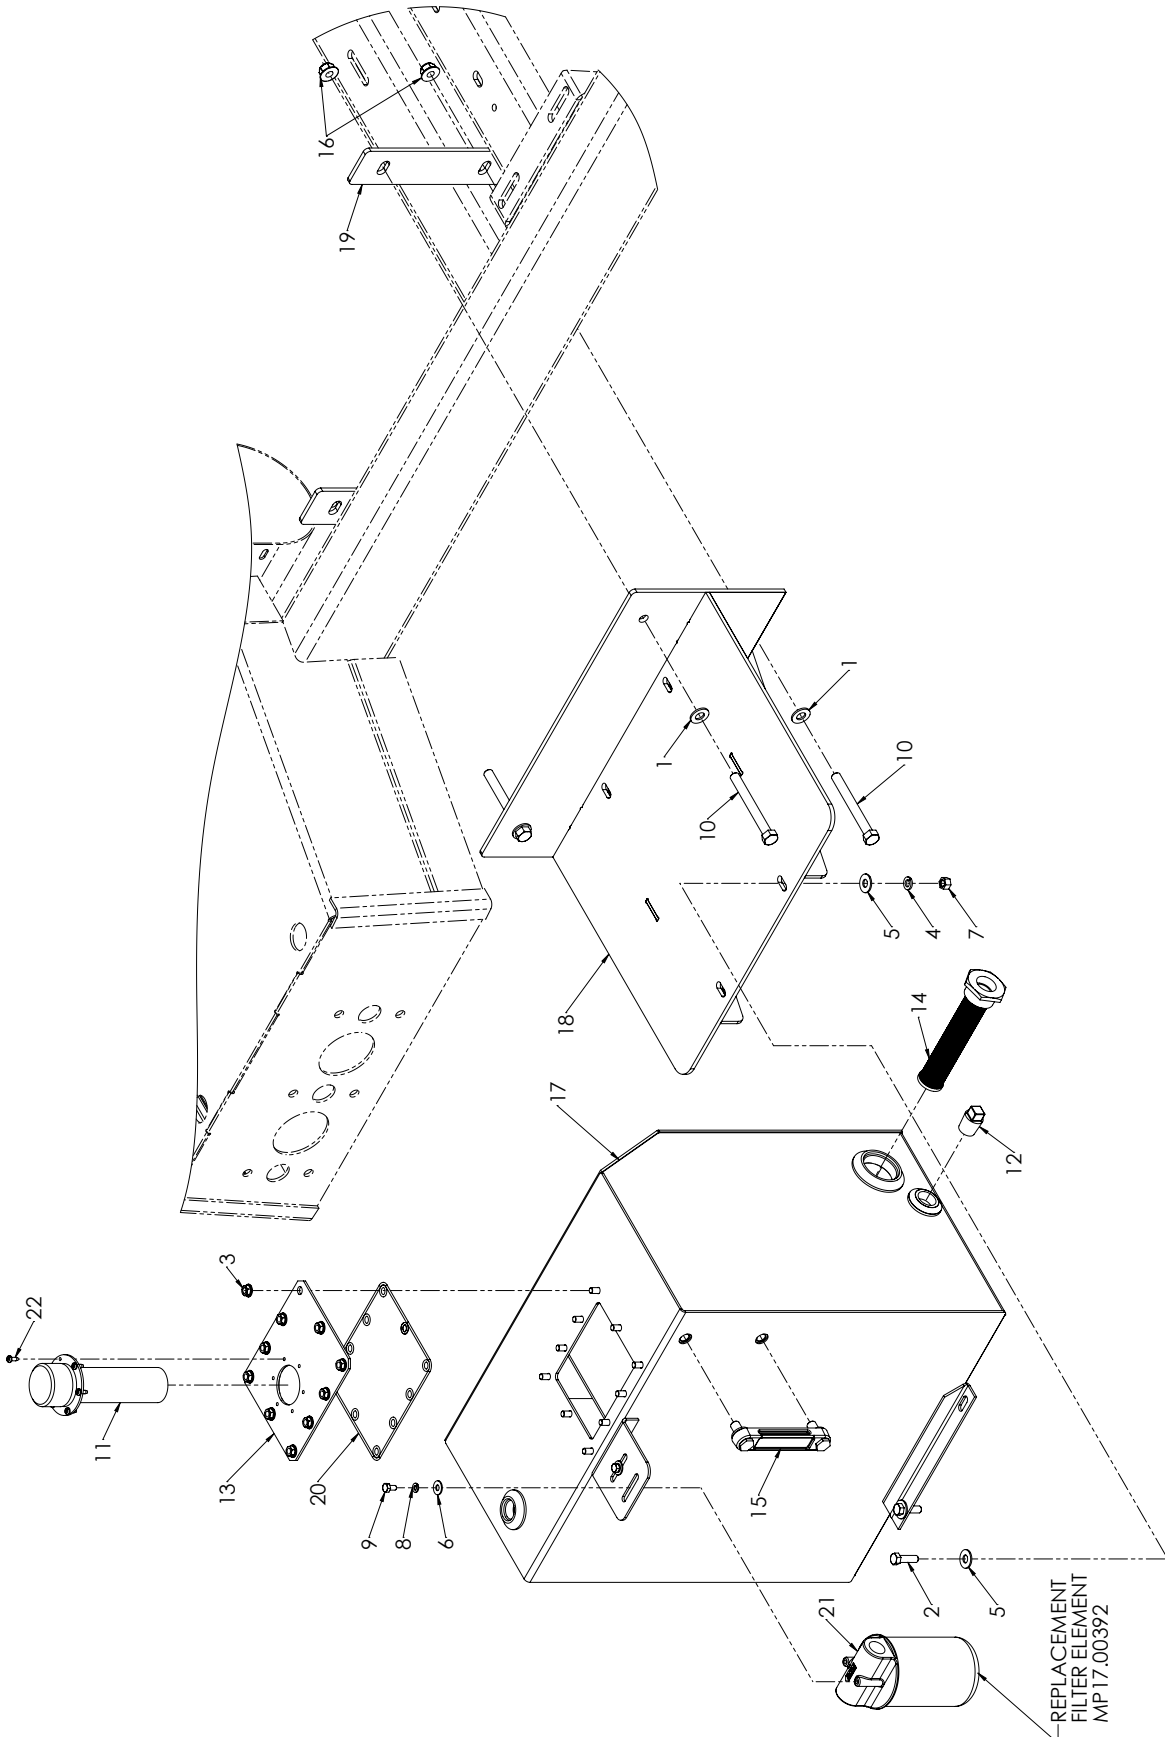


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 1/2 STD	4
2	006690	BOLT, HHCS 3/8-16x1-1/4 GR5 ZN	4
3	020190	Nut, Lock 5/16-18 Gr5 ZN Hex FLG	10
4	021180	WASHER, LOCK 3/8	4
5	021190	WASHER, FLAT 3/8 STD	8
6	023260	WASHER, FLAT 1/4 STD	2
7	027260	NUT, HEX 3/8-16 GR5 ZN	4
8	029440	WASHER, LOCK 1/4 SAE	2
9	029450	BOLT, HHCS 1/4-20 x 1/2	2
10	030420	HBOLT 1/2-13 x 4-1/2" GR5 ZN	4
11	165880	FILLER-BREATHER,	1
12	165960	PLUG, MAGNETIC	1
13	166400	COVER, HYD. TANK	1
14	585450	STRAINER, TANK MOUNT	1
15	596790	GAUGE, SIGHT/TEMP	1
16	600140	NUT, HFH NYLOC 1/2-13	4
17	611550	TANK WLDT,	1
18	611580	MOUNT WELDMENT,	1
19	611620	PLATE, MOUNTING	2
20	961960	PERMATIX, 13 OZ.	1
21	MP17.00391	FILTER ASSEMBLY	1
22	P98341	SCREW, PHTS 10-24x1/2 ZN	6

 AUGER FEEDER & SWING HYDRAULIC MOTOR KITS

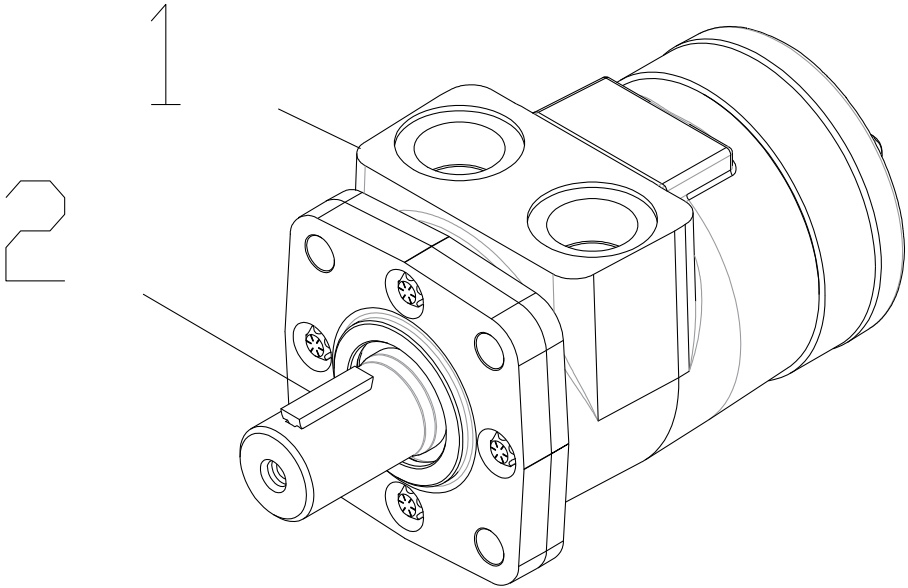


ITEMNO.	PARTNUMBER	DESCRIPTION	QTY.
1	586440	MOTOR, HYD. 20 CI DISPLACEMENT -10 SAE O-RING (SWING)	-
1	585120	MOTOR, HYD. 12 CI DISPLACEMENT SAE-10 ORB (AUGER/ROLL FEEDERS)	-
2	006180	KEY, WOODRUFF 1/4 X 1 #15 (808)	-
3	1780808	SEAL KIT, EATON 'H'-SERIES MOTOR #60023 (NOT SHOWN)	-
3	243040	SEAL KIT, ROSS TRW 'MG'-SERIES MOTOR #SK000090 (NOT SHOWN)	-

 DISCHARGE HYDRAULIC MOTOR KIT - 576240

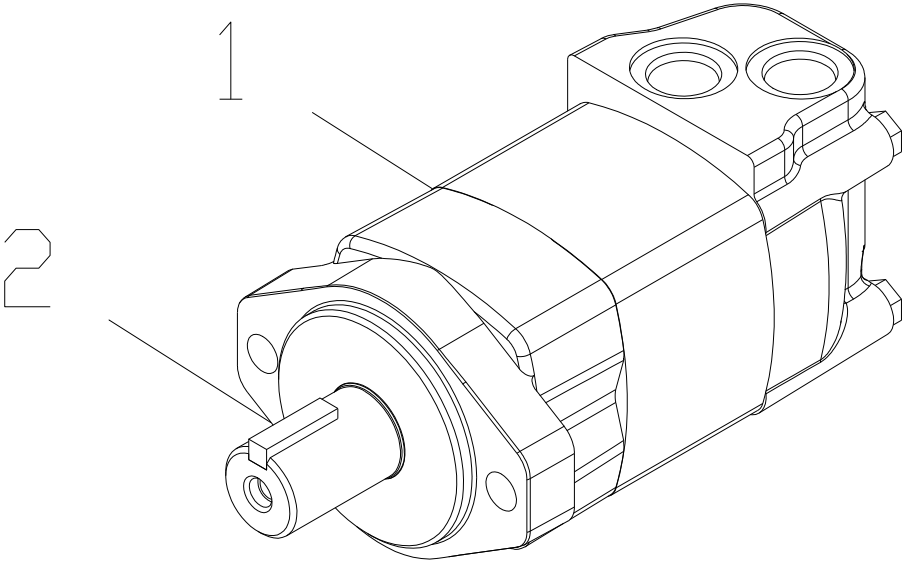


ITEMNO.	PARTNUMBER	DESCRIPTION	QTY.
1	576240	MOTOR, HYD. 20 CI DISPLACEMENT SAE-10 O-RING	-
2	020220	KEY, SQUARE 5/16 X 1-1/4	-
3	G214101	SEAL KIT, EATON '2000'-SERIES MOTOR #61258-000 (NOT SHOWN)	-

 AUGER FEEDER & ROLL FEED FLOW CONTROL VALVE ASSEMBLY - 585130

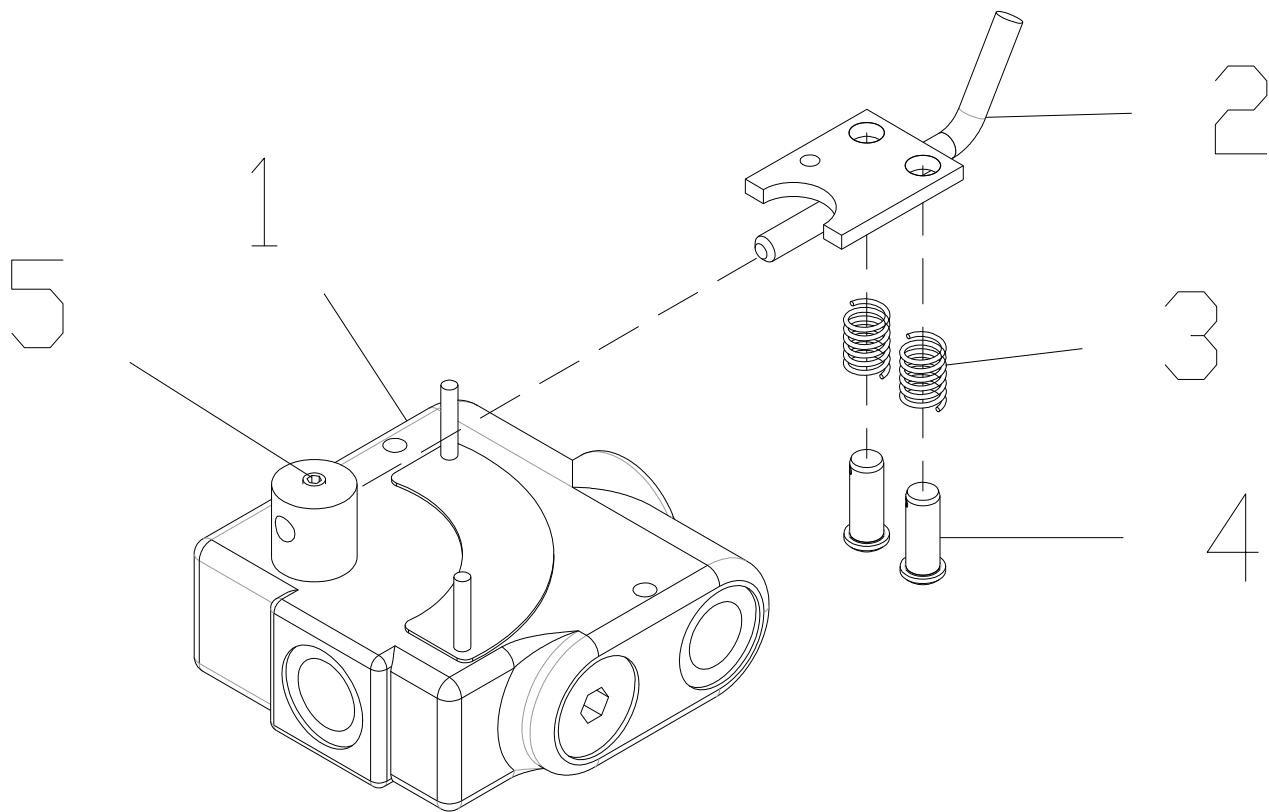


ITEMNO.	PARTNUMBER	DESCRIPTION	QTY.
1	585140	VALVE, FLOW CONTROL W/O HANDLE	1
1	161500	LEVER WLDT, HYD. CONTROL	1
2	042390	SPRING, COMPRESSION 0.415 X 0.50 X 1.045 ZN	2
3	012172	PIN, CLEVIS 3/8 X 1	2
3	E672451	SCREW, SHSS 1/4-20 X 1/4	1

 HOPPER & DRIVE ASSEMBLY, MECHANICAL DISCHARGE

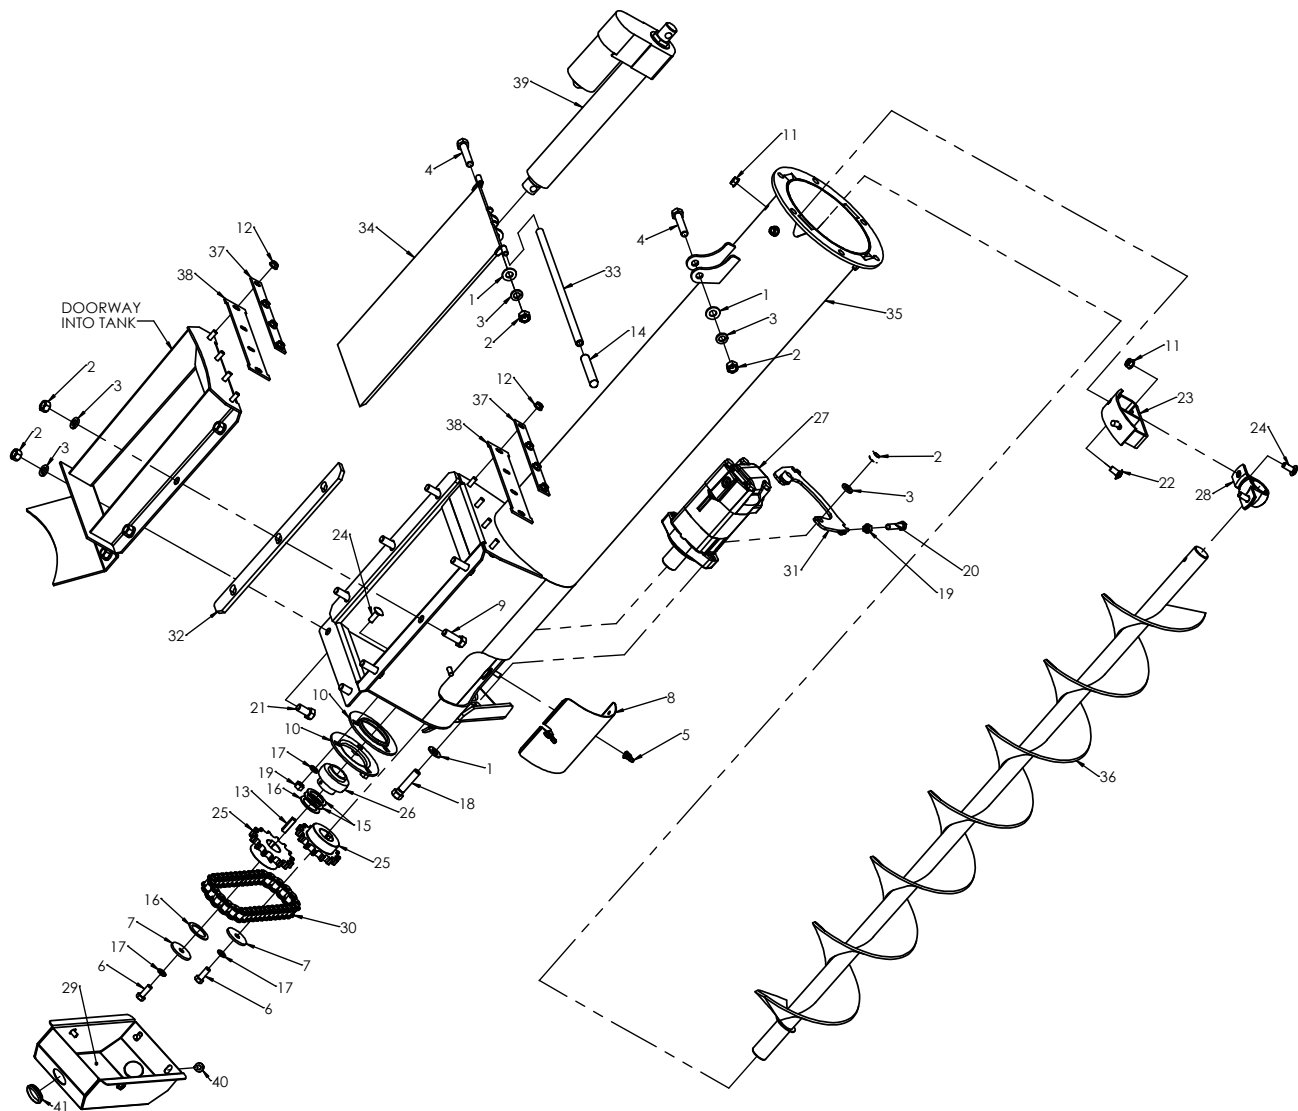


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 1/2 STD	4
2	005360	NUT, HEX 1/2-13	12
3	005370	WASHER, LOCK 1/2	12
4	007080	HBOLT 0.5000-13x2.5x1.25-N	2
5	009790	NUT, WING 5/16-18 TYPE A ZN	2
6	012260	BOLT, HHCS 3/8-16 X 1	2
7	012270	WASHER, FLAT	2
8	012521	DOOR	1
9	014770	BOLT, HHCS .50-13X1.50	6
10	019150	FLG, 1-1/8 BRG	2
11	020180	NUT, LOCK 3/8-16 Gr5 ZN HEX FLG	4
12	020190	NUT, LOCK 5/16-18 GR5 ZN HEX FLG	8
13	020220	KEY, SQUARE 5/16 X 1-1/4	1
14	020640	GRIP, PLASTIC (RED)	1
	020641	GRIP, PLASTIC (BLACK)	
15	020880	WASHER, FLAT	2
16	020910	WASHER, FLAT	2
17	021180	WASHER, LOCK 3/8	5
18	023950	BOLT, HHCS 1/2-13 x 2 Gr5 ZN	2
19	027260	NUT, HEX 3/8-16 GR5 ZN	5
20	029930	HBOLT 0.3750-16x2.25x2.25-N	2
21	031080	BOLT, HHCS 1/2-13 X 1.00	2
22	032840	BOLT, CRG 3/8-16 x 3/4 SSN Gr5 ZN	2
23	165020	BRACKET WLDT,	1
24	170530	BOLT, CRG 3/8-16 X 1"	5
25	260070	SPROCKET, 60B15	2
26	461780	BEARING ASSY,	1
27	576240	MOTOR, HYD 9.6 CID	1
28	583020	BEARING, 1.25 SPLIT	1
29	583130	SHIELD	1
30	584090	CHAIN	1
31	584860	BRACKET WLDT, MOTOR	1
32	591240	SPACER, DISCHARGE	2
33	591760	TUBE, INDICATOR	1
34	610880	DOOR WELDMENT	1
35	610910	LOWER DISCHARGE	1
36	611120	DIAGONAL AUGER	1
37	611670	FLAT, SEAL REINFORCING	2
38	611680	SEAL, RUBBER	2
39	611850	ACTUATOR, 10" LINEAR	1
40	JN71292	SCREW, FLG 5/16-18 x 1/2 Gr5	4
41	SD205165	PLUG, 1-3/8 X .35	2

 HOPPER & DRIVE ASSEMBLY, DISCHARGE, LOWER

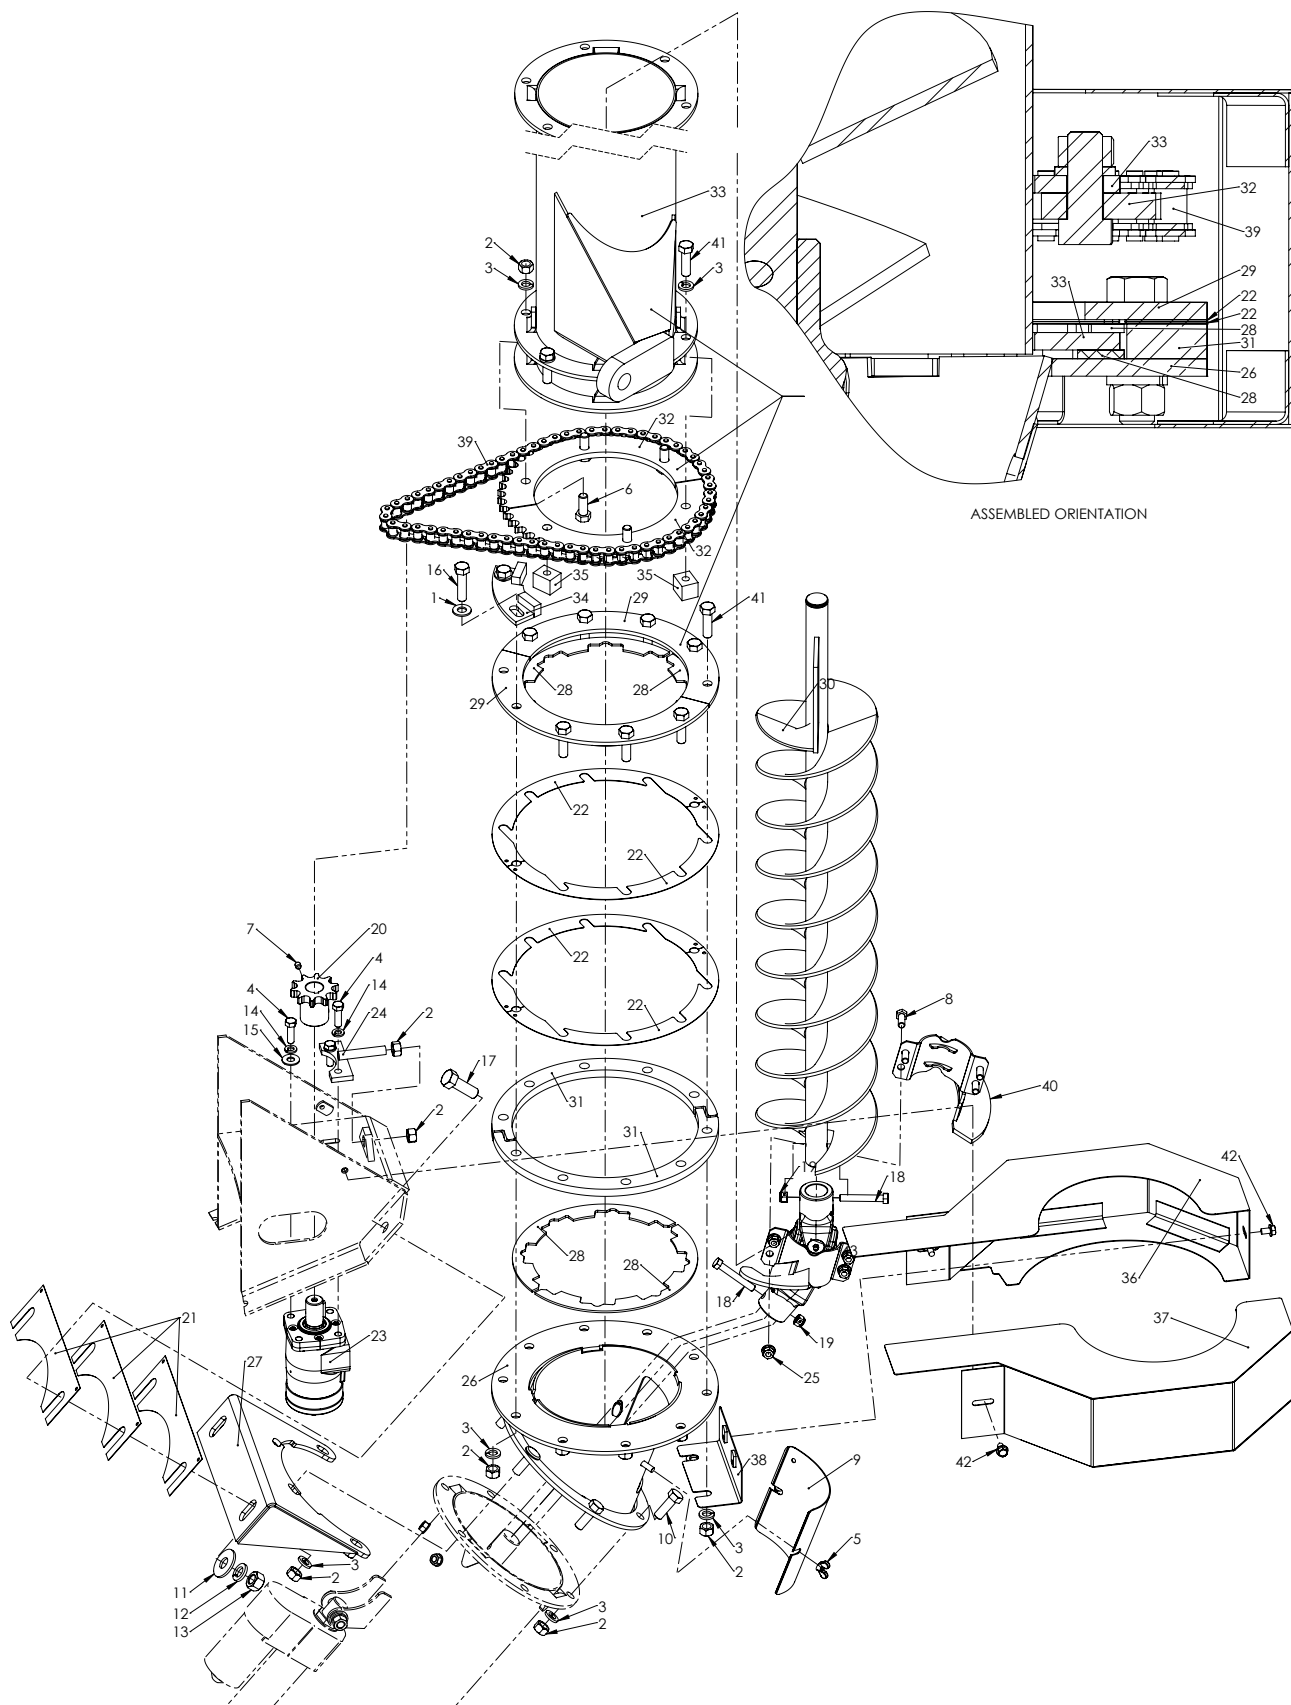


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005200	WASHER, FLAT 1/2 STD	2
2	005360	NUT, HEX 1/2-13	22
3	005370	WASHER, LOCK 1/2	22
4	006690	BOLT, HHCS 3/8-16X1-1/4 GR5 ZN	4
5	009790	NUT, WING 5/16-18 TYPE A ZN	2
6	010730	BOLT, HHCS 1/2-13 X 1-1/4"	4
7	010990	SCREW, HSSS 5/16-18 X 5/16	2
8	012260	BOLT, HHCS 3/8-16 X 1	4
9	012521	DOOR	1
10	014770	BOLT, HHCS .50-13X1.50	4
11	020430	WASHER, FLAT 5/8 STD	2
12	020440	WASHER, LOCK 5/8	2
13	020450	NUT, HEX 5/8-11	2
14	021180	WASHER, LOCK 3/8	4
15	021190	WASHER, FLAT 3/8 STD	2
16	023950	BOLT, HHCS 1/2-13 X 2"	2
17	025100	HBOLT 0.6250-11X1.75X1.75-N	2
18	037630	BOLT, HHCS 3/8-16 X 2-1/2"	2
19	073630	NUT, LOCK 3/8-16	2
20	458500	SPROCKET, 60B10	1
21	582650	SHIM, .030 DISCHARGE	3
22	582670	RING, HALF	4
23	586440	MOTOR, HYD	1
24	586800	TENSIONER WLDT,	1
25	600120	NUT, HFH NYLOC 3/8-16	4
26	611070	TRANSITION WLDT,	1
27	611080	BRACE WLDT,	1
28	611140	WASHER, HALF UHMW	4
29	611150	RING, CLAMP HALF	2
30	611160	AUGER WELDMENT,	1
31	611180	RING, HALF	2
32	611200	SPROCKET, HALF 60A50	2
33	611210	TUBE WLDT,VERTICAL	1
34	611690	BRAKE WLDT,	1
35	611710	BRAKE BLOCK,	2
36	611760	SHIELD WLDT, RIGHT	1
37	611770	SHIELD WLDT, LEFT	1
38	611810	MOUNT WLDT, SHIELD	1
39	612010	CHAIN, ROLLER RC60	1
40	612280	AUGER WLDT, HALF	2
41	1770500	BOLT, HHCS 1/2-13 X 1-3/4"	10
42	JN71292	SCREW, FLG 5/16-18 X 1/2 GR5 ZN HEX	4
43	SD200294	COUPLER JOINT	1

 HOPPER & DRIVE ASSEMBLY, DISCHARGE, UPPER

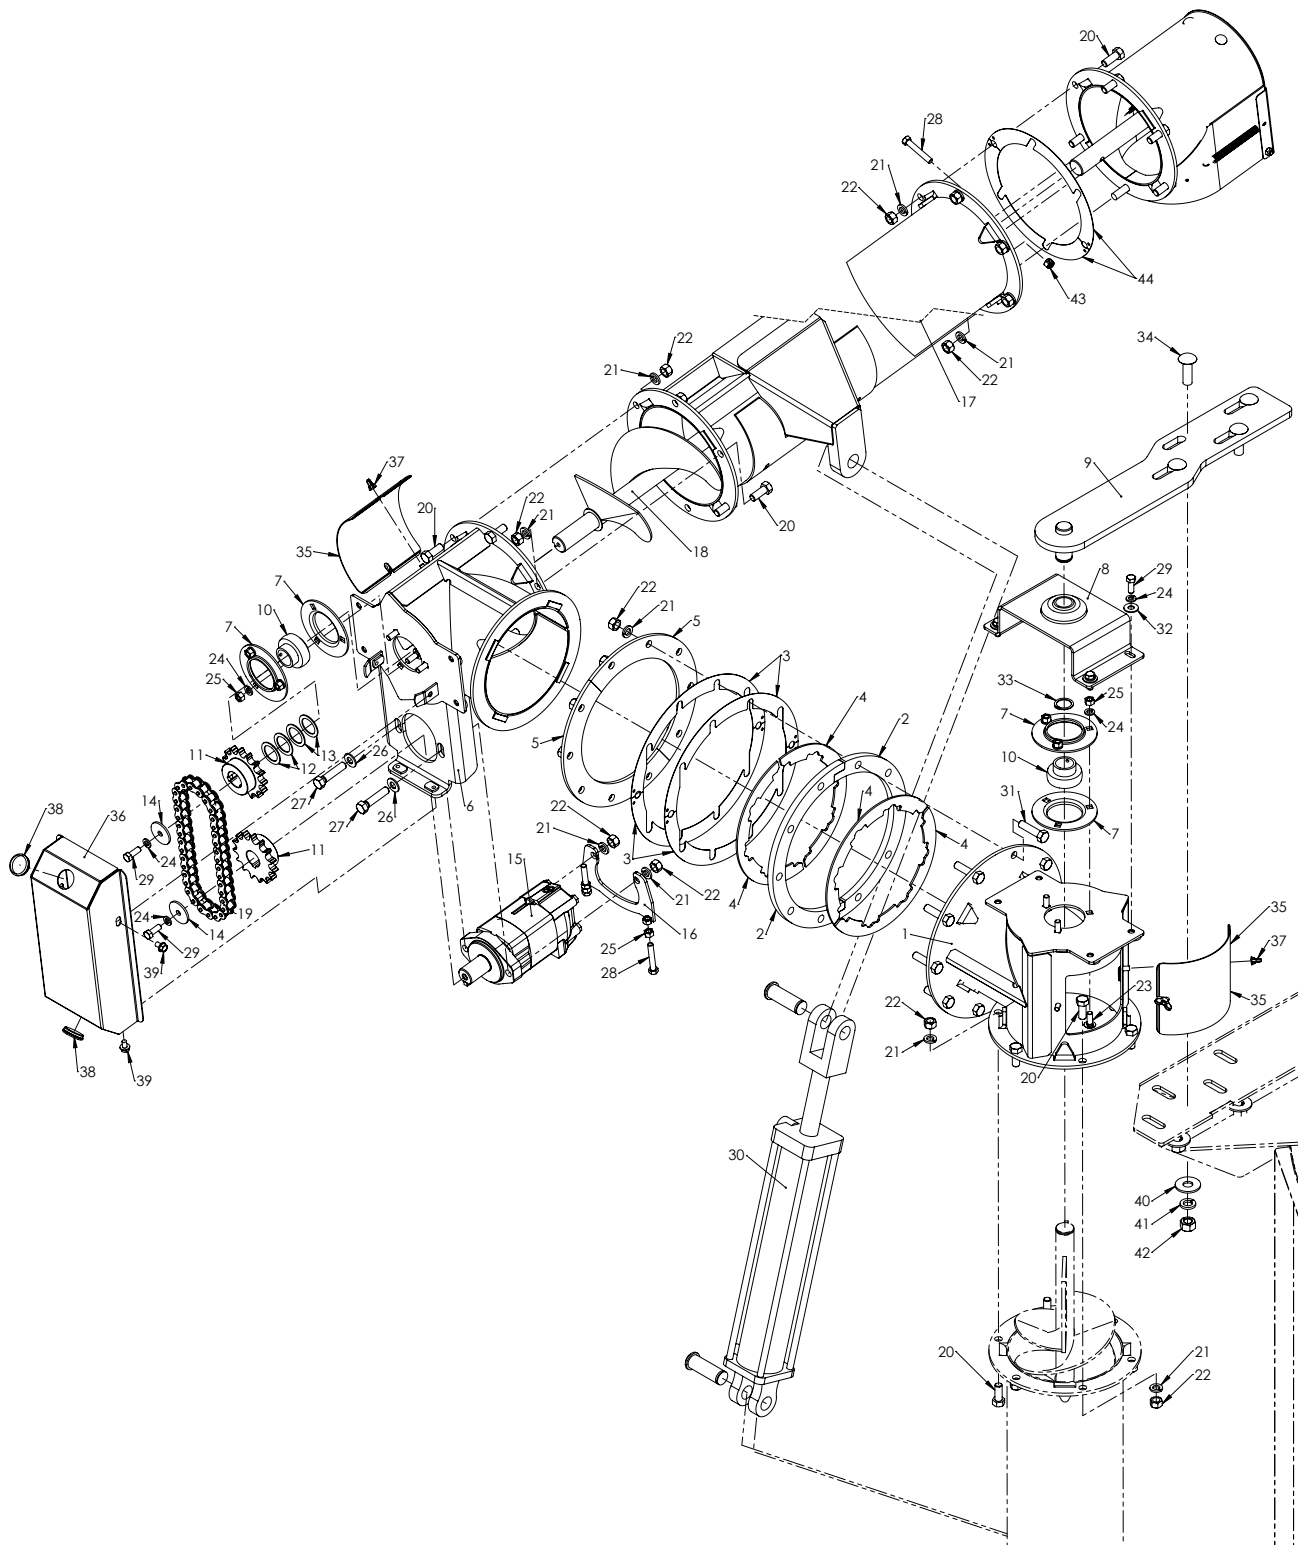


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	611260	ELBOW WELDMENT,	1
2	611180	RING, HALF	2
3	582670	RING, HALF	4
4	611140	WASHER, HALF UHMW	4
5	611150	RING, CLAMP HALF	2
6	611330	ELBOW WELDMENT,	1
7	019150	FLG, 1-1/8 BRG	4
8	611360	SUPPORT WLDT,	1
9	611380	ARM WELDMENT,	1
10	461780	BEARING ASSY,	2
11	260070	SPROCKET, 60B15	2
12	020910	WASHER, FLAT	2
13	020880	WASHER, FLAT	2
14	012270	WASHER, FLAT	2
15	576240	MOTOR, HYD 9.6 CID	1
16	584860	BRACKET WLDT, MOTOR	1
17	611480	TUBE WLDT,	1
18	611440	AUGER WELDMENT,	1
19	584090	CHAIN	1
20	010730	BOLT, HHCS 1/2-13 X 1-1/4"	17
21	005370	WASHER, LOCK 1/2	30
22	005360	NUT, HEX 1/2-13	30
23	170530	BOLT, CRG 3/8-16 X 1"	6
24	021180	WASHER, LOCK 3/8	12
25	027260	NUT, HEX 3/8-16 GR5 ZN	8
26	005200	WASHER, FLAT 1/2 STD	2
27	023950	BOLT, HHCS 1/2-13 x 2 Gr5 ZN	2
28	029930	HBOLT 0.3750-16x2.25x2.25-N	3
29	012260	BOLT, HHCS 3/8-16 X 1	6
30	610470	CYLINDER, HYD.	1
31	023950	BOLT, HHCS 1/2-13 X 2"	10
32	021190	WASHER, FLAT 3/8 STD	4
33	035200	RING, SNAP	1
34	287880	RHSSNBOLT 0.625-11x2x1.5-N	4
35	012521	DOOR	2
36	583130	SHIELD	1
37	009790	NUT, WING 5/16-18 TYPE A ZN	4
38	SD205165	PLUG, 1-3/8 X .35	2
39	JN71292	SCREW, FLG 5/16-18 X 1/2 GR5 ZN HEX	4
40	020430	WASHER, FLAT 5/8 STD	4
41	020440	WASHER, LOCK 5/8	4
42	020450	NUT, HEX 5/8-11	4
43	073630	NUT, LOCK 3/8-16	1
44	612060	SHIM, HALF 10" ID	2

 HOPPER & DRIVE ASSEMBLY, EXTENSION, 3FT (OPTIONAL)

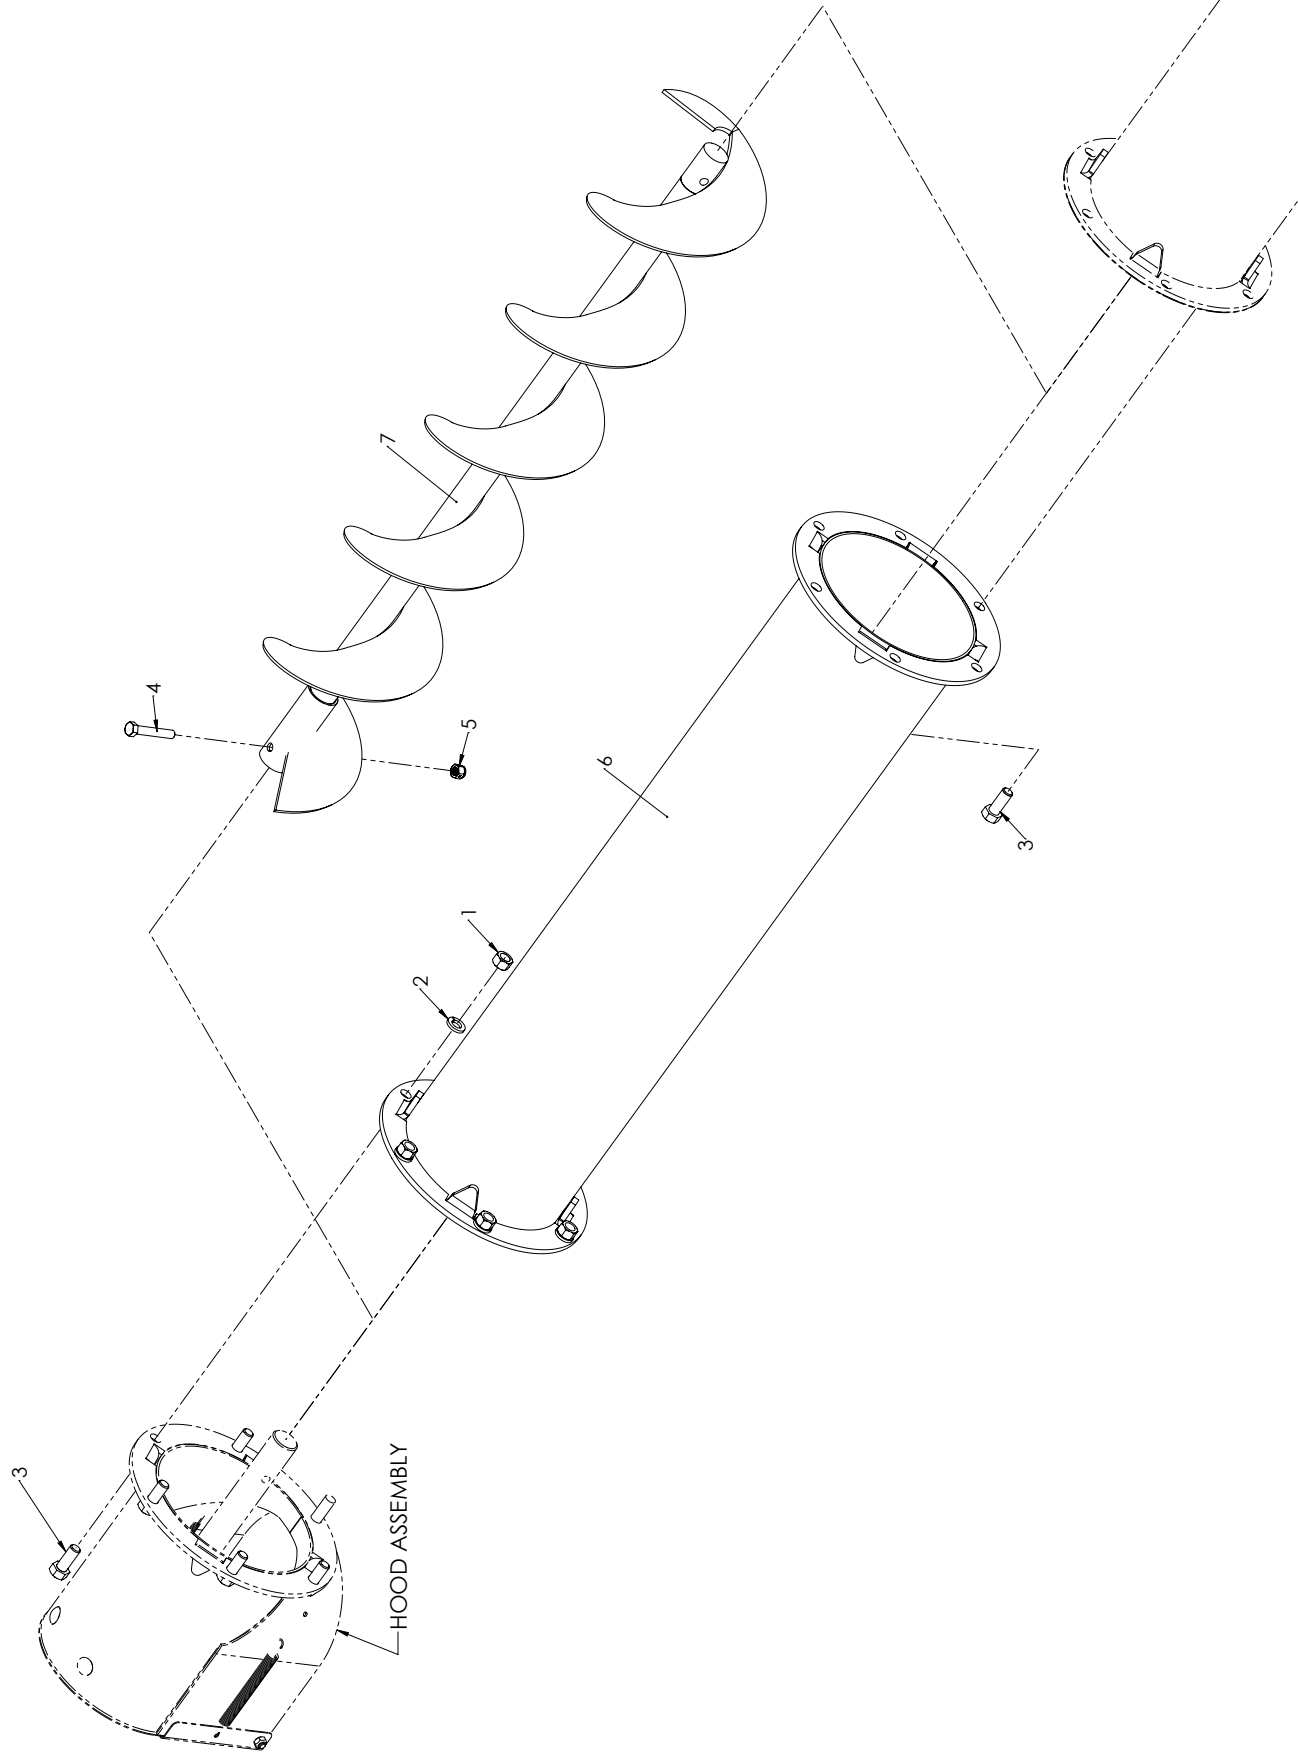


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005360	NUT, HEX 1/2-13	6
2	005370	WASHER, LOCK 1/2	6
3	010730	BOLT, HHCS 1/2-13 X 1-1/4"	6
4	029930	HBOLT 0.3750-16x2.25x2.25-N	1
5	073630	NUT, LOCK 3/8-16	1
6	611880	TUBE WLDT,	1
7	611930	AUGER WLDT,	1

 HOPPER & DRIVE ASSEMBLY, EXTENSION, 6FT (OPTIONAL)

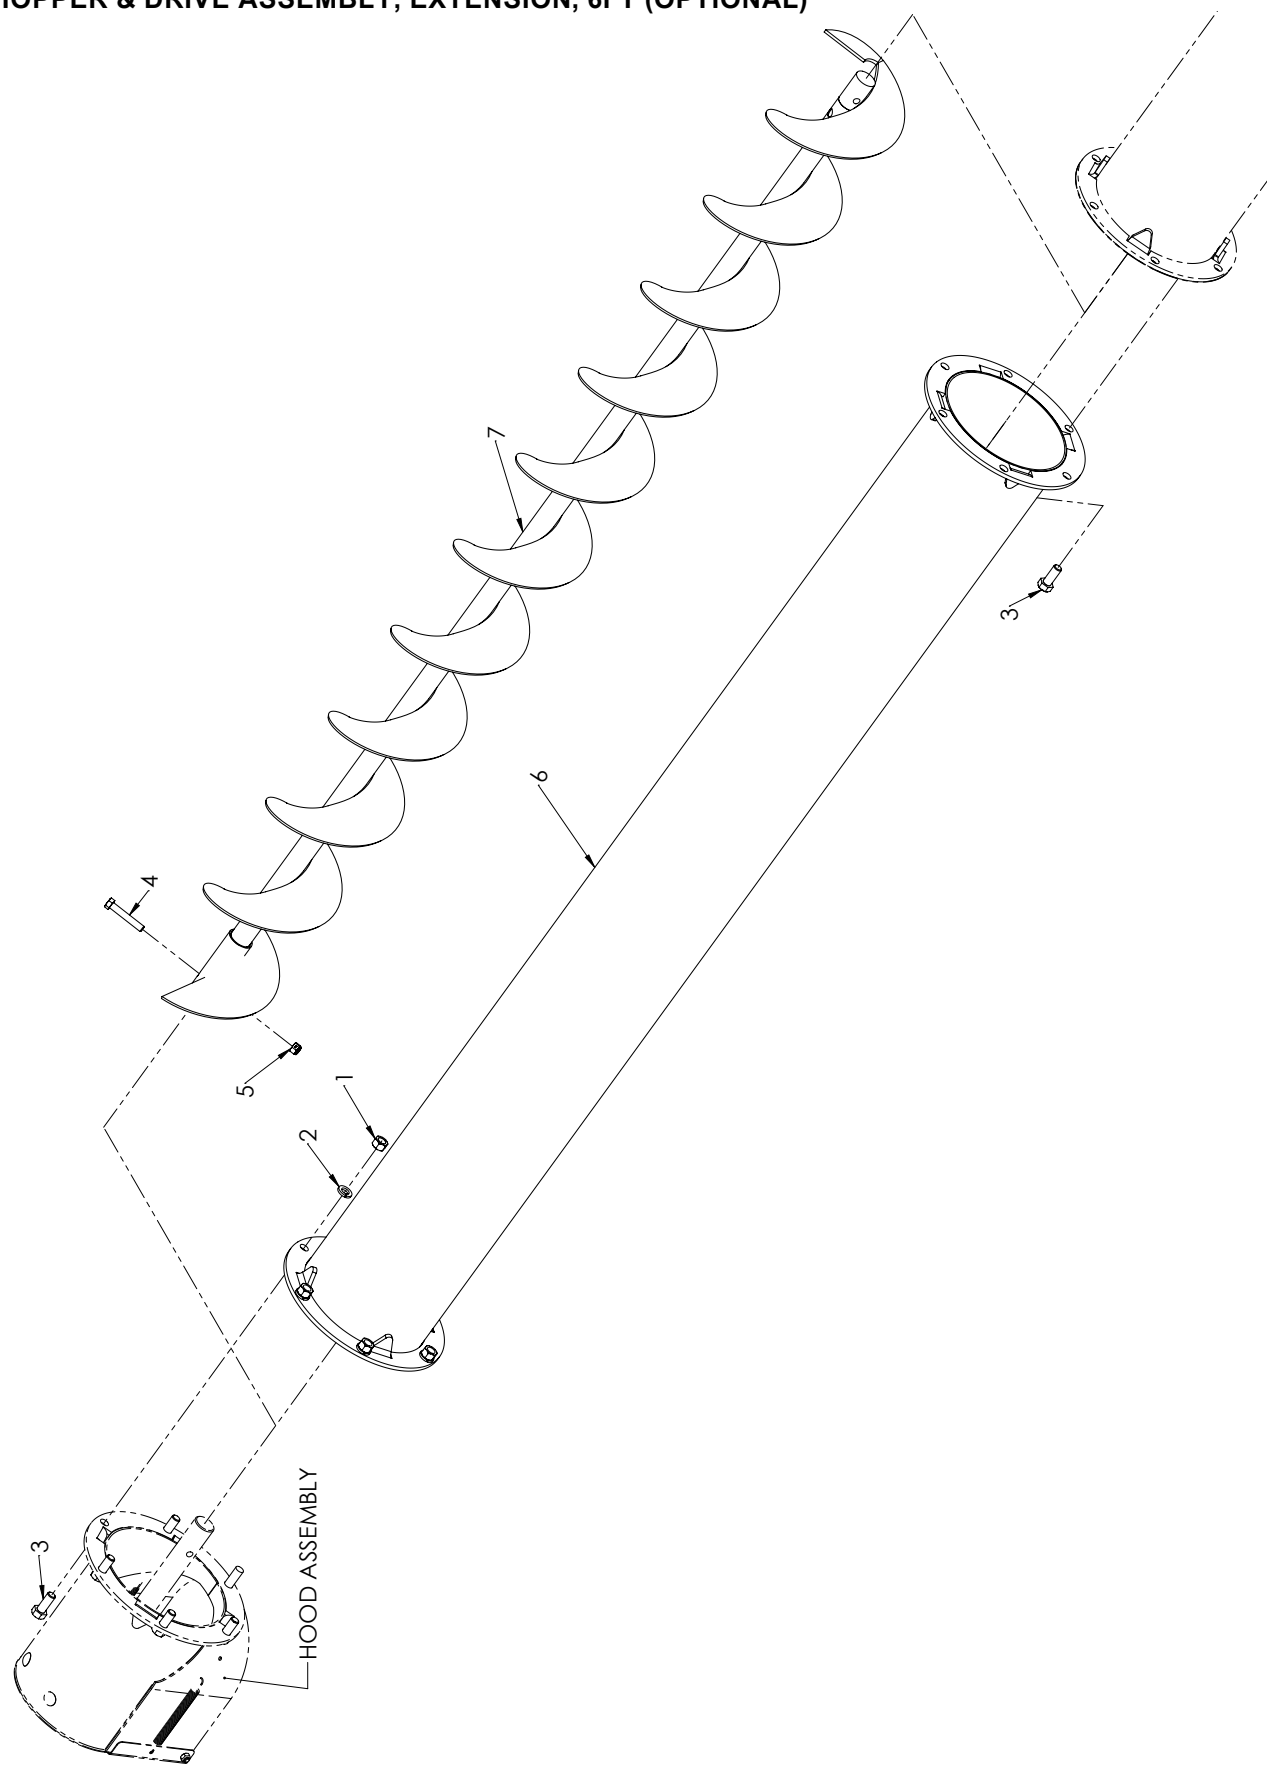


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005360	NUT, HEX 1/2-13	6
2	005370	WASHER, LOCK 1/2	6
3	010730	BOLT, HHCS 1/2-13 X 1-1/4"	6
4	029930	HBOLT 0.3750-16x2.25x2.25-N	1
5	073630	NUT, LOCK 3/8-16	1
6	611860	TUBE WLDT,	1
7	611900	AUGER WLDT,	1

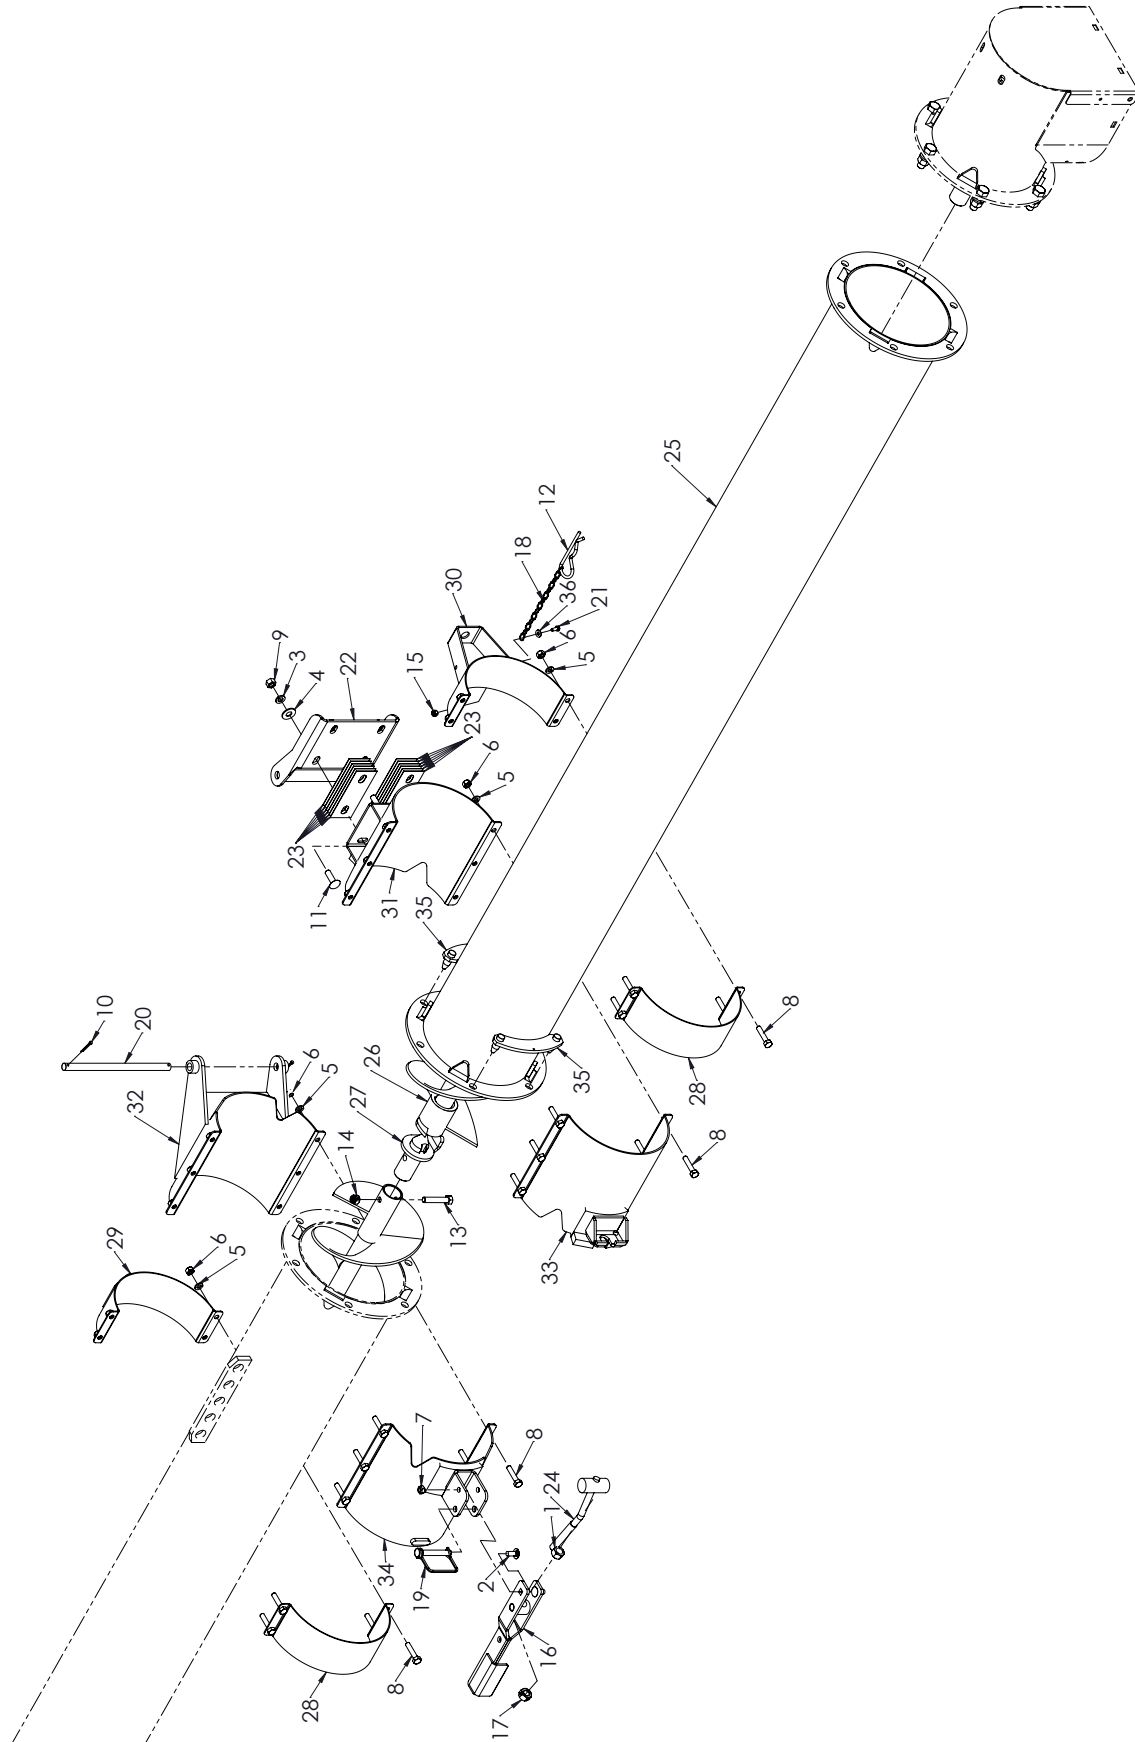 HOPPER & DRIVE ASSEMBLY, EXTENSION, FOLDABLE (OPTIONAL)


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	005360	NUT, HEX 1/2-13	1
2	012410	BOLT, CRG 5/16-18x3/4 SSN ZN	2
3	021180	WASHER, LOCK 3/8	4
4	021190	WASHER, FLAT 3/8 STD	4
5	023620	WASHER, LOCK 5/16	20
6	023630	NUT, HEX 5/16-18 GR5 ZN	20
7	025670	NUT, LOCK 5/16-18 HEX FLG	2
8	025760	BOLT, HHCS 5/16-18x1 1/2	20
9	027260	NUT, HEX 3/8-16 GR5 ZN	4
10	034360	PIN, COTTER, 1/8 X 1.00	2
11	035180	BOLT, CRG 3/8-16 X 1-1/4"	4
12	035830	PIN, COTTER 3/16 X 1-1/2 ZN	1
13	037790	BOLT, HHCS 3/8-16 X 2	1
14	073630	NUT, LOCK 3/8-16	1
15	124300	NUT, LOCK #10-24 HEX GRA	1
16	127830	HANDLE WLDT,	1
17	127890	NUT, HEX LOCK 1/2-13 TOP LOCK	1
18	143700	CHAIN, #16 SINGLE	1
19	143710	PIN, SNAPPER	1
20	144640	PIN, PIVOT	1
21	218300	BOLT, HHMS #10-24x1/2	1
22	586850	HINGE WLDT,	1
23	586880	SHIM, EXT HINGE	12
24	587220	T-BAR WLDT, LATCH	1
25	611860	TUBE WLDT,	1
26	613810	AUGER WLDT,	1
27	613850	COUPLER WLDT, MALE	1
28	613871	BAND, 8" CLAMP	2
29	613880	CLAMP WLDT, PIN	1
30	613900	CLAMP WLDT, FEMALE	1
31	613910	CLAMP WLDT, BASE	1
32	613950	CLAMP WLDT, PIVOT	1
33	613990	CLAMP WLDT, CATCH	1
34	614110	CLAMP WLDT, LATCH	1
35	614120	ANCHOR WLDT, 8"	2
36	W144750056	WASHER, FLAT 7/32 X 1/2 X 3/64	1

 HOPPER & DRIVE ASSEMBLY, HOOD ASSEMBLY

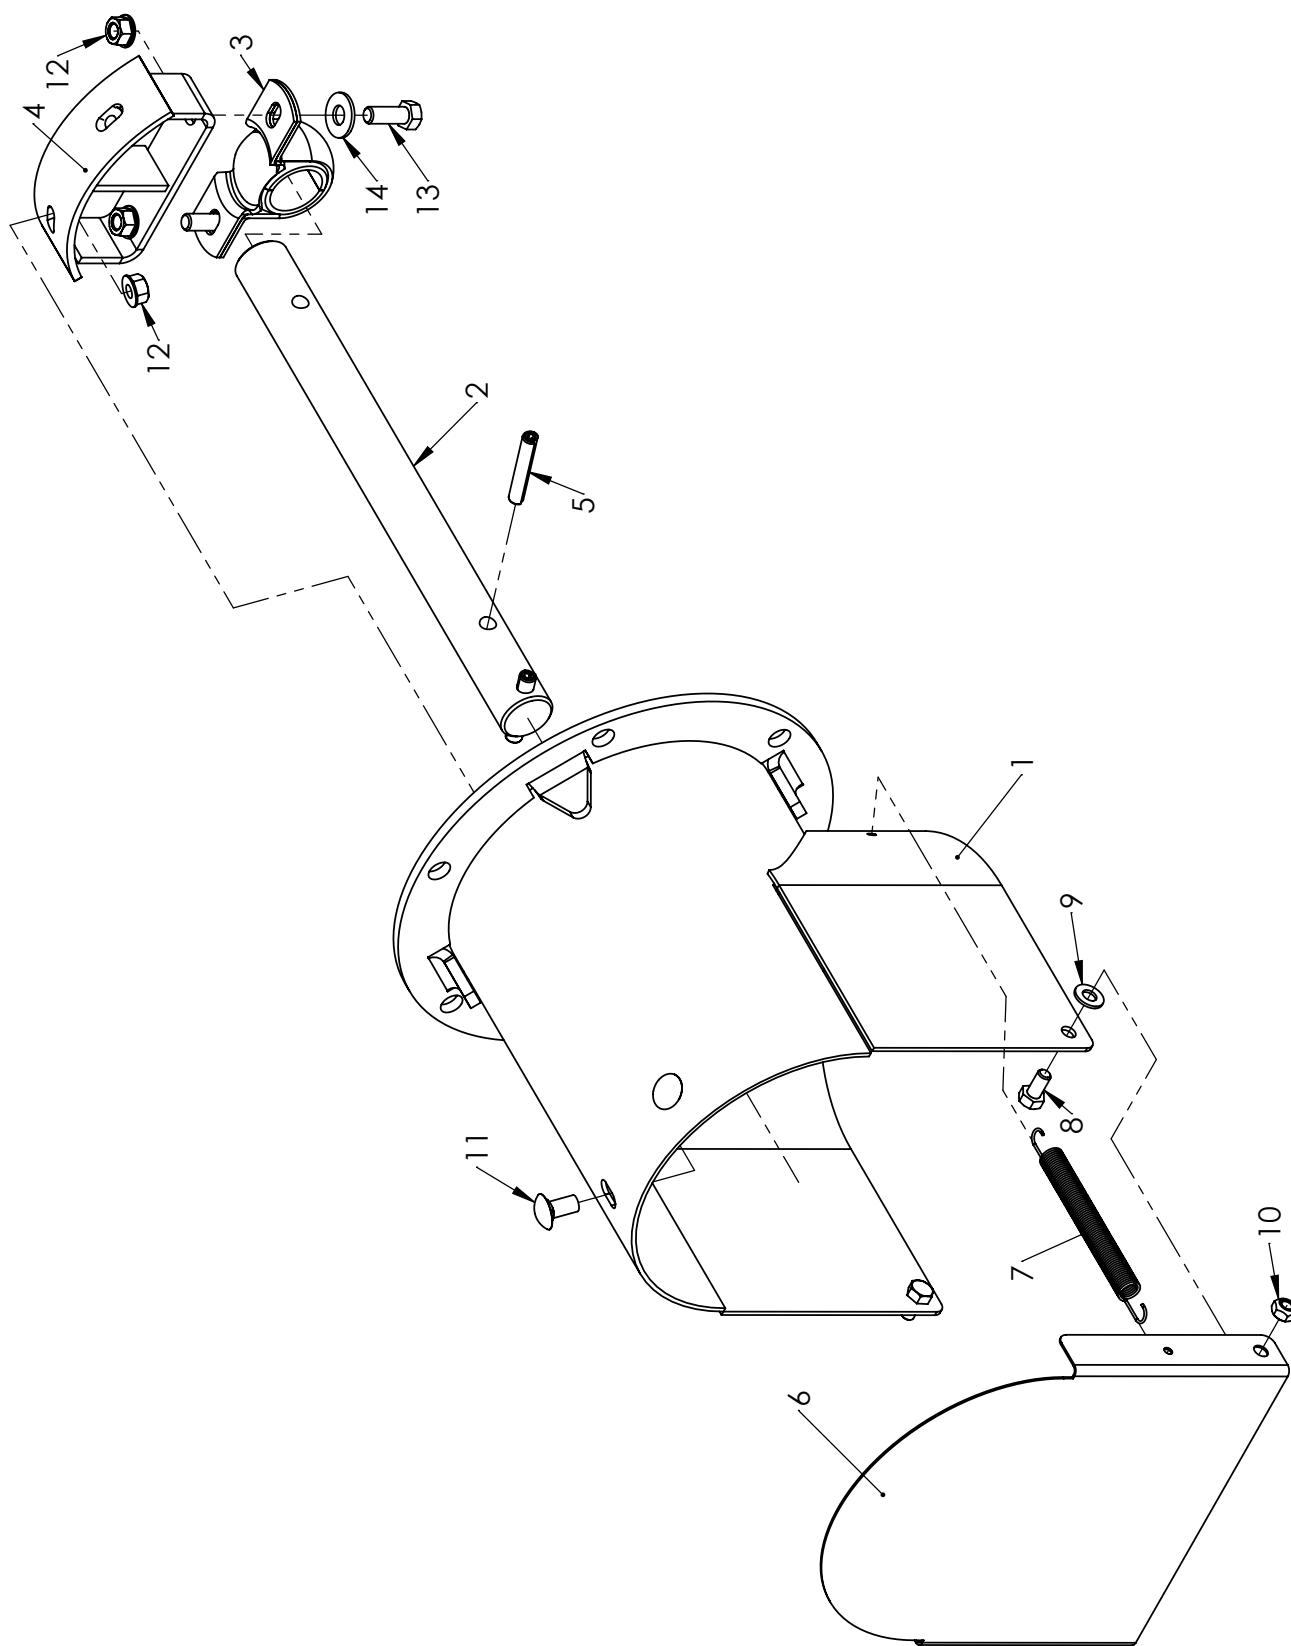


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	611400	HOOD WLDT, 8"	1
2	583690	SHAFT, COUPLER	1
3	583020	BEARING, 1.25 SPLIT	1
4	165020	BRACKET WLDT,	1
5	143812432	PIN, .375 X 2 SLT SPRING	2
6	611410	DOOR, HOOD 8"	1
7	100750	SPRING, EXTENSION	2
8	006880	BOLT, HHCS 5/16-18x5/8 GR5 ZN	2
9	022920	WASHER, FLAT 5/16 STD	2
10	025670	NUT, LOCK 5/16-18 HEX FLG	2
11	032840	BOLT, CRG 3/8-16 x 3/4 SSN Gr5 ZN	2
12	020180	NUT, LOCK 3/8-16 Gr5 ZN HEX FLG	4
13	012260	BOLT, HHCS 3/8-16 X 1	2
14	021190	WASHER, FLAT 3/8 STD	2
*	614210	SPOUT, RUBBER HOOD (NOT SHOWN)	1

 AIR SYSTEM ASSEMBLY

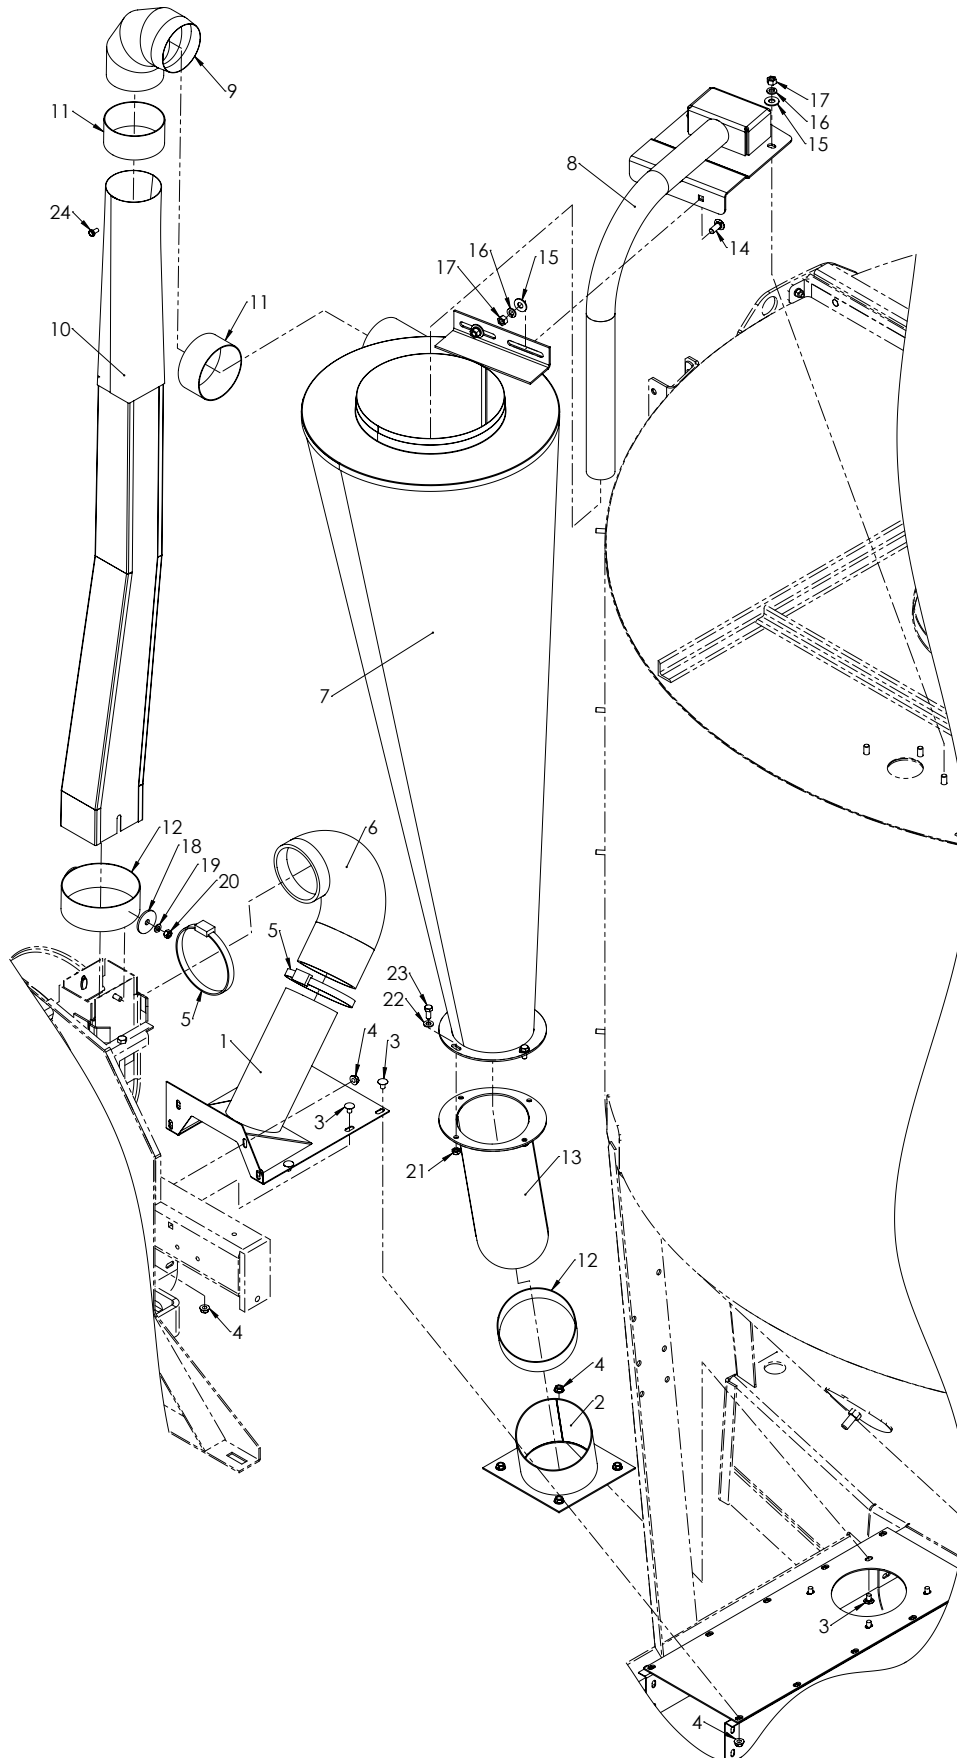


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	560130	ANGLE WLDT,	1
2	366160	COVER WLDT,	1
3	169340	BOLT, CRG 5/16-18 X .50 SSN GR 2 ZN	14
4	020190	NUT, LOCK 5/16-18 GR5 ZN HEX FLG	14
5	205920	CLAMP, 4-1/8 X 5	2
6	205910	ELBOW, BLOWER	1
7	584140	CYCLONE WLDT, DUST	1
8	584110	BRACKET WLDT,	1
9	188391	ELBOW, 4" -90	1
10	610780	TUBE WLDT,VERTICAL	1
11	185880	BAND, RUBBER	2
12	254160	BAND, RUBBER	2
13	610850	TUBE WLDT, LOWER	1
14	170530	BOLT, CRG 3/8-16 X 1"	2
15	021190	WASHER, FLAT 3/8 STD	5
16	021180	WASHER, LOCK 3/8	5
17	027260	NUT, HEX 3/8-16 GR5 ZN	5
18	012270	WASHER, FLAT	2
19	023620	WASHER, LOCK 5/16 ZN 5	2
20	023630	NUT, HEX 5/16-18 GR5 ZN	2
21	025670	NUT, LOCK 5/16-18 HEX FLG	4
22	022920	WASHER, FLAT 5/16 STD	4
23	012140	BOLT, HEX, 5/16" X 3/4" Z5	4
24	205940	SCREW, TEK 8-18 X 1/2 SELF DRILLING ZN	15

 SCALE ARM ASSEMBLY

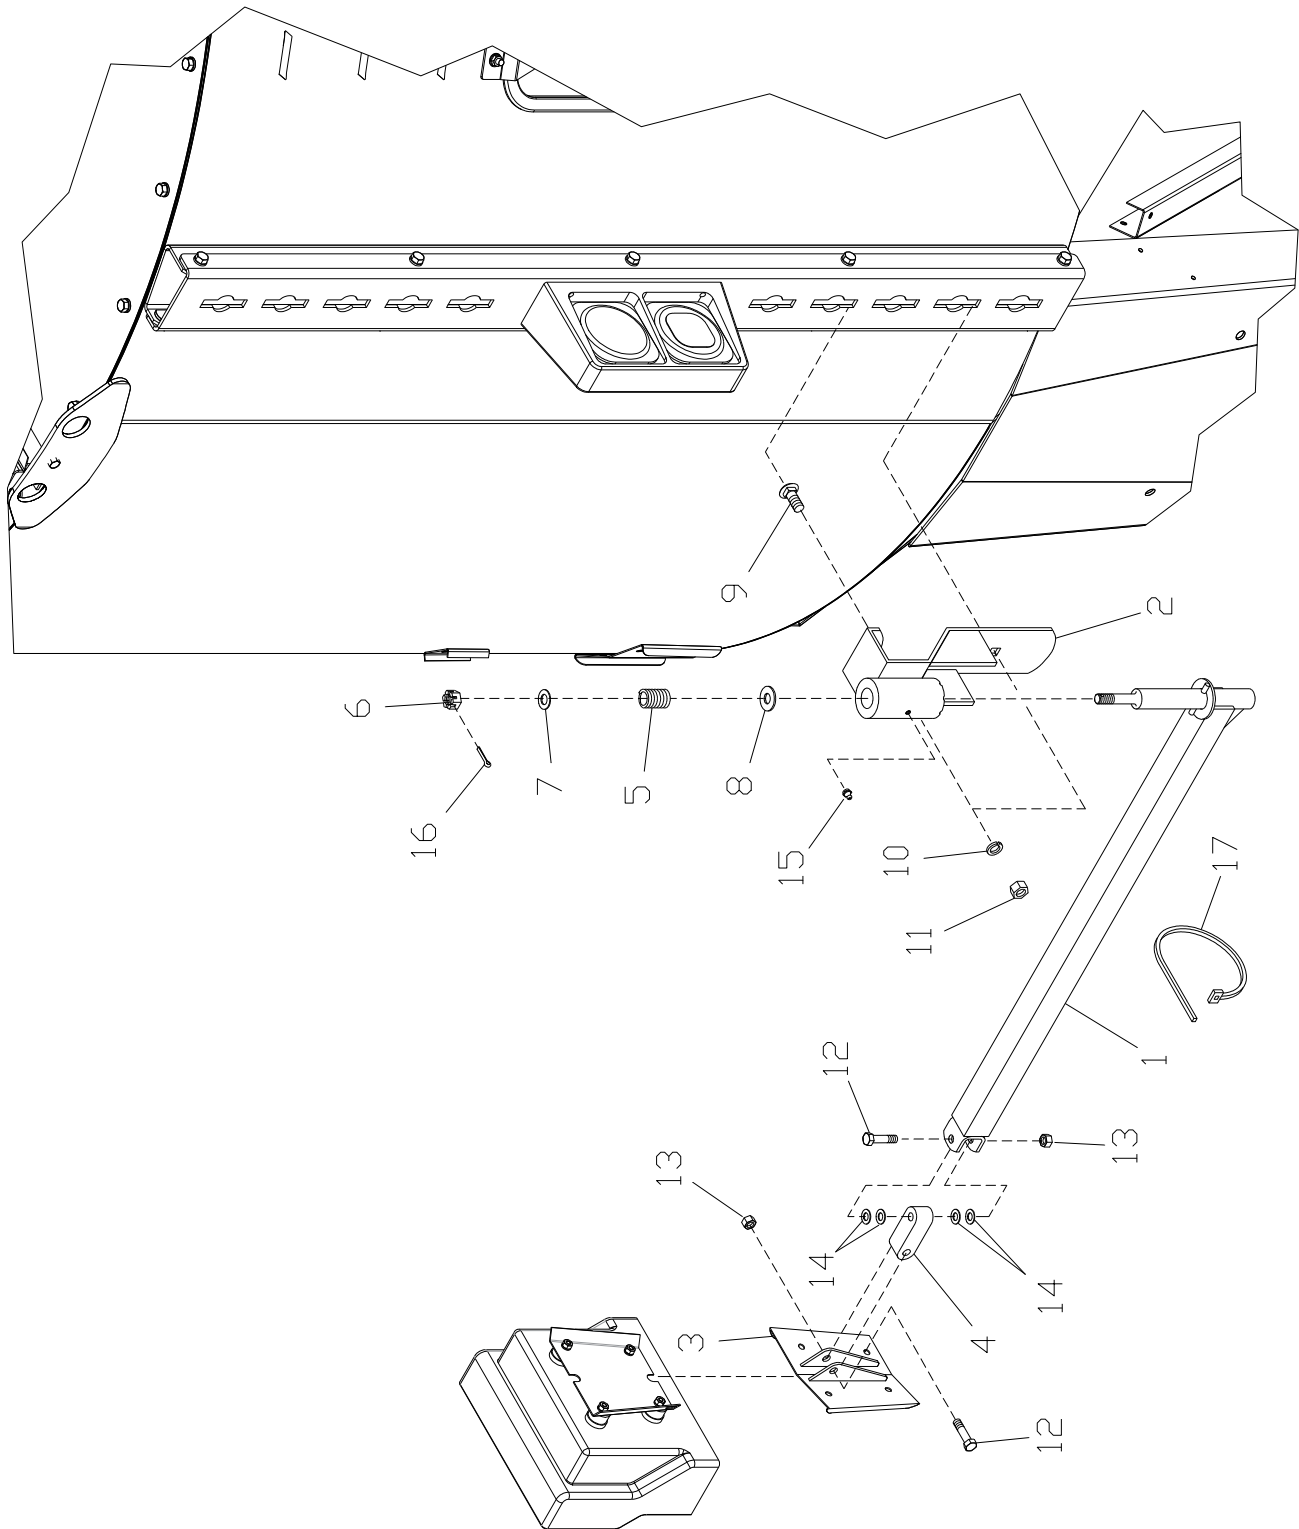


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	529560	ARM WLDT, SCALE PIVOT	1
2	529600	BRACKET WLDT, SCALE PIVOT MOUNT	1
3	529630	BRACKET, WLDT SCALE MTG	1
4	400800	BLOCK, PIVOT	1
5	342890	SPRING, COMPRESSION 1 X 1.75	1
6	215160	NUT, HEX SLOTTED 1/2-20	1
7	I120396	WASHER, FLAT 1/2 SAE	1
8	005200	WASHER, FLAT 1/2 STD ZN	1
9	E096046	BOLT, CRG 1/2-13 X 1-1/2	2
10	005370	WASHER, LOCK 1/2	2
11	005360	NUT, HEX 1/2-13	2
12	037790	BOLT, HHCS 3/8-16 X 2 GR5	2
13	023060	NUT, LOCK 3/8 HEX 2-WAY	2
14	I120394	WASHER, FLAT 3/8 SAE	4
15	115590	FITTING, 1/4-28 STRAIGHT SELF-TAPPING	1
16	020700	PIN, COTTER 5/32 X 1	1
17	149670	TIE, NYLON CABLE 3/16 X 11	6

 CONTROL BOX & WIRE HARNESS ASSEMBLY

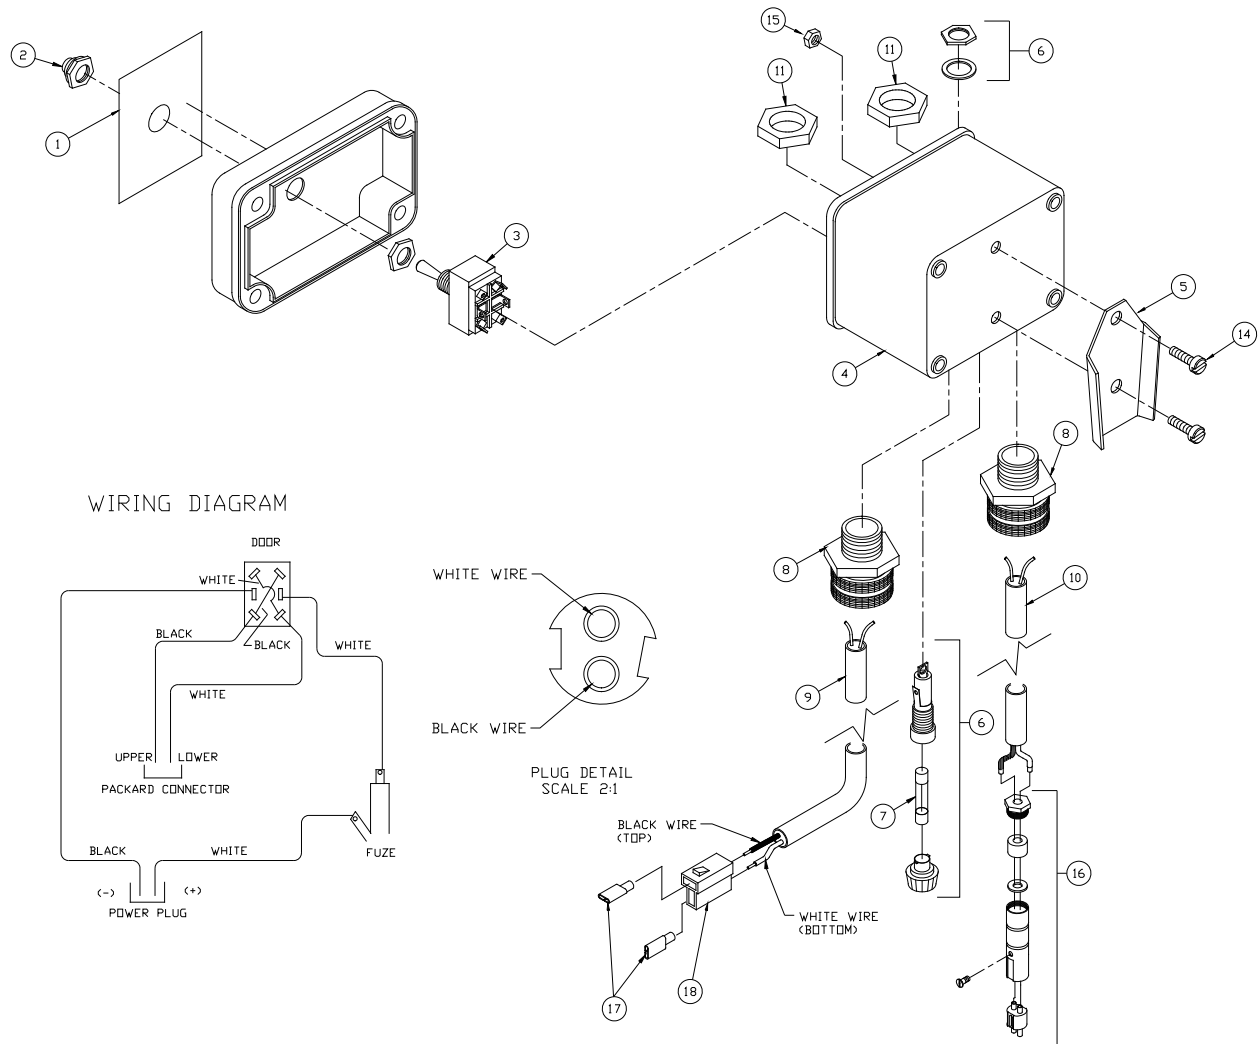


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	591820	DECAL, ACTUATOR CONTROL BOX	1
2	212470	SEAL, TOGGLE SWITCH	1
3	209590	SWITCH, TOGGLE MOMENTARY DPDT	1
4	591830	ENCLOSURE, REMOTE	1
5	346690	BRACKET, MOUNTING	1
6	W154550016	FUZE HOLDER	1
7	E292002	FUZE	1
8	346750	CONNECTOR, CORD .25 - .31	2
9	486650	WIRE, 16/2 GPT/300V NEO B/W	-
10	486650	WIRE, 16/2 GPT/300V NEO B/W	-
11	209210	LOCKNUT, 1/2 CONDUIT	2
12	962680	WIRE, 16 GA. WHITE	-
13	962690	WIRE, 16 GA. BLACK	-
14	021240	SCREW, TRUSS HEAD 1/4"-20 X 1/2"	2
15	023270	NUT, LOCK 1/4"-20 HEX FLANGE	2
16	155220	CONNECTOR, POWER CORD	1
17	E192016	TERMINAL, FEMALE 14-16 GA.	2
18	E376001	INSULATOR, CONNECTOR MALE PACKARD	1

 TRACTOR HYDRAULIC VALVES ASSEMBLY

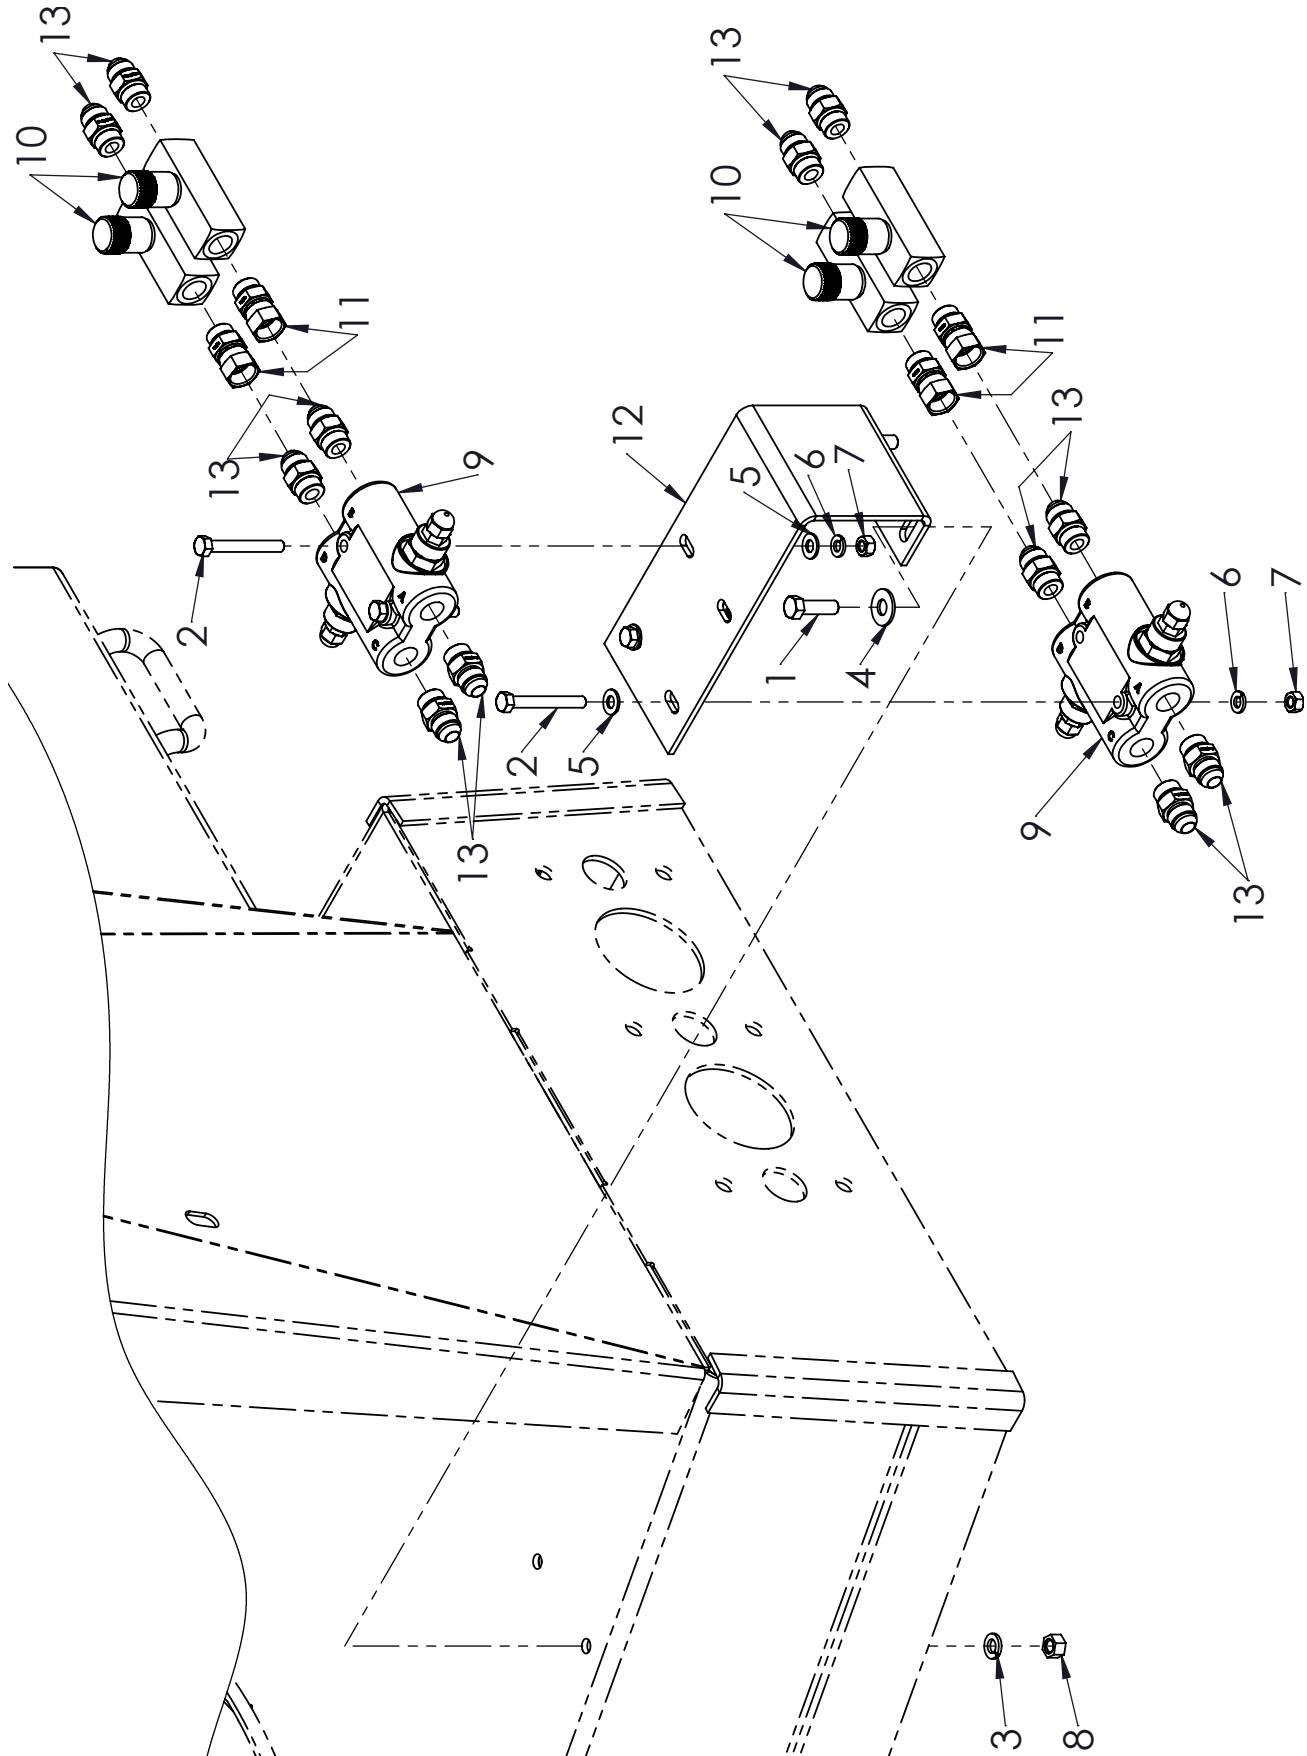


ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	006690	BOLT, HHCS 3/8-16X1-1/4 GR5 ZN	2
2	009800	HBOLT 0.3125-18X2.5X0.875-N	4
3	021180	WASHER, LOCK 3/8	2
4	021190	WASHER, FLAT 3/8 STD	2
5	022920	WASHER, FLAT 5/16 STD	4
6	023620	WASHER, LOCK 5/16 ZN 5	4
7	023630	NUT, HEX 5/16-18 GR5 ZN	4
8	027260	NUT, HEX 3/8-16 GR5 ZN	2
9	591920	VALVE, DUAL RELIEF	2
10	591930	VALVE, FLOW CONTROL	4
11	592520	ADAPTER, STR SWIVEL	4
12	593990	BRACKET, HYD VALVE	1
13	MP09.74155	CONNECTOR - 37D FL	12

 HYDRAULIC MANIFOLD ASSEMBLY

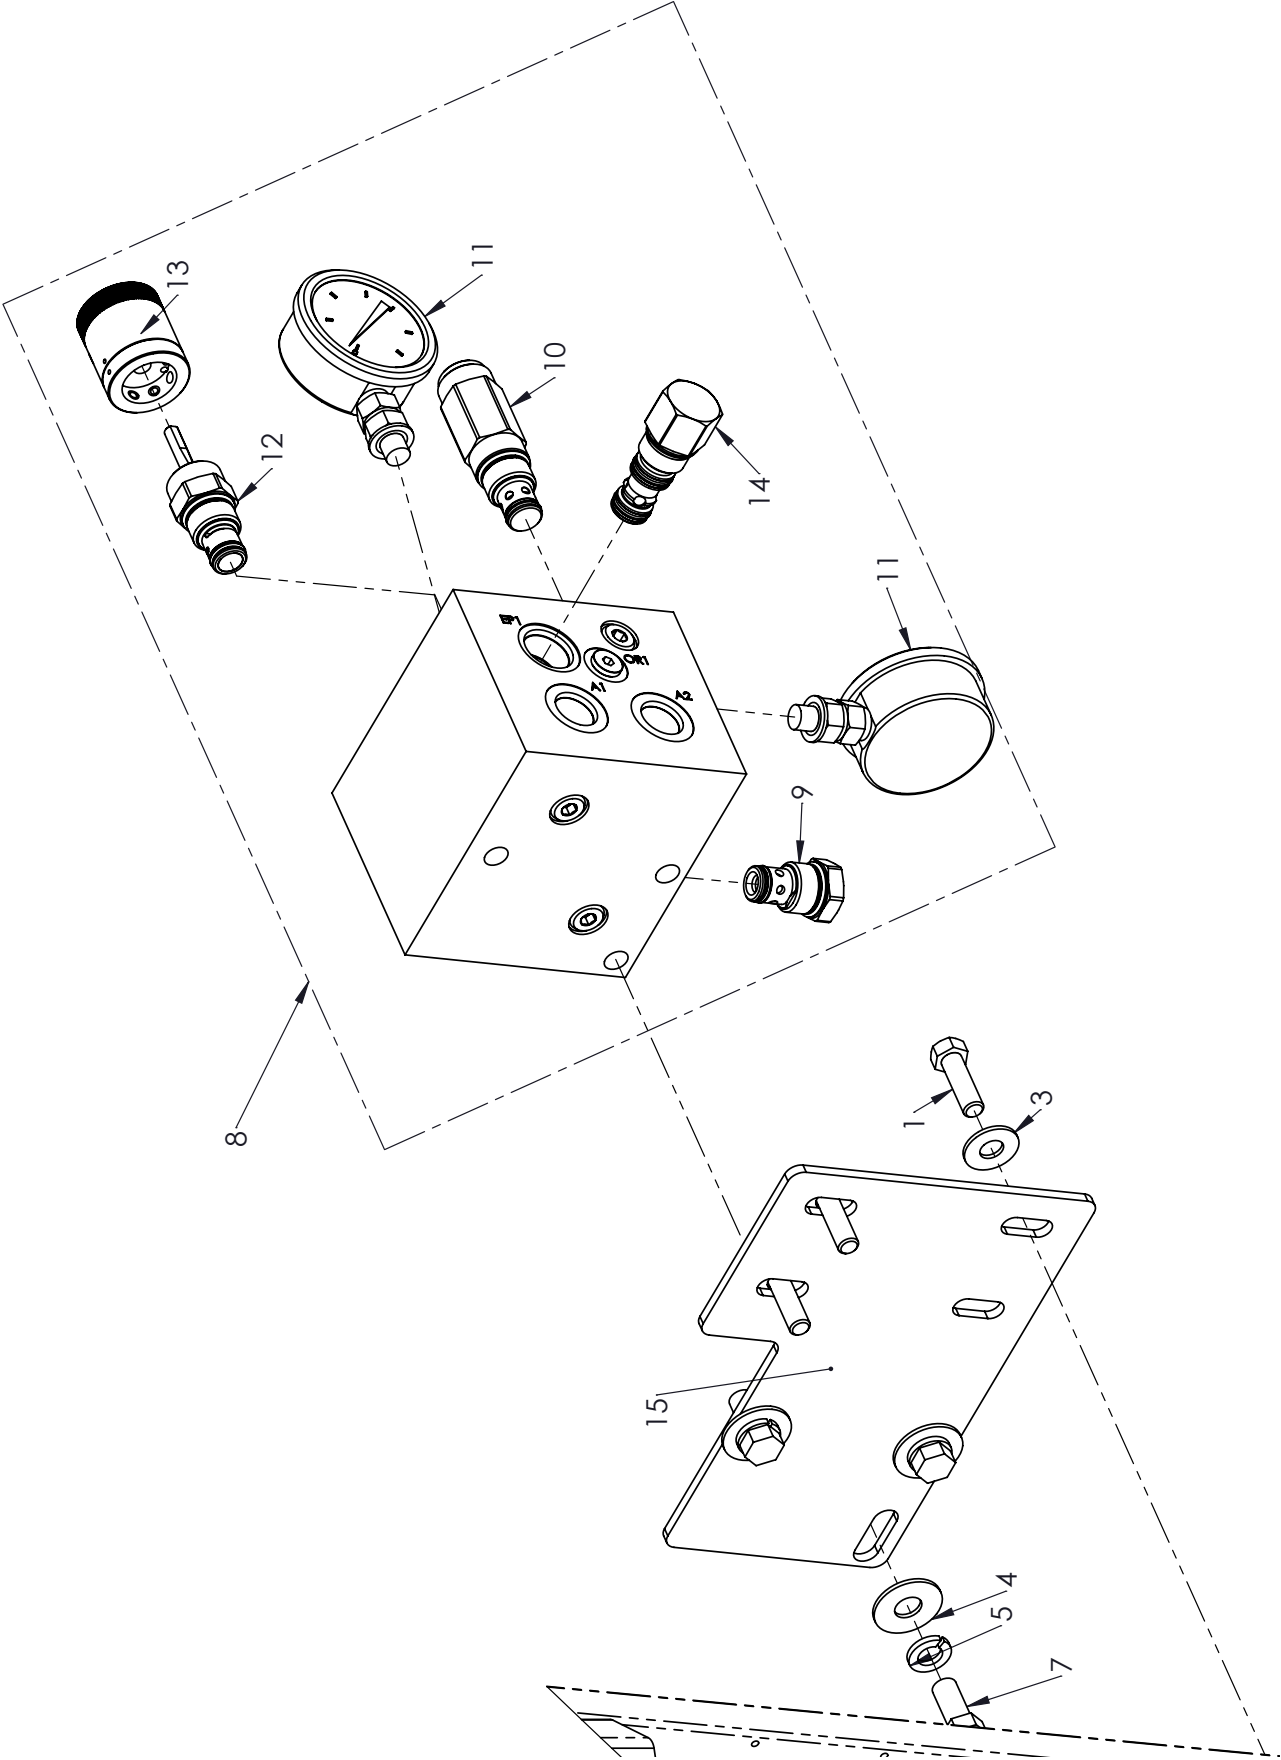

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	006690	BOLT, HHCS 3/8-16x1-1/4 GR5 ZN	3
2	021180	WASHER, LOCK 3/8	3
3	021190	WASHER, FLAT 3/8 STD	3
4	023980	WASHER, FLAT 7/16 STD	3
5	023990	WASHER, LOCK 7/16"	3
6	027260	NUT, HEX 3/8-16 GR5 ZN	3
7	128000	BOLT HHCS 7/16-14 X 1	3
8	610800	MANIFOLD ASSY, HYD.	1
9	594870	#10 CHECK VALVE XXX PSI	1
10	594880	#10 RELIEF, DIFFERENTIAL AREA	1
11	MP07.17866	2-1/2 INCH, STEM MOUNT, XXX PSI	2
12	612100	#10 CONTROL, MANUAL	1
13	612090	KNOB, ROTARY 10 POSITION	1
14	612110	#10 LOGIC ELEMENT	1
15	612150	MOUNT PLATE,	1

 
SELF-CONTAINED HYDRAULIC SCHEMATIC

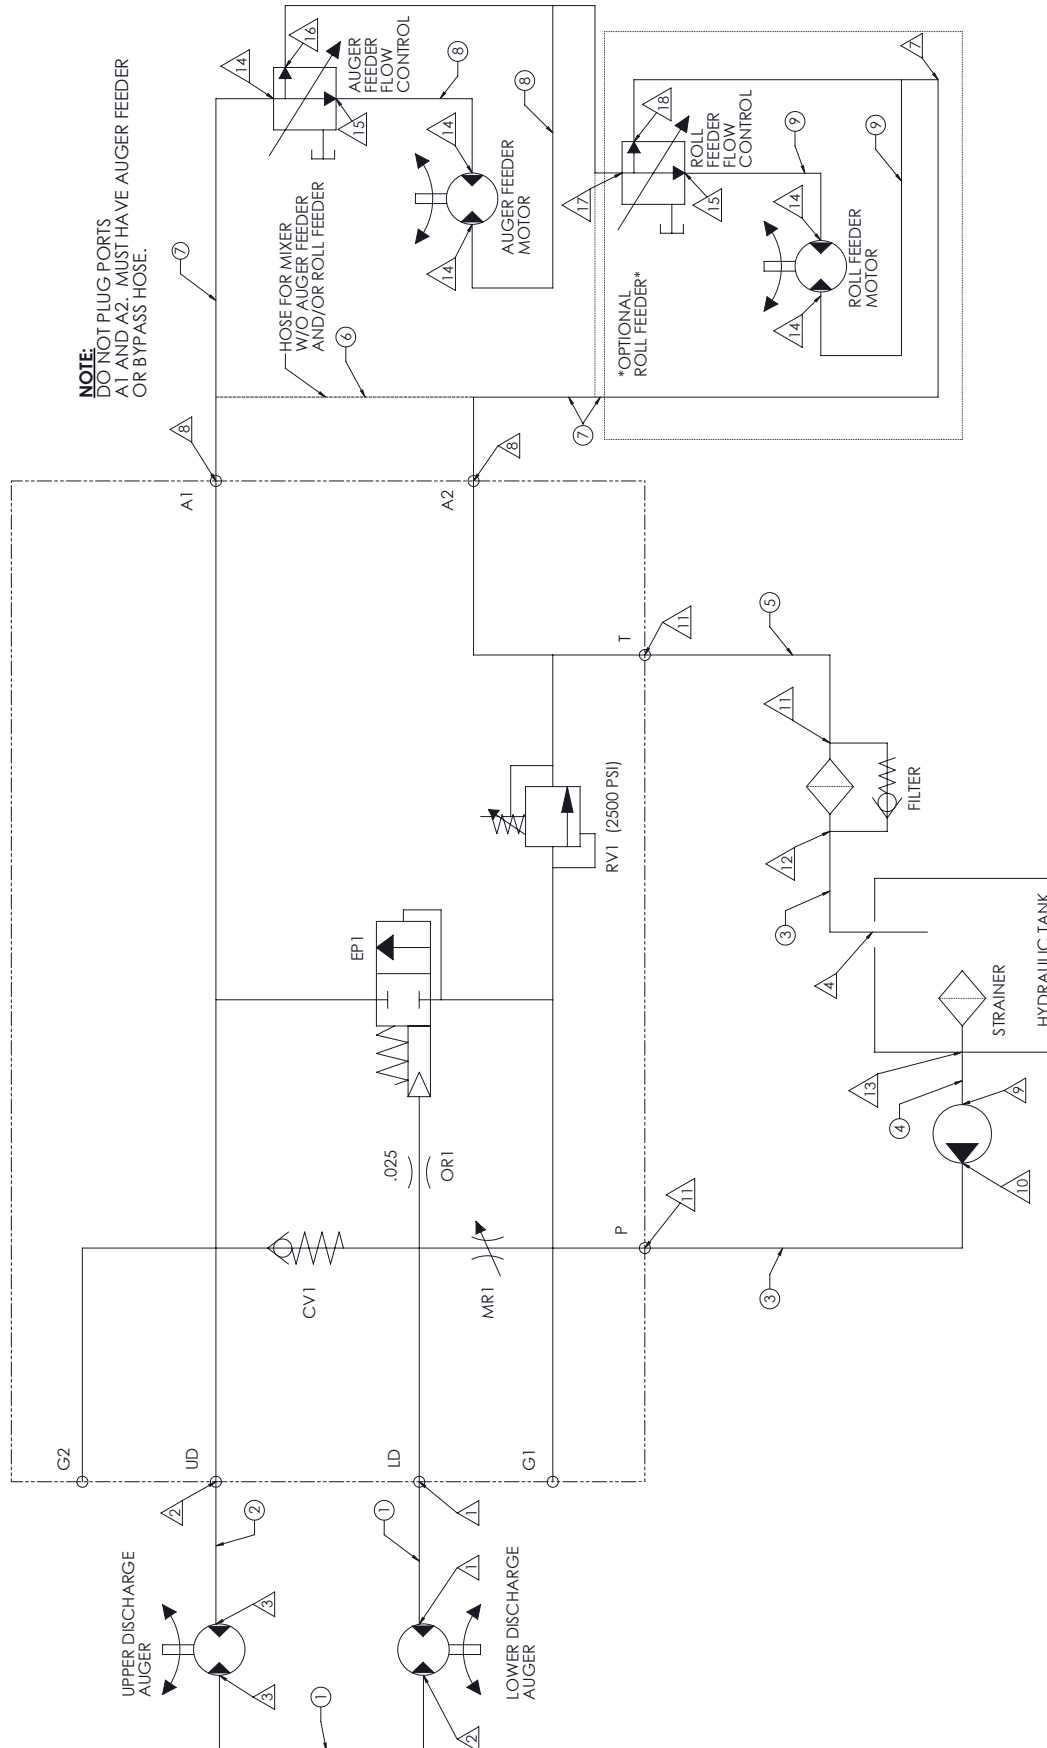

FITTINGS			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	MP907670	FITTING, HYD -10MJIC X -10MORB	2
2	591990	FITTING, HYD X-LONG -10MJIC X -10MORB	1
3	I2185062	FITTING, HYD STR -10MJIC X -10MORB	2
4	551510P	FITTING, HYD 90° -12MJIC X -12MORB	1
8	MP09.74155	FITTING, HYD ADPT -8MORB X -8MJIC	2
9	585310	FITTING, HYD BEAD -24MORB X -20HOSE	1
10	506540	FITTING, HYD 90° -12MJIC X -16MORB	1
11	MP17.00388	FITTING, HYD 45° -12MORB X -12MJIC	3
12	MP09.74127	FITTING, HYD STR -12MJIC X -12MORB	1
13	585400	FITTING, HYD 90° BEAD -16MORB X -20HOSE	1
14	MP32.02101	FITTING, HYD STR -8MJIC X -10MORB	5
15	MP32.03794	FITTING, HYD 90° -10MORB X -8MJIC	2
16	585150	FITTING, TEE -8MJIC X -8MJIC X -10MORB	1
17	590400	FITTING, HYD 90° -10MORB X -8FMJIC	1
18	590650	FITTING, TEE -10MORB X -8MJIC X -8MJIC	1

HOSES			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	585600	HOSE ASSY, 5/8 X 96" -10FJIC(2)	2
2	585590	HOSE ASSY, 5/8 X 200" -10FJIC(2)	1
3	585360	HOSE ASSY, 3/4 X 30" -12FJIC(2)	2
4	613240	HOSE, SUCTION 1-1/4 X 38"	1
5	585690	HOSE ASSY, 3/4 X 72" -12FJIC(2)	1
6	573780	HOSE ASSY, 1/2 X 20" -8FJIC(2)	1
7	591960	HOSE ASSY, 1/2 X 126" -8FJIC(2)	2
8	585180	HOSE ASSY, 1/2 X 20" -8FJIC(45°) X -8FJIC	2
9	580960	HOSE ASSY, 1/2 X 56" -8FJIC(2)	2

 TRACTOR HYDRAULIC SCHEMATIC

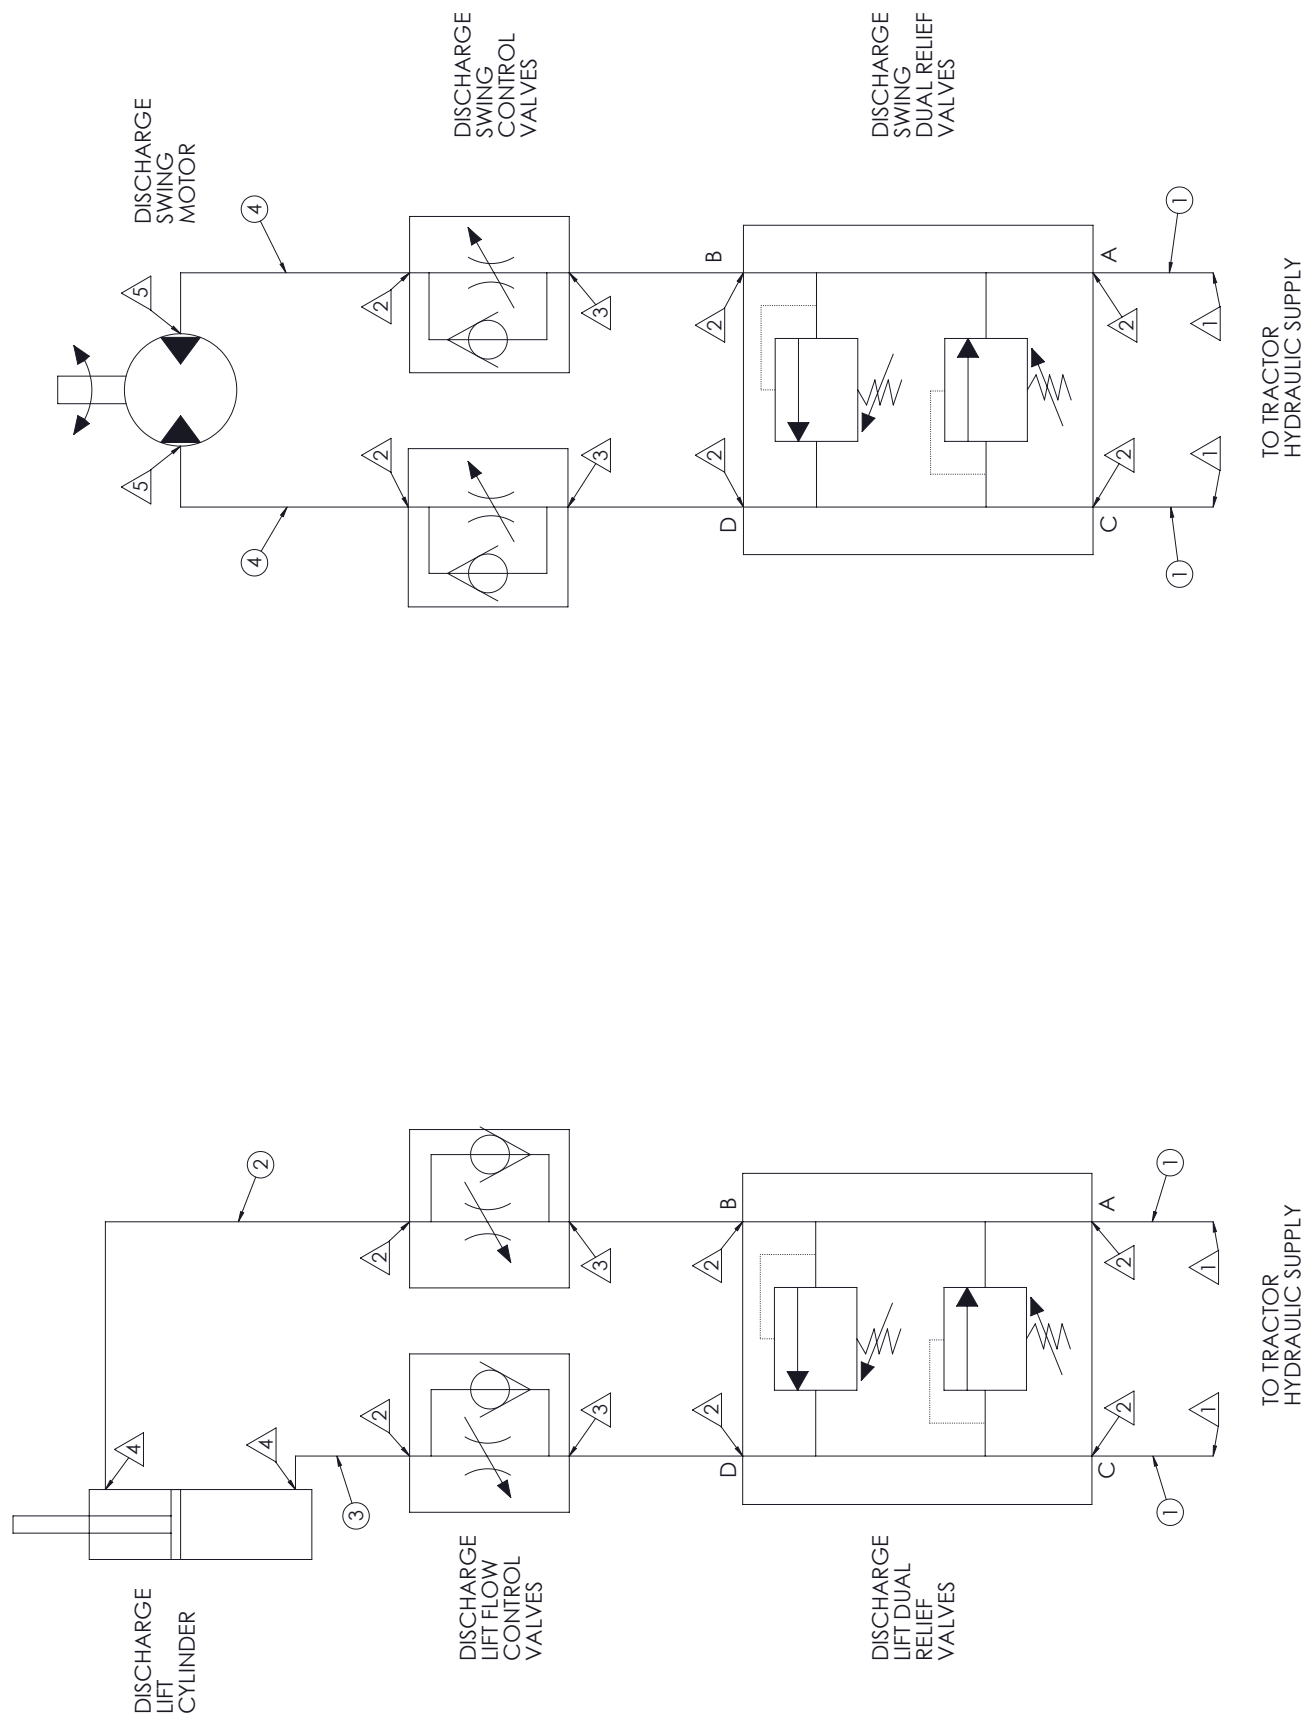


FITTINGS			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	MP09.74158	FITTING, QUICK CONN. -8FORB	4
2	MP09.74155	FITTING, HYD ADPT -8MORB X -8MJIC	12
3	592520	FITTING, HYD STR -8MORB X -8FJIC	4
4	530210	FITTING, HYD 90° -8MJIC X -8MORB	2
5	MP32.03794	FITTING, HYD 90° -10MORB X -8MJIC	2

HOSES			
ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
1	591950	HOSE ASSY, 1/2 X 155" -8MORB X -8FJIC	4
2	585570	HOSE ASSY, 1/2 X 96" -8FJIC(2)	1
3	591960	HOSE ASSY, 1/2 X 84" -8FJIC(2)	1
4	580950	HOSE ASSY, 1/2 X 63" -8FJIC(2)	2

 NOTES:



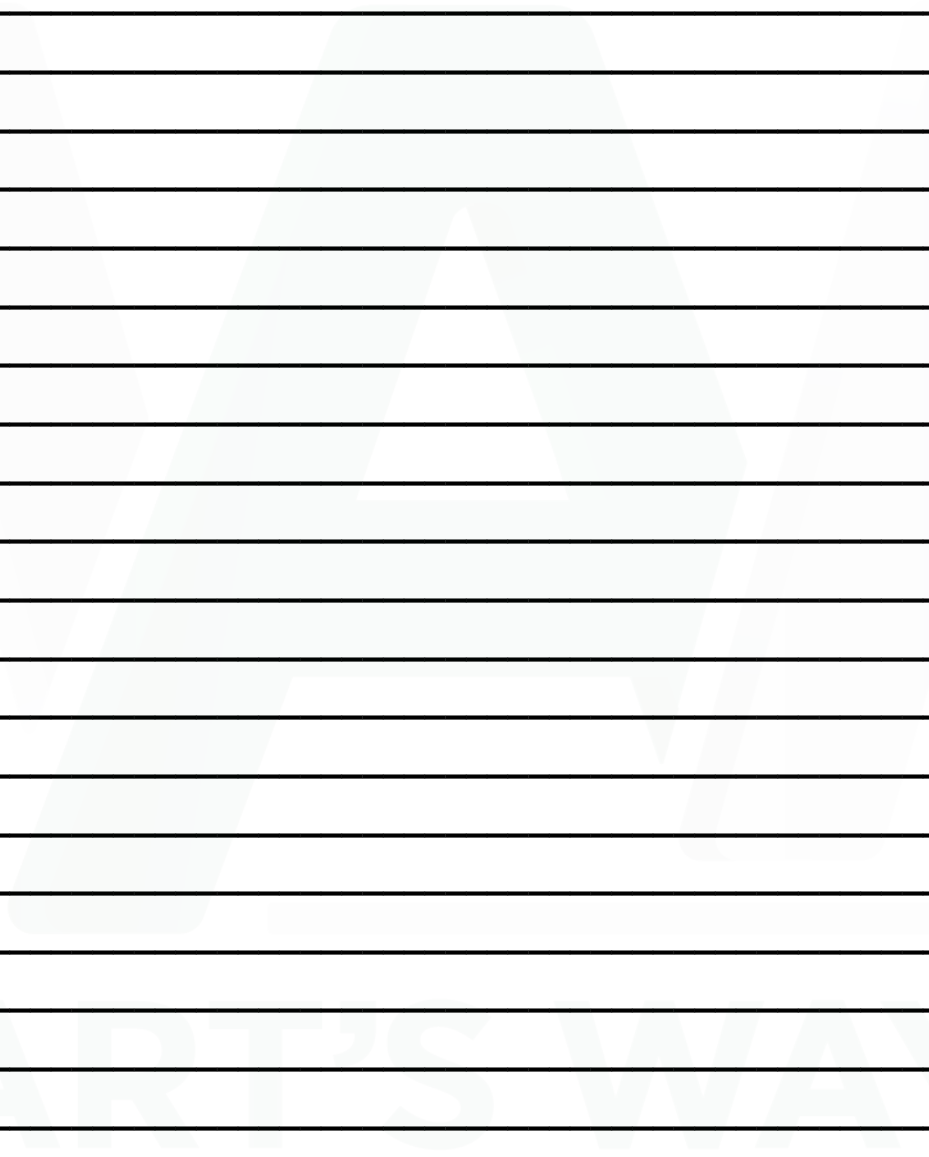

NOTES:

NOTES:



Art's Way Manufacturing TECHNICAL MANUALS

Manuals are available from your local dealer or Art's Way Manufacturing for the operation, service, and repair of your machine. For prompt convenient service, contact your local dealer for assistance in obtaining the manuals for your machine.

Manuals are also available at WWW.ARTSWAY.COM free to download for your convenience.

Always give the Machine Name, Model, and Serial Number so your local dealer can provide the correct manuals for your machine.

Art's Way Manufacturing reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Except as expressly authorized, no part of this manual may be reproduced, copied, transmitted, or disseminated, in any storage medium, for any purpose without the express prior written consent of Art's Way Manufacturing

Art's Way Manufacturing
Armstrong, Iowa, 50514, (712) 208-8467.

WWW.ARTSWAY.COM